

## INSTALLATION

### 1. CLEAN BODY MOUNTING SURFACE

- (a) Using a heat light, heat the body mounting surface between 40 to 60°C (104 to 140°F).

**NOTICE:**

**Do not heat the body excessively.**

- (b) Remove the double-sided tape from the body.
- (c) Wipe off the stains with cleaner.

### 2. INSTALL MOULDING

- (a) Using a heat light, heat the body and moulding.

**Heating Temperature:**

Item	Temperature
Body	40 to 60°C (104 to 140°F)
Moulding	20 to 30°C (68 to 86°F)


**NOTICE:**

**Do not heat the body and moulding excessively.**

- (b) Remove the moulding peeling paper from the face of the moulding.

**NOTICE:**

**After removing the peeling paper, keep the exposed adhesive away from dirt and other contaminants.**

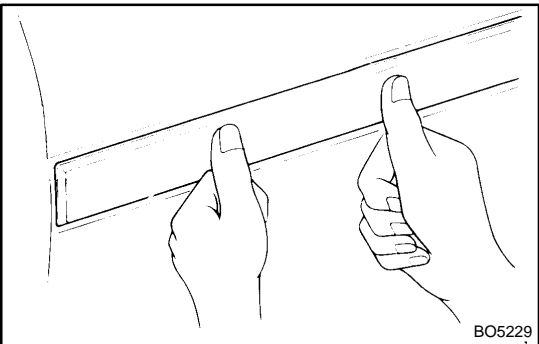

- (c) Align the bosses with their corresponding holes on the body, and press the moulding firmly.

**NOTICE:**

**Do not apply excessive force onto the moulding, but steady pressure with your thumbs.**