

INSTALLATION

1. CLEAN CONTACT SURFACE OF BODY

- (a) Using a heat light, heat the body surface 40 to 60 °C (104 to 140 °F).

NOTICE:


Do not heat the body excessively.

- (b) Using a knife, cut away any rough areas on the body.

NOTICE:

Be careful not to damage the body.

- (c) Wipe off stains with cleaner.

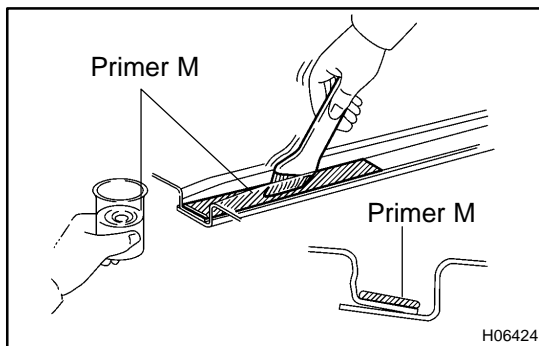

2. COAT CONTACT SURFACE OF BODY WITH PRIMER "M"

Using a brush, coat the body surface except the front and rear end with Primer M as shown in the illustration.

Front end: 23 mm (0.91 in.) + 8 mm (0.31 in.) or less

Rear end: 70 mm (2.76 in.) + 12 mm (0.47 in.) or less

NOTICE:

- Let the primer coating dry for 3 minutes or more.
- Do not coat to the adhesive.
- Do not keep any of the opened Primer M for later use.

3. INSTALL NEW MOULDING

- (a) Using a heat light, heat the body and moulding.

Body: 40 to 60 °C (104 to 140 °F)

Moulding: 20 to 30 °C (68 to 86 °F)

NOTICE:

Do not heat the moulding excessively.

- (b) Lift the moulding release sheet from face of the moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.

- (c) Install the moulding.