


INSTALLATION

1. INSTALL QUARTER OUTSIDE MOULDING

- (a) Clean the body mounting surface.
 - (1) Using a heat light, heat the body mounting surface to 40 to 60°C (104 to 140°F).
 - (2) Remove the protector from the body.
 - (3) Wipe off the stains with cleaner.

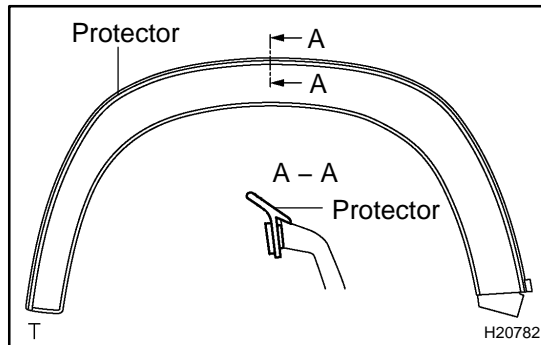

- (4) Install a new protector as shown in the illustration.
- (b) Install the quarter outside moulding.
 - (1) Using a heat light, heat the body and moulding.
Body: 40 to 60°C (104 to 140°F)
Moulding: 20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and moulding excessively.

- (2) Remove the moulding release sheet from the face of the moulding.

NOTICE:

When removing the moulding release sheet, be careful that dirt or dust will not adhere to the face of the moulding.

- (3) Align the bosses with their corresponding holes on the body and press the moulding firmly.

NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.

- (4) Install the 6 screws.


2. w/ Rear mudguard:

INSTALL REAR MUDGUARD

Install the rear mudguard with the 4 screws.

3. INSTALL FRONT FENDER OUTSIDE MOULDING

- (a) Clean the body mounting surface.
 - (1) Using a heat light, heat the body mounting surface to 40 to 60°C (104 to 140°F).
 - (2) Remove the protector from the body.
 - (3) Wipe off the stains with cleaner.

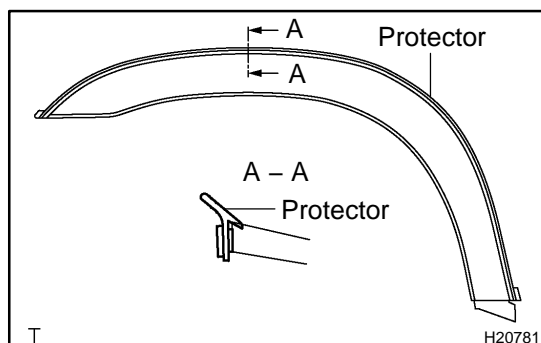

- (4) Install a new protector as shown in the illustration.
- (b) Install the front fender outside moulding.
 - (1) Using a heat light, heat the body and moulding.
Body: 40 to 60°C (104 to 140°F)
Moulding: 20 to 30°C (68 to 86°F)

Body: 40 to 60°C (104 to 140°F)
Moulding: 20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and moulding excessively.

- (2) Remove the moulding release sheet from the face of the moulding.

NOTICE:

When removing the moulding release sheet, be careful that dirt or dust will not adhere to the face of the moulding.

- (3) Align the bosses with their corresponding holes on the body, and press the moulding firmly.


NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.


- (4) Install the 6 screws.

4. w/ Rear mudguard:**INSTALL FRONT MUDGUARD**

Install the front mudguard with the 4 screws.

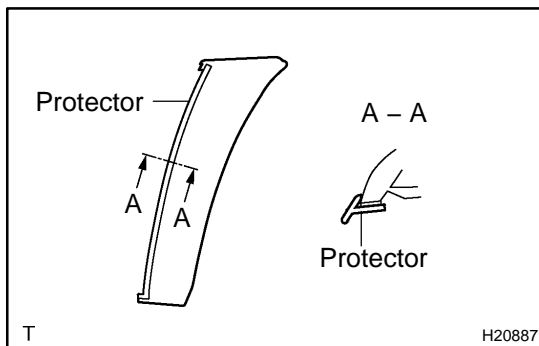**5. Resin bumper type:****INSTALL FRONT BUMPER EXTENSION**

- (a) Install the new protector as shown in the illustration.

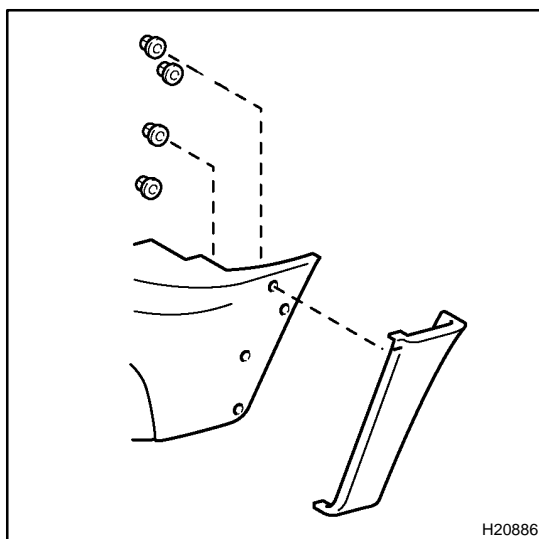

- (b) Install the front bumper extension with the 4 nuts.
Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)