



## INSTALLATION

### 1. INSTALL NEW GASKET

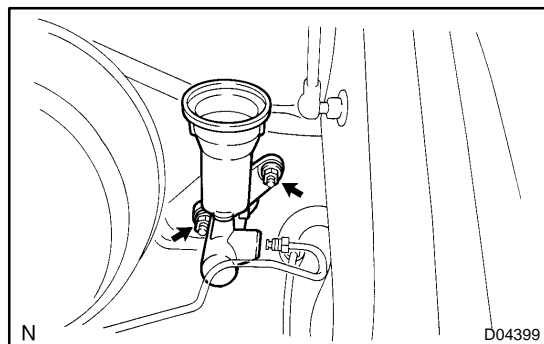

### 2. INSTALL MASTER CYLINDER WITH 2 MOUNTING NUTS

Torque: 14 N·m (143 kgf·cm, 10 ft·lbf)

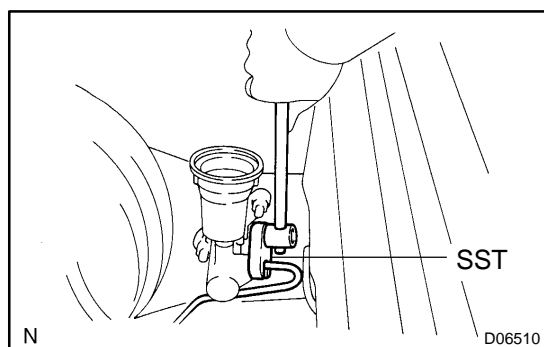

### 3. CONNECT CLUTCH LINE TO MASTER CYLINDER

Using SST, connect the clutch line.

SST 09023-00101

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

### 4. INSTALL CLEVIS PIN, WAVE WASHER AND CLIP

### 5. FILL CLUTCH RESERVOIR WITH BRAKE FLUID AND BLEED CLUTCH SYSTEM

### 6. ADJUST CLUTCH PEDAL (See page [CL-2](#))

### 7. CHECK FOR LEAKS