

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

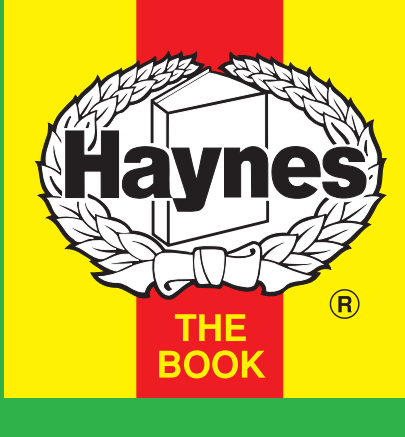

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system

100 S4, 4.2

1993 to 1994

Type		ABH 206kW
Capacity (cm ³) / number of cylinders		4172 / 8
Compression ratio / pressure	bar	10.6 / ≥7.5
Oil pressure	bar	—
Oil temperature	°C	—
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order		1-5-4-8-6-3-7-2
No 1 cylinder position		PER
Thermostat opening temperature	°C	87 to 102
Radiator cap pressure	bar	1.2 to 1.5

Fuel system

100 S4, 4.2

1993 to 1994

Idle speed - manual [auto]	rpm	690 to 750 N/A
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Bosch
Type / ref		Motronic
Main jet / needle		—
Injection pressure	bar	3.4 to 3.7
Pump pressure	bar	4.0 to 4.3
Octane rating	RON	98[U]

Ignition system

100 S4, 4.2

1993 to 1994

Type		Motronic
Ignition coil		Bosch 1 coil per bank
Primary resistance	ohms	0.5 to 1.0
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Bosch
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	N/A
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK
Type		BUR6EFSZ
Electrode gap	mm	0.80±0.10

Electrical system

100 S4, 4.2

1993 to 1994

Battery	V / CC / RC	12 / _
Alternator voltage / full load current / engine rpm		12.5 to 14.5 / _ / 2000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear

100 S4, 4.2

1993 to 1994

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	2.0

Tyres		
Saloon	Size	215/60x15: 245/40x17
Estate / Van	Size	215/60x15: 245/40x17
Pressure - front / rear - Saloon	bar	2.4 / 2.4 ¹
- Estate / Van	bar	2.4 / 2.4 ¹

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[+15'+5'-10']
Camber		-50'+20'-40'
Castor		+55'±40' N/A
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[+10'±10']
Camber		-15'±15'

Torque wrench settings

100 S4, 4.2

1993 to 1994

Cylinder head - stage 1	Nm	40 N
- stage 2	Nm	60
Cylinder head - stage 3	Nm	+ 90°
- stage 4	Nm	+ 90°
Big-end bearings	Nm	—
Main bearings	Nm	—
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	60 + 90° N
Front hubs	Nm	200 + 90°
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	30

Capacities


100 S4, 4.2

1993 to 1994

Engine oil & filter	litres	7.5
Gearbox - 4-speed [5-speed]	litres	3.5 ²
Automatic transmission - refill	litres	—
Final drive	litres	1.5
Cooling system	litres	8.5
Fuel tank	litres	80

Notes and Illustrations

¹245/40x17: 2.5 / 2.5
²+ 0.1 special gear additive

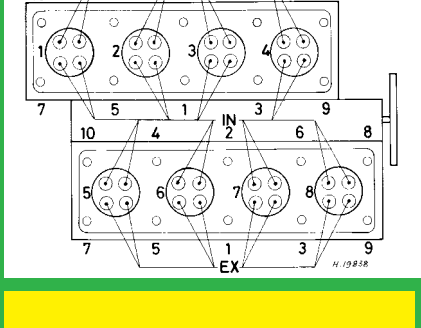

4172 cm³