

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

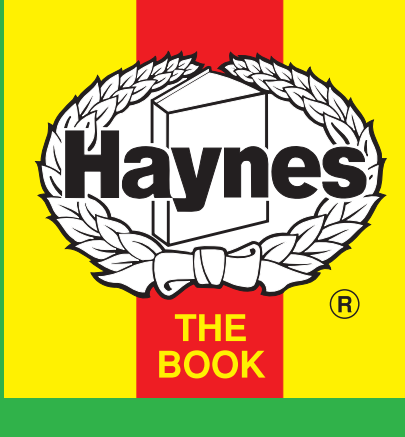

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemBX 19i CAT1991 to 1993

Type		XU9JAZ (DKZ) 83kW US83
Capacity (cm³) / number of cylinders		1905 / 4
Compression ratio / pressure	bar	9.18 / _
Oil pressure	bar	[3.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20±0.05
Valve clearance - exhaust	mm	0.40±0.05
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	82
Radiator cap pressure	bar	1.0

Fuel systemBX 19i CAT1991 to 1993

Idle speed - manual [auto]	rpm	850 to 900
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤100
CO2 @ idle speed [3000 rpm] - see page VI	%	≥10.0
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Bosch
Type / ref		Motronic M1.3
Main jet / needle		_
Injection pressure	bar	3.0 to 3.5
Pump pressure	bar	_
Octane rating	RON	95[U]

Ignition systemBX 19i CAT1991 to 1993

Type		DME Motronic
Ignition coil		Ducellier 1 252 6009A
Primary resistance	ohms	_
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		Ducellier
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum		_
Total ignition advance	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Eyquem/Champion
Type		FC52LS / C9YCX
Electrode gap	mm	0.80

Electrical systemBX 19i CAT1991 to 1993

Battery	V / CC / RC	12 / 45Ah
Alternator voltage / full load current / engine rpm		13.5 / 50, 80 / 3650
Starter motor current / voltage - cranking	A / V	220 / _
- locked	A / V	350 / _

Running gearBX 19i CAT1991 to 1993

Brakes -		
Front (min. friction material thickness)	mm	_
Rear (min. friction material thickness)	mm	_

Tyres		
Saloon	Size	185/60x14
Estate / Van	Size	175/65x14
Pressure - front / rear - Saloon	bar	2.2 / 2.2¹
- Estate / Van	bar	2.3 / 2.5

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	0 to -3.0
Camber		0±30'. 4x4: +1°39'±35'
Castor		+2°±35'. 4x4: 0±30'
King pin inclination		+11°58'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	0 to +5.0²
Camber		-1°±20'

Torque wrench settingsBX 19i CAT1991 to 1993

Cylinder head - stage 1	Nm	60
- stage 2	Nm	Slacken
Cylinder head - stage 3	Nm	20
- stage 4	Nm	+ 300°
Big-end bearings	Nm	50
Main bearings	Nm	53
Clutch cover	Nm	22
Flywheel [driveplate]	Nm	50 LkC
Front hubs	Nm	270
Rear hubs	Nm	270
Wheel nuts / bolts	Nm	70. Alloy: 90
Spark plugs	Nm	25


CapacitiesBX 19i CAT1991 to 1993

Engine oil & filter	litres	5.0
Gearbox - 4-speed [5-speed]	litres	2.0³
Automatic transmission - refill	litres	2.5
Final drive	litres	4x4 rear: 1.7
Cooling system	litres	7.0
Fuel tank	litres	66. Estate: 52


Notes and Illustrations

- ¹4x4: 2.1 / 2.1
- ²4x4: +1.6 to 5.0
- ³4x4: 1.9. Transfer box: 1.8

1: Idle speed 2: CO / Mixture

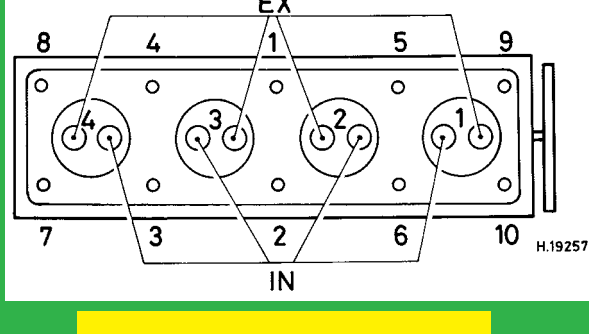

1905 cm³, 8V

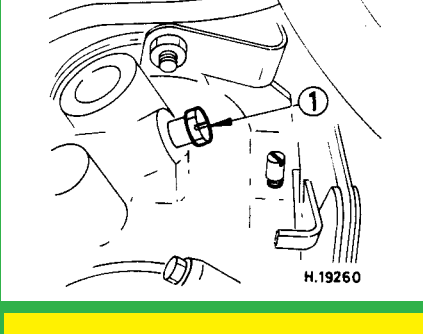

Motronic M1.3