

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemGranada, Scorpio 2.0 EFi1985 to 1989

Type		NRA (OHC) 85kW 15.04
Capacity (cm³) / number of cylinders		1993 / 4
Compression ratio / pressure	bar	9.2 / 11 to 13
Oil pressure	bar	2.1 [2.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20±0.03
Valve clearance - exhaust	mm	0.25±0.03
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	85 to 89
Radiator cap pressure	bar	0.85 to 1.1

Fuel systemGranada, Scorpio 2.0 EFi1985 to 1989

Idle speed - manual [auto]	rpm	875±50 [800±50]
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	0.8±0.2
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Bosch
Type / ref		L-Jetronic (EEC IV)
Main jet / needle		—
Injection pressure	bar	2.5
Pump pressure	bar	5.0
Octane rating	RON	97[RA] ¹

Ignition systemGranada, Scorpio 2.0 EFi1985 to 1989

Type		EEC IV
Ignition coil		Bosch, Femsa, Polmot 25kV
Primary resistance	ohms	0.72 to 0.88
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Motorcraft
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	12 BTDC @ ≤900 ¹
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		Motorcraft/Champion
Type		BRF32X / F7YC
Electrode gap	mm	0.75

Electrical systemGranada, Scorpio 2.0 EFi1985 to 1989

Battery	V / CC / RC	12 / 270 / 50, 12 / 360 / 60
Alternator voltage / full load current / engine rpm		13.7 to 14.6 / 55, 70 / 3000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gearGranada, Scorpio 2.0 EFi1985 to 1989

Brakes -		
Front (min. friction material thickness)	mm	1.5
Rear (min. friction material thickness)	mm	1.5

Tyres		
Saloon	Size	185/70x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	1.8 / 1.8
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+2.0±1.0
Camber		-23'±1°. HD: 0±1°
Castor		+1°51'±1° . HD: +1°46'±1° ²
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	—
Camber		—

Torque wrench settingsGranada, Scorpio 2.0 EFi1985 to 1989

Cylinder head - stage 1	Nm	35 to 40
- stage 2	Nm	70 to 75
Cylinder head - stage 3	Nm	Wait 5 min.
- stage 4	Nm	+ 90°
Big-end bearings	Nm	40 to 47
Main bearings	Nm	88 to 102
Clutch cover	Nm	20 to 25
Flywheel [driveplate]	Nm	68 to 74
Front hubs	Nm	390 to 450
Rear hubs	Nm	250 to 290
Wheel nuts / bolts	Nm	70 to 100
Spark plugs	Nm	20 to 28

CapacitiesGranada, Scorpio 2.0 EFi1985 to 1989


Engine oil & filter	litres	3.75
Gearbox - 4-speed [5-speed]	litres	1.25
Automatic transmission - refill	litres	8.7
Final drive	litres	0.9 LSD: 1.3
Cooling system	litres	8.0
Fuel tank	litres	70

Notes and Illustrations


¹[E 95 RON]: 8° BTDC @ 900

²Self-levelling: +1°58'±1°


1: Idle speed 2: CO / Mixture

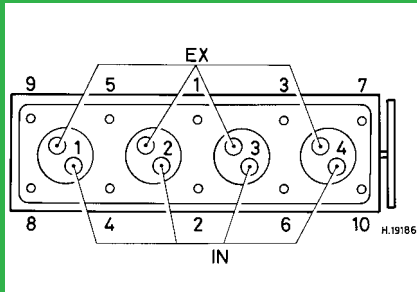

1993 cm³

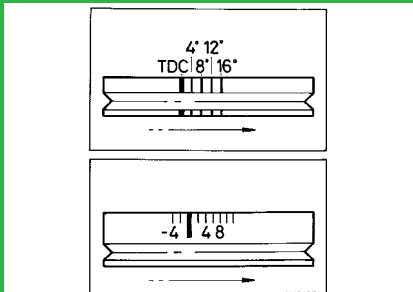

1993 cm³

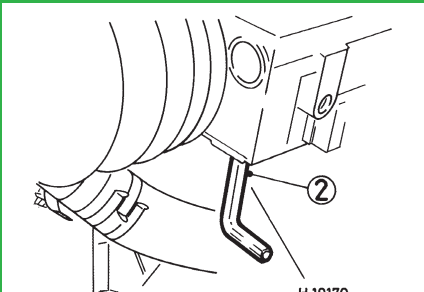

L-Jetronic