

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemGranada, Scorpio, 4x4 2.91987 to 1992

Type		BRC (OHV) 110kW 15.04
Capacity (cm ³) / number of cylinders		2936 / 6
Compression ratio / pressure	bar	9.5 / 12.4 to 14.1
Oil pressure	bar	0.98 [2.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.35
Valve clearance - exhaust	mm	0.40
Firing order		1-4-2-5-3-6
No 1 cylinder position		FR
Thermostat opening temperature	°C	79 to 83
Radiator cap pressure	bar	0.85 to 1.1

Fuel systemGranada, Scorpio, 4x4 2.91987 to 1992

Idle speed - manual [auto]	rpm	800±50 [850±50] ¹
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	0.8±0.2
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Bosch
Type / ref		L-Jetronic (Ford EEC IV)
Main jet / needle		—
Injection pressure	bar	3.0
Pump pressure	bar	≥5.0
Octane rating	RON	97[RA] ²

Ignition systemGranada, Scorpio, 4x4 2.91987 to 1992

Type		EEC IV
Ignition coil		Bosch, Femsa, Polmot 25kV
Primary resistance	ohms	0.72 to 0.88
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Motorcraft
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	12 BTDC @ ≤900 ²
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		Motorcraft/Champion
Type		AGPR32C / RC7YC
Electrode gap	mm	0.75

Electrical systemGranada, Scorpio, 4x4 2.91987 to 1992

Battery	V / CC / RC	12 / 360 / 60 or 500 / 75
Alternator voltage / full load current / engine rpm		13.7 to 14.6 / 55,70,90 / 3000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gearGranada, Scorpio, 4x4 2.91987 to 1992

Brakes -		
Front (min. friction material thickness)	mm	1.5
Rear (min. friction material thickness)	mm	1.5

Tyres		
Saloon	Size	185/70x14:205/60x15:195/65x15
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	1.8 / 1.8
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+2.0±1.0
Camber		-23'±1°. HD: 0±1° ³
Castor		+1°51'±1° . HD: +1°46'±1° ⁴
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	—
Camber		—

Torque wrench settingsGranada, Scorpio, 4x4 2.91987 to 1992

Cylinder head - stage 1	Nm	35 to 40
- stage 2	Nm	70 to 75
Cylinder head - stage 3	Nm	Wait 5 min.
- stage 4	Nm	+ 90°
Big-end bearings	Nm	26 to 33
Main bearings	Nm	90 to 104
Clutch cover	Nm	17 to 21
Flywheel [driveplate]	Nm	68 to 74
Front hubs	Nm	390 to 450
Rear hubs	Nm	250 to 290
Wheel nuts / bolts	Nm	70 to 100
Spark plugs	Nm	30 to 40


CapacitiesGranada, Scorpio, 4x4 2.91987 to 1992

Engine oil & filter	litres	4.25
Gearbox - 4-speed [5-speed]	litres	1.25. MT75: 1.2 ⁵
Automatic transmission - refill	litres	8.7
Final drive	litres	1.3 ⁶
Cooling system	litres	8.5
Fuel tank	litres	70


Notes and Illustrations

- ¹6.88 ►: 875±50 [AT 12.87 ►: 900±50]
- ²[E 95 RON]: 8° BTDC @ idle
- ³90 ►: -21'±1°. 4x4: 0±1°
- ⁴Self-levelling: +1°58'±1°. 90 ►: +2°22'±1°. 4x4: +3°11'± 1°
- ⁵Transfer box: 0.5
- ⁶4x4 front: 1.0. 4x4 rear: 0.9


1: Idle speed 2: CO / Mixture

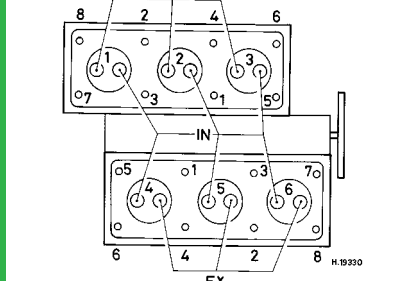

2936 cm³

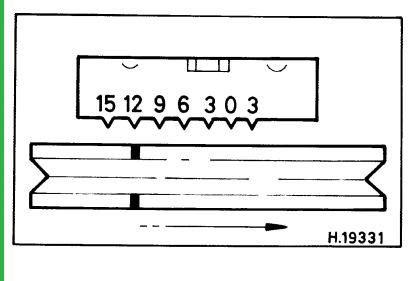

2936 cm³

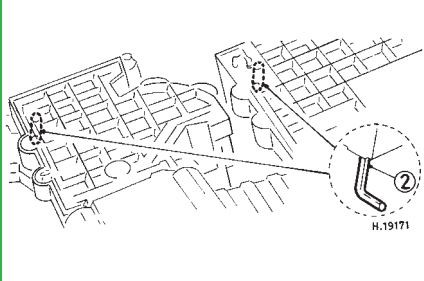

L-Jetronic, not CAT