

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemAccord 2.0i-161987 to 1989

Type		B20 A2 DOHC 16V
Capacity (cm³) / number of cylinders		1958 / 4
Compression ratio / pressure	bar	9.5 / ≥10.3
Oil pressure	bar	[4.7 to 5.6]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.08 to 0.12
Valve clearance - exhaust	mm	0.16 to 0.20
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	82±2
Radiator cap pressure	bar	0.76 to 1.04

Fuel systemAccord 2.0i-161987 to 1989

Idle speed - manual [auto]	rpm	800±50
Fast idle speed - manual [auto]	rpm	1000 to 1800
CO @ idle speed [3000 rpm] - see page VI	%	≤0.1
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Honda
Type / ref		PGM-Fi
Main jet / needle		—
Injection pressure	bar	2.3 to 2.7
Pump pressure	bar	2.3 to 2.7
Octane rating	RON	97[RA]

Ignition systemAccord 2.0i-161987 to 1989

Type		Electronic
Ignition coil		—
Primary resistance	ohms	1.22 to 1.49
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Toyo Denso
Points gap (air gap)	mm	[equal gaps]
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	15±2 BTDC @ idle
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Electronic control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Electronic control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK/Champion
Type		BCPR6E-11 / RC9YC
Electrode gap	mm	1.00 to 1.10

Electrical systemAccord 2.0i-161987 to 1989

Battery	V / CC / RC	12 / 410 / 50Ah
Alternator voltage / full load current / engine rpm		14.0 / _ / 3000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gearAccord 2.0i-161987 to 1989

Brakes -		
Front (min. friction material thickness)	mm	3.0
Rear (min. friction material thickness)	mm	1.6. 1989: 3.0

Tyres		
Saloon	Size	195/60x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	1.8 / 1.8
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	0±3.0
Camber		0±1°
Castor		+31'±1°
King pin inclination		+6°50'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	0±2.0
Camber		0±1°

Torque wrench settingsAccord 2.0i-161987 to 1989

Cylinder head - stage 1	Nm	30 oiled
- stage 2	Nm	68
Cylinder head - stage 3	Nm	—
- stage 4	Nm	—
Big-end bearings	Nm	45
Main bearings	Nm	55 oiled
Clutch cover	Nm	26
Flywheel [driveplate]	Nm	105
Front hubs	Nm	185
Rear hubs	Nm	185
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	18


CapacitiesAccord 2.0i-161987 to 1989

Engine oil & filter	litres	4.0
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	—
Final drive	litres	WT
Cooling system	litres	7.1
Fuel tank	litres	60


Notes and Illustrations




1: Idle speed 2: CO / Mixture

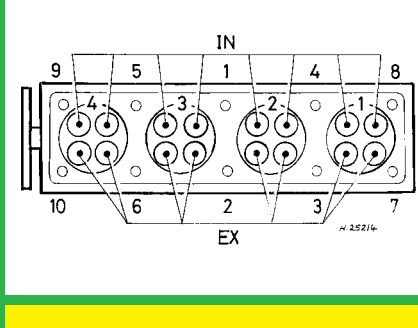

1958 cm³

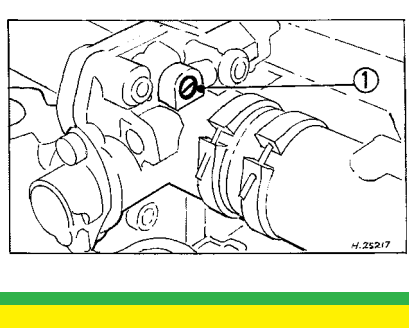

PGM-Fi

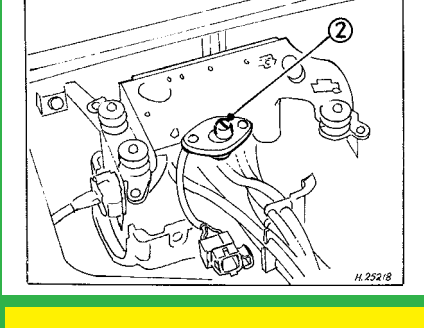

PGM-Fi