

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemPrelude 2.0 SOHC 12V1987 to 1992

Type		B20A4 SOHC 12V
Capacity (cm³) / number of cylinders		1958 / 4
Compression ratio / pressure	bar	9.2 / ≥9.3
Oil pressure	bar	1.4 [5.2 to 6.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.12 to 0.17
Valve clearance - exhaust	mm	0.25 to 0.30
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	80 to 84
Radiator cap pressure	bar	0.76 to 1.04

Fuel systemPrelude 2.0 SOHC 12V1987 to 1992

Idle speed - manual [auto]	rpm	800±50 [750±50]
Fast idle speed - manual [auto]	rpm	1000 to 2000
CO @ idle speed [3000 rpm] - see page VI	%	0.1
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Keihin
Type / ref		2V. 90 ►: CD type
Main jet / needle		—
Injection pressure	bar	—
Pump pressure	bar	0.16 to 0.23 ¹
Octane rating	RON	98[RA] ²

Ignition systemPrelude 2.0 SOHC 12V1987 to 1992

Type		Computerized
Ignition coil		—
Primary resistance	ohms	1.2 to 1.5
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Hitachi/Toyo Denso
Points gap (air gap)	mm	[equal gaps]
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	16±2 BTDC @ idle ²
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK/Champion
Type		BCPR6E-11 / RC7YC
Electrode gap	mm	1.00 to 1.10

Electrical systemPrelude 2.0 SOHC 12V1987 to 1992

Battery	V / CC / RC	12 / 50 or 65Ah
Alternator voltage / full load current / engine rpm		13.5 to 14.5 / 70 / 2500
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gearPrelude 2.0 SOHC 12V1987 to 1992

Brakes -		
Front (min. friction material thickness)	mm	3.0
Rear (min. friction material thickness)	mm	2.0

Tyres		
Saloon	Size	185/70x13
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	1.9 / 1.8
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	0±2.0
Camber		0±1°
Castor		+2°20'±30'
King pin inclination		+9°45'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+2.0±2.0
Camber		-20'±1°

Torque wrench settingsPrelude 2.0 SOHC 12V1987 to 1992

Cylinder head - stage 1	Nm	30 oiled
- stage 2	Nm	68
Cylinder head - stage 3	Nm	—
- stage 4	Nm	—
Big-end bearings	Nm	45
Main bearings	Nm	55 oiled
Clutch cover	Nm	26
Flywheel [driveplate]	Nm	105
Front hubs	Nm	185
Rear hubs	Nm	185
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	18

CapacitiesPrelude 2.0 SOHC 12V1987 to 1992

Engine oil & filter	litres	3.9. 90 ►: 3.8
Gearbox - 4-speed [5-speed]	litres	1.9. 90 ►: 2.1
Automatic transmission - refill	litres	2.8
Final drive	litres	WT
Cooling system	litres	6.8 [AT: 7.5]
Fuel tank	litres	60


Notes and Illustrations

¹90 ►: 0.09 to 0.14


²[E(95 RON)]: 11±2 BTDC @ idle

1: Idle speed


2: CO / Mixture

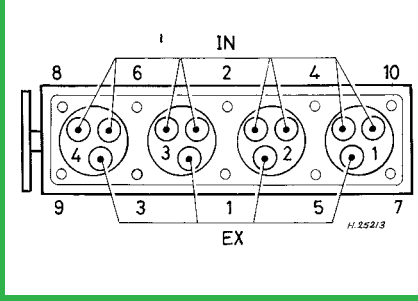


1958 cm³, SOHC

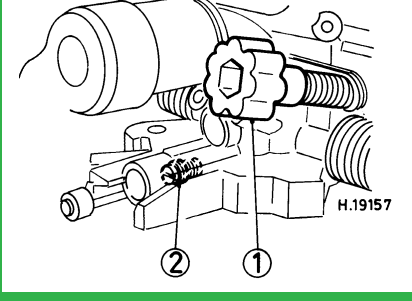

Keihin 2V

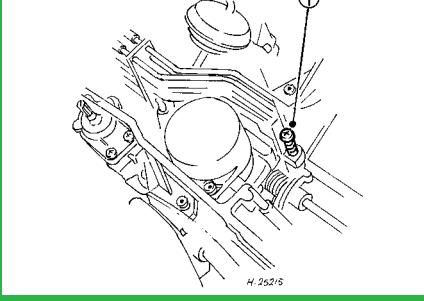

Keihin CD

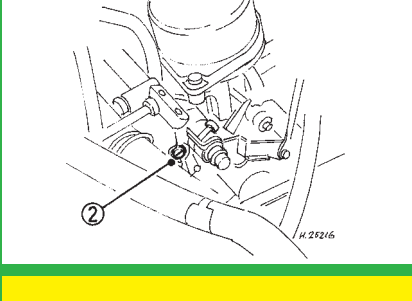

Keihin CD