

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling systemColt 1300, 12V1990 to 1992

Type		4G13-2 SOHC 12V
Capacity (cm³) / number of cylinders		1299 / 4
Compression ratio / pressure	bar	9.5 / ≥10.4
Oil pressure	bar	—
Oil temperature	°C	—
Valve clearance - inlet	mm	0.15 H
Valve clearance - exhaust	mm	0.25 H
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	82
Radiator cap pressure	bar	0.76 to 1.04

Fuel systemColt 1300, 12V1990 to 1992

Idle speed - manual [auto]	rpm	800±50
Fast idle speed - manual [auto]	rpm	2700±200
CO @ idle speed [3000 rpm] - see page VI	%	1.0±0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤1200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Aisan
Type / ref		VV type 31A [35D]
Main jet / needle		—
Injection pressure	bar	—
Pump pressure	bar	0.19 to 0.26
Octane rating	RON	98[E 95 RON]

Ignition systemColt 1300, 12V1990 to 1992

Type		Electronic
Ignition coil		In distributor
Primary resistance	ohms	0.9 to 1.2
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Mitsubishi
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	3±2 BTDC @ idle
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	0 @ 1500
	° Crankshaft @ rpm	5 @ 2500
	° Crankshaft @ rpm	16 @ 6000
Vacuum range check	mbar	133 to 400
Maximum vacuum advance	° Crankshaft	15
Spark plugs		NGK/Champion
Type		BPR6ES / RN9YC
Electrode gap	mm	0.70 to 0.80

Electrical systemColt 1300, 12V1990 to 1992

Battery	V / CC / RC	12 / 101 / 348
Alternator voltage / full load current / engine rpm		13.9 to 14.9 / _ / 2500
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gearColt 1300, 12V1990 to 1992

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	1.0

Tyres		
Saloon	Size	155x13
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.0 / 2.0
- Estate / Van	bar	—

Front suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	0±1.5
Camber		0±30'
Castor		+2°20'±30'
King pin inclination		+12°30'

Rear suspension / wheel alignment

Toe-in (+) / Toe-out (–)	mm [°]	0±2.25 PW
Camber		-40'±35'


Torque wrench settingsColt 1300, 12V1990 to 1992

Cylinder head - stage 1	Nm	35
- stage 2	Nm	70 to 75 C
Cylinder head - stage 3	Nm	80 to 85 H
- stage 4	Nm	—
Big-end bearings	Nm	32 to 35
Main bearings	Nm	50 to 55
Clutch cover	Nm	15 to 21
Flywheel [driveplate]	Nm	130 to 140
Front hubs	Nm	200 to 260
Rear hubs	Nm	150 to 200
Wheel nuts / bolts	Nm	90 to 110
Spark plugs	Nm	20 to 30


CapacitiesColt 1300, 12V1990 to 1992

Engine oil & filter	litres	3.4
Gearbox - 4-speed [5-speed]	litres	1.8
Automatic transmission - refill	litres	—
Final drive	litres	WT
Cooling system	litres	5.0
Fuel tank	litres	50


Notes and Illustrations




1: Idle speed 2: CO / Mixture

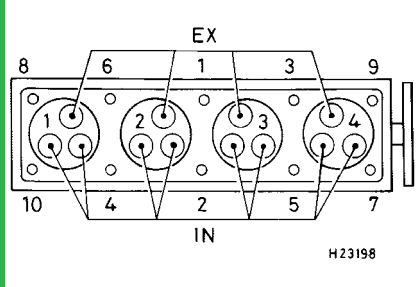

1299 cm³, 12V

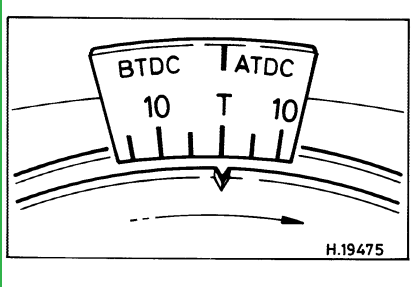

1299 cm³

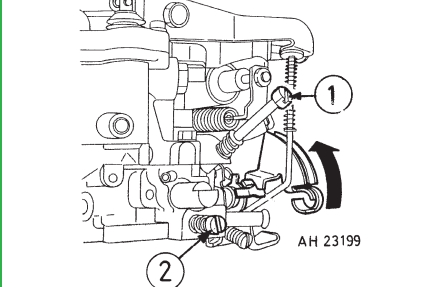

Aisan, 12V