

Engine & Cooling

Fuel

Ignition

Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations



Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system306, 1.6i CAT1993 to 1997

Type		TU5JP/Z/L (NFZ) 65kW
Capacity (cm³) / number of cylinders		1587 / 4
Compression ratio / pressure	bar	9.6 / _
Oil pressure	bar	1.0 [4.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20
Valve clearance - exhaust	mm	0.40
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	89 to 99
Radiator cap pressure	bar	1.4

Fuel system306, 1.6i CAT1993 to 1997

Idle speed - manual [auto]	rpm	850±50 N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	≥10.0
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Bosch
Type / ref		MP5.1-Motronic MPI
Main jet / needle		_
Injection pressure	bar	2.8 to 3.2
Pump pressure	bar	3.0
Octane rating	RON	95[U]

Ignition system306, 1.6i CAT1993 to 1997

Type		Static
Ignition coil		4xBosch. Valeo BAE04
Primary resistance	ohms	0.8 Valeo: 0.6
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		_
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum		
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		_
Type		_
Electrode gap	mm	0.80

Electrical system306, 1.6i CAT1993 to 1997

Battery	V / CC / RC	(12L1 200)
Alternator voltage / full load current / engine rpm		13.8 to 14.8 / _ / 3000
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gear306, 1.6i CAT1993 to 1997

Brakes -		
Front (min. friction material thickness)	mm	1.0
Rear (min. friction material thickness)	mm	_

Tyres		
Saloon	Size	175/70x13
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.2 / 2.3
- Estate / Van	bar	_

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	-1.0±0.5 ¹
Camber		-20'±30'
Castor		+1°45'±30'. PAS: +3°15'±30'
King pin inclination		+11°±30'

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+2.1±0.75
Camber		-1°20'±15'

Torque wrench settings306, 1.6i CAT1993 to 1997


Cylinder head - stage 1	Nm	20
- stage 2	Nm	+ 120°
Cylinder head - stage 3	Nm	+ 120°
- stage 4	Nm	_
Big-end bearings	Nm	40
Main bearings	Nm	20 + 45°
Clutch cover	Nm	15
Flywheel [driveplate]	Nm	60 LkC
Front hubs	Nm	265
Rear hubs	Nm	185
Wheel nuts / bolts	Nm	85
Spark plugs	Nm	28

Capacities306, 1.6i CAT1993 to 1997

Engine oil & filter	litres	3.5
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	7.0
Fuel tank	litres	60

Notes and Illustrations

¹PAS: +1.0±0.5

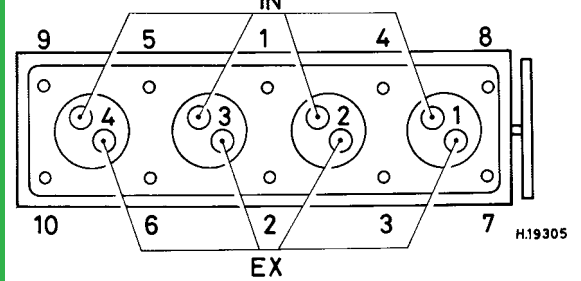

1587 cm³, TU5