


Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------

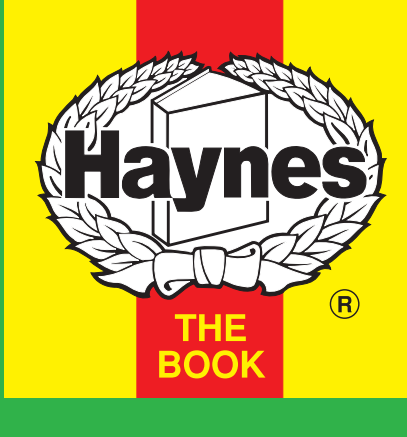

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU	HELP
------	------

Engine and cooling systemClio 1.8 CAT (B/C57C/U)1991 to 1994

Type		F3P-7-10. B/C57U: F3P-7-14
Capacity (cm³) / number of cylinders		1794 / 4
Compression ratio / pressure	bar	9.7 / _
Oil pressure	bar	2.0 [3.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20
Valve clearance - exhaust	mm	0.40
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	83
Radiator cap pressure	bar	0.9

Fuel systemClio 1.8 CAT (B/C57C/U)1991 to 1994

Idle speed - manual [auto]	rpm	750±50 N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	_
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Bosch
Type / ref		Monopoint SPI
Main jet / needle		_
Injection pressure	bar	1.0±0.02
Pump pressure	bar	1.06±0.1
Octane rating	RON	95[U]

Ignition systemClio 1.8 CAT (B/C57C/U)1991 to 1994

Type		Computerized
Ignition coil		Renix
Primary resistance	ohms	0.4 to 0.8
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		_
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control
V = Vacuum NV = No Vacuum		_
Total ignition advance	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Bosch
Type		W7DC
Electrode gap	mm	0.75 to 0.85

Electrical systemClio 1.8 CAT (B/C57C/U)1991 to 1994

Battery	V / CC / RC	_
Alternator voltage / full load current / engine rpm		13.5 to 14.8 / 70, 90 / 4000
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	460 / _

Running gearClio 1.8 CAT (B/C57C/U)1991 to 1994

Brakes -		
Front (min. friction material thickness)	mm	6.0 with backing
Rear (min. friction material thickness)	mm	2.5 with backing¹

Tyres		
Saloon	Size	165/60x14
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.3 / 2.3
- Estate / Van	bar	_

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	-1.0±1.0²
Camber		-20'±30'³
Castor		+1°55'±30'⁴
King pin inclination		+10°±30'⁵

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+0.5 to 2.5⁶
Camber		-50'±30' N/A

Torque wrench settingsClio 1.8 CAT (B/C57C/U)1991 to 1994

Cylinder head - stage 1	Nm	30
- stage 2	Nm	70
Cylinder head - stage 3	Nm	Wait 3 mins. Slacken in turn
- stage 4	Nm	20 + 123±2°
Big-end bearings	Nm	45 to 50
Main bearings	Nm	60 to 65
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	50 to 55
Front hubs	Nm	250
Rear hubs	Nm	160. ABS: 175
Wheel nuts / bolts	Nm	90
Spark plugs	Nm	_

CapacitiesClio 1.8 CAT (B/C57C/U)1991 to 1994

Engine oil & filter	litres	5.5
Gearbox - 4-speed [5-speed]	litres	3.4
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	6.5
Fuel tank	litres	43

Notes and Illustrations

¹ABS: 5.0 with backing


²ABS: +2.0±1.0

³ABS: -1°33'±30'

⁴ABS: +2°5'±30'

⁵ABS: +10°47'±30'

⁶ABS: +1.0 to 3.0

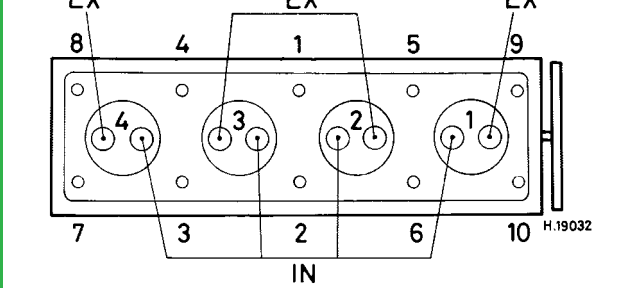

1794 cm³