

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

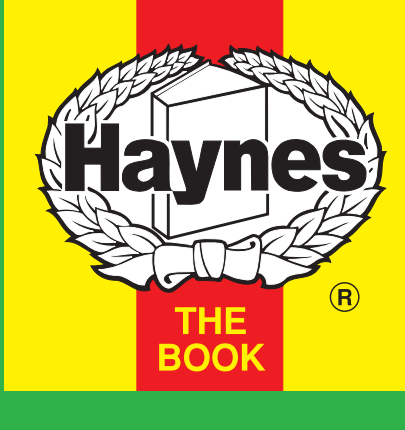

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system

9000 2.3 Ecopower L/P Turbo

1994 to 1997

Type	B234E DOHC 16V Turbo 125kW ¹	
Capacity (cm ³) / number of cylinders	2290 / 4	
Compression ratio / pressure	bar	9.25 / _
Oil pressure	bar	[2.7]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
- exhaust	mm	0: Hyd.
Firing order	1-3-4-2	
No 1 cylinder position	TCE	
Thermostat opening temperature	°C	89±2
Radiator cap pressure	bar	0.8 to 1.2

Fuel system

9000 2.3 Ecopower L/P Turbo

1994 to 1997

Idle speed - manual [auto]	rpm	875
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	_
O2 @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection	Saab	
Type / ref	Trionic SEFI	
Main jet / needle	_	
Injection pressure	bar	3.0
Pump pressure	bar	3.0
Octane rating	RON	91[U]

Ignition system

9000 2.3 Ecopower L/P Turbo

1994 to 1997

Type	Direct electronic	
Ignition coil	Saab	
Primary resistance	ohms	_
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor	_	
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation	_	
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control
V = Vacuum NV = No Vacuum		
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs	NGK	
Type	BCPR7ES	
Electrode gap	mm	1.00+0.10-0.20

Electrical system

9000 2.3 Ecopower L/P Turbo

1994 to 1997

Battery	V / CC / RC	12 / 60Ah
Alternator voltage / full load current / engine rpm	13.9 to 14.8 / 80 / 2500	
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gear

9000 2.3 Ecopower L/P Turbo

1994 to 1997

Brakes -		
Front (min. friction material thickness)	mm	4.0
Rear (min. friction material thickness)	mm	4.0

Tyres		
Saloon	Size	195/65x15
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.1 / 2.1
- Estate / Van	bar	_

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+1.5±0.5
Camber	-0.65°±0.5°	
Castor	+1.65°±0.5°	
King pin inclination	+11.3°±0.5°	

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+2.5±1.5
Camber	-0.5°±0.25°	

Torque wrench settings

9000 2.3 Ecopower L/P Turbo

1994 to 1997

Cylinder head - stage 1	Nm	60
- stage 2	Nm	80
- stage 3	Nm	+90°
- stage 4	Nm	_
Big-end bearings	Nm	48
Main bearings	Nm	110
Clutch cover	Nm	22±2
Flywheel [driveplate]	Nm	80
Front hubs	Nm	280 to 300
Rear hubs	Nm	290±10
Wheel nuts / bolts	Nm	115±10
Spark plugs	Nm	28

Capacities


9000 2.3 Ecopower L/P Turbo

1994 to 1997

Engine oil & filter	litres	5.5
Gearbox - 4-speed [5-speed]	litres	1.8
Automatic transmission - refill	litres	3.0 to 3.5
Final drive	litres	WT
Cooling system	litres	9.0
Fuel tank	litres	66

Notes and Illustrations

¹Light pressure intercooled turbo

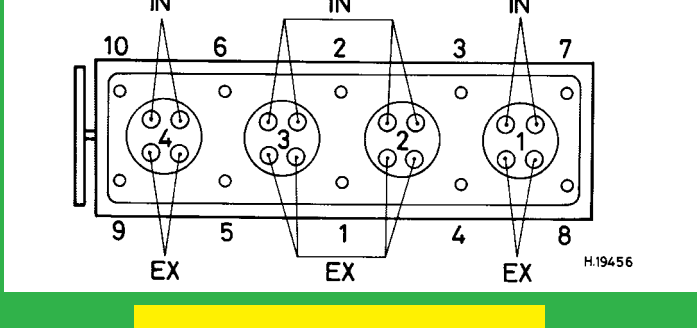

2290 cm³