


Engine & CoolingFuelIgnitionElectricalRunning gearTorque settingsCapacitiesNotes & Illustrations

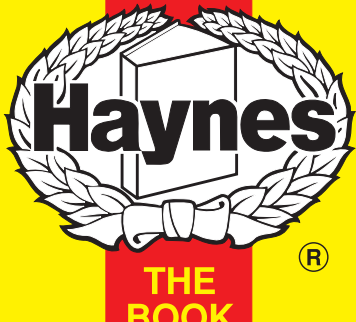

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENUHELP

Engine and cooling system

Ibiza 1.5i & CAT1989 to 1993

Type		021-B-2000. 68kW. CAT: 67kW
Capacity (cm ³) / number of cylinders		1461 / 4
Compression ratio / pressure	bar	10.8 / ≥13.5
Oil pressure	bar	≥1.5 [3.5 to 4.0]
Oil temperature	°C	100
Valve clearance - inlet	mm	0: Hyd.
- exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	88±2
Radiator cap pressure	bar	0.98

Fuel system

Ibiza 1.5i & CAT1989 to 1993

Idle speed - manual [auto]	rpm	850±50
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	0.5 to 1.0. CAT: 0.3 to 0.7
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Bosch
Type / ref		LE2-Jetronic. CAT: LU2-Jet.
Main jet / needle		—
Injection pressure	bar	—
Pump pressure	bar	1.8 to 2.0
Octane rating	RON	96[E 95 RON] ¹

Ignition system

Ibiza 1.5i & CAT1989 to 1993

Type		TSZ
Ignition coil		Bosch TCI
Primary resistance	ohms	0.6 to 1.0
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	11.5
Distributor		Bosch
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	10 BTDC @ 850±50
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		Bosch/NGK
Type		F5DC / BCP7ES
Electrode gap	mm	0.80 to 0.90

Electrical system

Ibiza 1.5i & CAT1989 to 1993

Battery	V / CC / RC	12 / 45Ah
Alternator voltage / full load current / engine rpm		13.6 to 14.4 / 65 / 3000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	340 / 7.5

Running gear

Ibiza 1.5i & CAT1989 to 1993

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	2.0

Tyres		
Saloon	Size	155x13: 165/65x14: 185/60x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.0 / 1.9
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+3.0±1.0
Camber		+15' to -1°15'
Castor		+30' to 1°45'
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	+4.0±2.0
Camber		-15' to +1°30'

Torque wrench settings

Ibiza 1.5i & CAT1989 to 1993

Cylinder head - stage 1	Nm	20 ²
- stage 2	Nm	+ 90 ^{o2}
- stage 3	Nm	+ 90 ^{o2}
- stage 4	Nm	—
Big-end bearings	Nm	30 + 90°
Main bearings	Nm	85±5
Clutch cover	Nm	30
Flywheel [driveplate]	Nm	85
Front hubs	Nm	216
Rear hubs	Nm	216
Wheel nuts / bolts	Nm	Alloy: 78. Steel: 86
Spark plugs	Nm	32

Capacities

Ibiza 1.5i & CAT1989 to 1993




Engine oil & filter	litres	4.1
Gearbox - 4-speed [5-speed]	litres	3.4
Automatic transmission - refill	litres	—
Final drive	litres	WT
Cooling system	litres	7.5
Fuel tank	litres	47

Notes and Illustrations

¹CAT: 95 [U]

²Bolts 1 to 10 only. Finally tighten bolts 11 & 12 to 20

1: Idle speed2: CO / Mixture

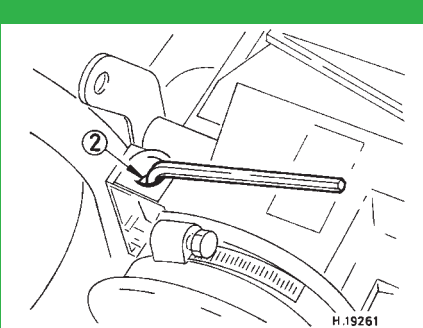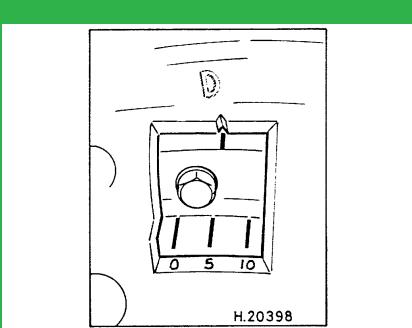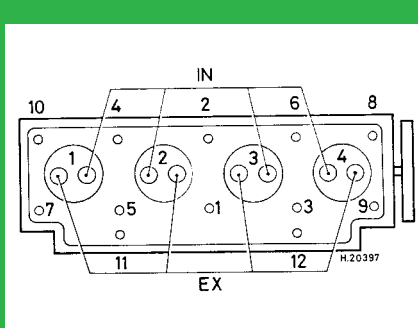

1461 cm³1461 cm³LE2-Jetronic