

VOLKSWAGEN

Passat 1.8i

1997

Engine & Cooling

Fuel

Ignition


Electrical

Running gear

Torque settings

Capacities

Notes & Illustrations

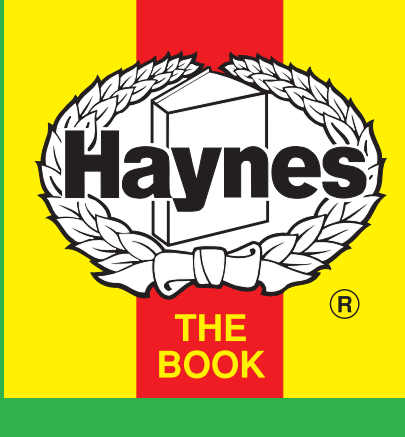

Automotive Technical
DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system

Passat 1.8i

1997

Type		ADR DOHC 20V 92kW
Capacity (cm ³) / number of cylinders		1781 / 4
Compression ratio / pressure	bar	10.3 / ≥7.5
Oil pressure	bar	1.0 to 2.5 [3.0 to 5.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	—
Radiator cap pressure	bar	1.2 to 1.5

Fuel system

Passat 1.8i

1997

Idle speed - manual [auto]	rpm	820 to 900 N/A
Fast idle speed - manual [auto]	rpm	2500 to 2800 N/A
CO @ idle speed [3000 rpm] - see page VI	%	—
HC @ idle speed [3000 rpm] - see page VI	ppm	—
CO2 @ idle speed [3000 rpm] - see page VI	%	—
O2 @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		—Bosch
Type / ref		M3.2-Motronic
Main jet / needle		—
Injection pressure	bar	—
Pump pressure	bar	3.5 to 4.0
Octane rating	RON	95[U]

Ignition system

Passat 1.8i

1997

Type		Motronic
Ignition coil		—
Primary resistance	ohms	0.5 to 1.5
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		—
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		—
Ignition timing - basic [static	° Crankshaft @ rpm	0±3 BTDC @ 820 to 900 N/A
V = Vacuum NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		Bosch/NGK
Type		F7LTCT / BKUR6ET
Electrode gap	mm	0.90 to 1.10. NGK: 0.7 to 0.9

Electrical system

Passat 1.8i

1997

Battery	V / CC / RC	—
Alternator voltage / full load current / engine rpm		—
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear

Passat 1.8i

1997

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	2.0

Tyres		
Saloon	Size	195/65x15:205/60x15:205/55x16
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.2 / 2.2
- Estate / Van	bar	—

Front suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[+10'±5']
Camber		-20'±20'. Sports: -35'±20'
Castor		—
King pin inclination		—

Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (–)	mm [°]	[+10'±5']. Sports: [+15'±5']PW
Camber		-1°30'±20' PW

Torque wrench settings

Passat 1.8i

1997

Cylinder head - stage 1	Nm	40 N
- stage 2	Nm	60
Cylinder head - stage 3	Nm	+180°
- stage 4	Nm	—
Big-end bearings	Nm	30 + 90°
Main bearings	Nm	65
Clutch cover	Nm	—
Flywheel [driveplate]	Nm	60 + 90°. 2 mass: 40 + 180°
Front hubs	Nm	M14: 115 + 90°. M16: 190 + 90°
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	120
Spark plugs	Nm	30

Capacities

Passat 1.8i

1997

Engine oil & filter	litres	3.5
Gearbox - 4-speed [5-speed]	litres	2.25
Automatic transmission - refill	litres	5.4
Final drive	litres	WT. AT: 1.0
Cooling system	litres	7.0
Fuel tank	litres	62

Notes and Illustrations

