



Brake Booster

Pushrod Clearance Adjustment (cont'd)

- Inspection with the booster on the car.

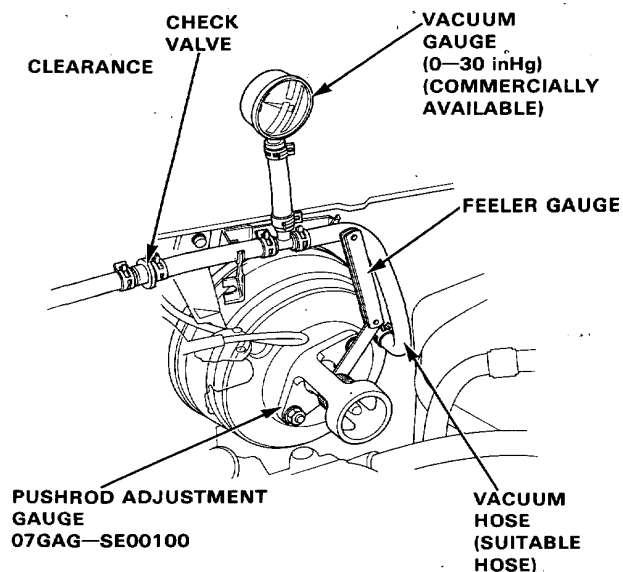

6. If clearance is incorrect, loosen the star locknut and turn the adjuster in or out to adjust. Hold the clevis while adjusting.
7. Tighten the star locknut securely.

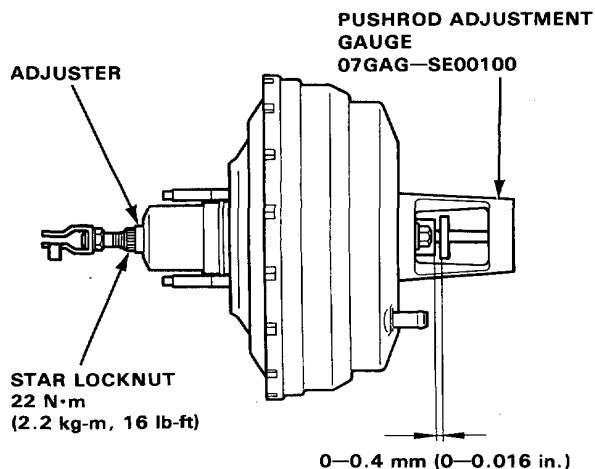

NOTE: If the clearance between the gauge body and adjusting nut is 0 mm, the pushrod-to-piston clearance is 0.4 mm. If the clearance between the gauge body and adjusting nut is 0.4 mm, the pushrod-to-piston clearance is 0 mm.

8. After adjustment, loosen the clevis end pushrod locknut and turn the pushrod to obtain the correct pedal height.

PEDAL HEIGHT FROM FLOOR:

MANUAL TRANSMISSION: 190 mm (7.5 in.)

AUTOMATIC TRANSMISSION: 195 mm (7.7 in.)
(with floor mat removed)

The pedal should have

1-5 mm free play.

9. Adjust the brake light switch (page 19-4).