





7. Install the brake shoes onto the brake panel.
NOTE: Make sure not to damage the wheel cylinder dust covers.

8. Install the tension pins and the return springs.

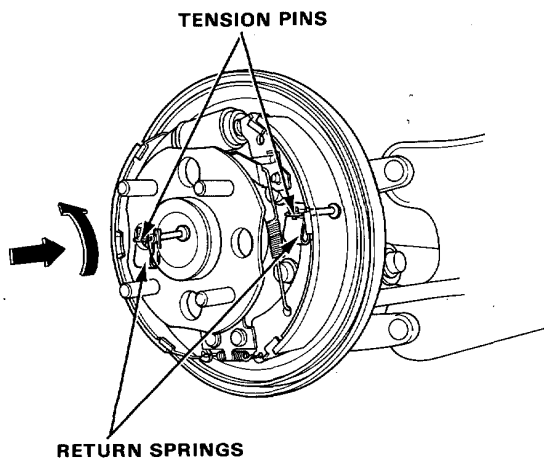

9. Install the upper spring with the special tool.

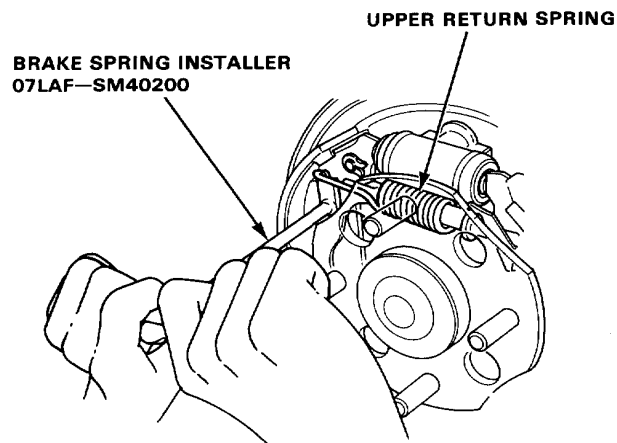

10. Install the brake drum.

11. If the wheel cylinder has been removed, bleed the brake system (page 19-10).

12. Depress the brake pedal several times to set the self adjusting brake.

13. Adjust the parking brake (page 19-4).

Wheel Cylinder

Disassembly and Inspection

CAUTION:

- Use only clean DOT 3 or DOT 4 brake fluid.
- Use only new replacement parts.
- Brake fluid will damage the painted, plastic and rubber parts. Whenever handling brake fluid, protect the painted, plastic or rubber parts by covering with a rag. If fluid does get on these parts, wipe it off with a clean cloth.
- Blow all passages with compressed air before reassembling.
- Clean all parts thoroughly with the clean brake fluid.
- Do not allow dirt or other foreign matter to contaminate the brake fluid.
- Do not mix different types of fluid. They are not compatible.
- Never reuse the brake fluid once it has been drained.
- Lubricate all parts with clean brake fluid during reassembly.
- Apply sealant between the wheel cylinder and backing plate whenever the wheel cylinder has been removed.

