



Glass Adjustment

NOTE:


- Place the vehicle on a firm, level surface when adjusting door fit.
- Check the weatherstrip and glass run channel for damage or deterioration and replace if necessary.

1. Remove the door panel and peel off the plastic cover (pages 14-5, 8).
2. Install the regulator handle on the door regulator.

(Power Window Model)


Driver's:

Remove the power window switch from the armrest.

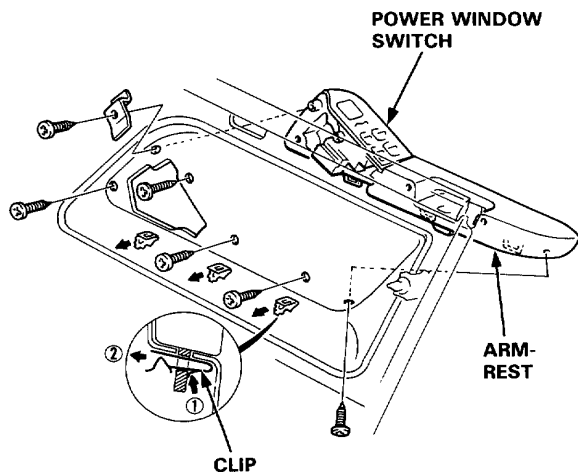

Passenger's/Rear door:

Remove the power window switch from the armrest.

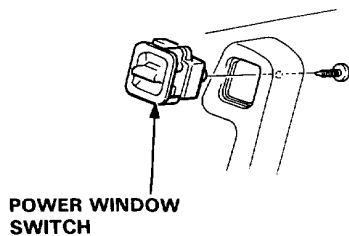


3. Connect the power window switch to the door harness.


4. To adjust glass fit in the door, raise the glass as far up as possible and hold it against the door sash. Then tighten the roller guide bolts or motor mounting bolts.

Check the smooth movement of door glass.

Front:

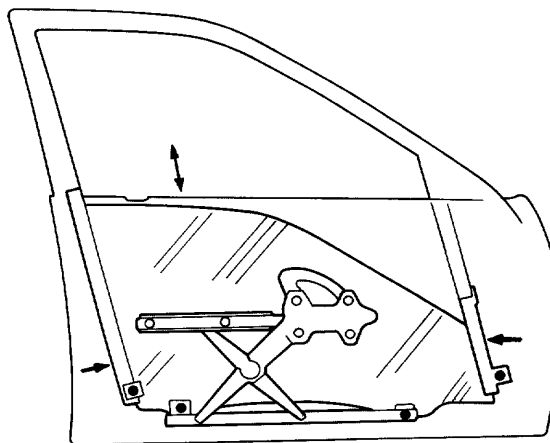

Rear:

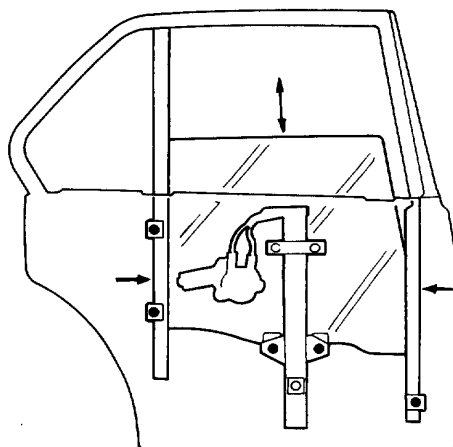

(cont'd)