

Dashboard




Component Removal/Installation

SRS wire harnesses are routed near the dashboard and steering column.


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow other insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- SRS Type I only: Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).

SRS Type I: Aero Deck (KG, KE)

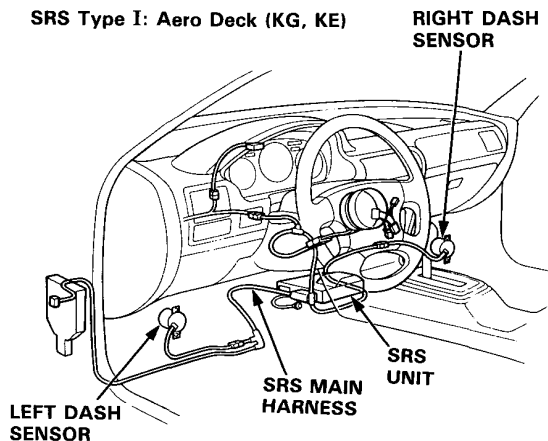


SRS Type II: Sedan

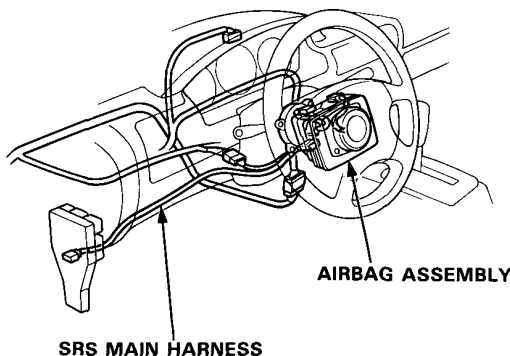

Instrument Panel Removal:

NOTE: Take care not to scratch or score the dashboard and instrument panel.

1. Remove:
 - Console (page 14-3)
 - Ashtray and ashtray holder
 - Stereo radio/cassette
 - Coin box, cruise control master switch, sunroof switch and panel brightness controller
 - Side and center air vents
2. Remove the 12 mounting screws and disconnect the connectors.
3. Carefully pull out the instrument panel from the dashboard.

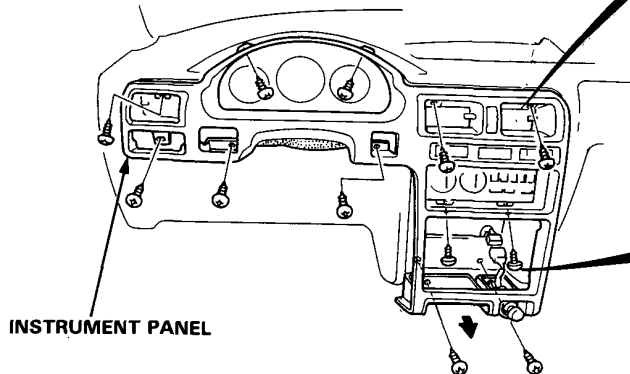

4. Installation is the reverse of the removal procedure.

