



## SRS Unit Installation

**CAUTION:** Be sure to install the SRS wiring so that it is not pinched or interfering with other car parts.


1. Install the SRS unit.

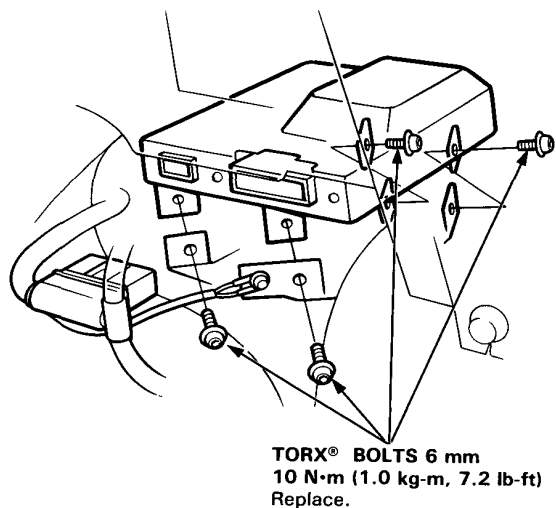

2. Connect the SRS main harness 18-P connector to the SRS unit; push it into position until it clicks.
3. Install the harness protector, then put the carpet back in place.

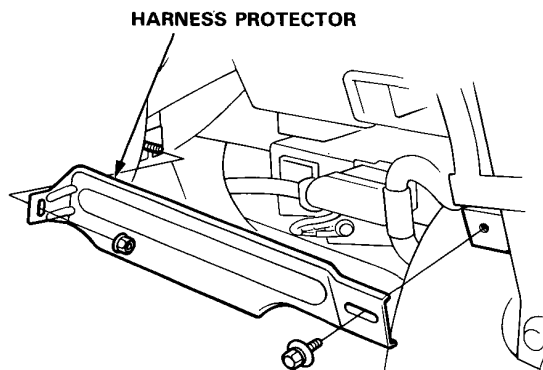

4. Remove the short connector from the airbag.
5. Reconnect the airbag connector to the cable reel connector. Attach the short connector to the access panel, then reinstall the panel.

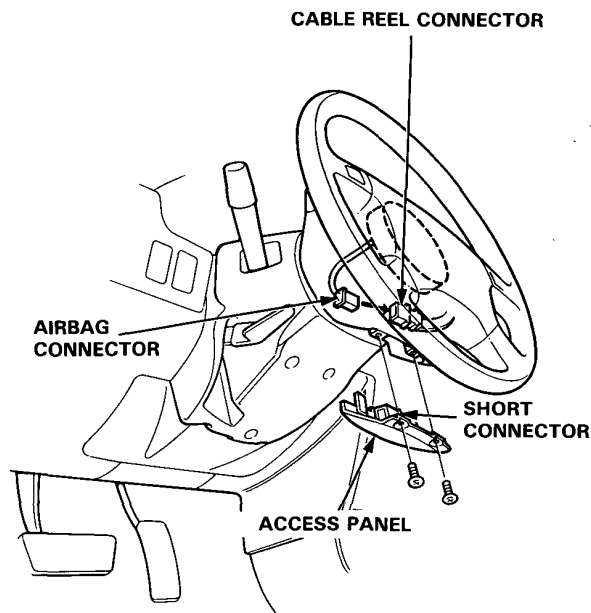

6. Reconnect the battery positive cable, then the negative cable.
7. After installing the SRS unit, confirm proper system operation:
  - Turn the ignition to II: the instrument panel SRS light should go on for about 6 seconds and then go off.