

Front Grille

Replacement



NOTE:

- Take care not to scratch the front bumper.
- Remove the front bumper (see page 20-87).

►: Screw locations, 7



▷: Push nut locations, 2

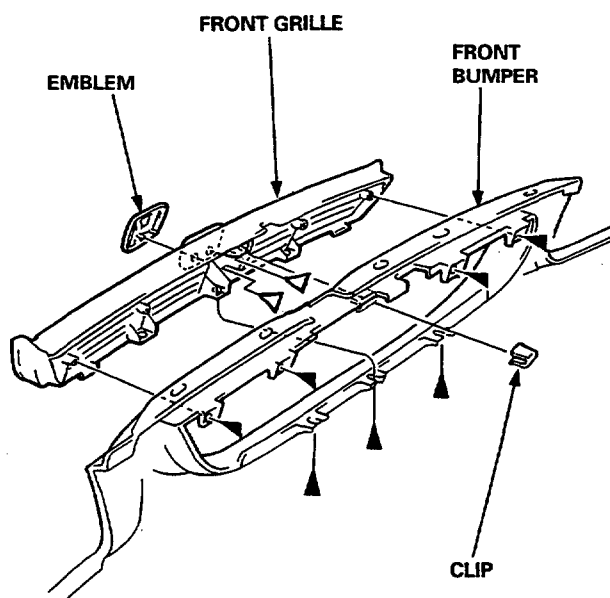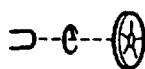

Installation is the reverse of the removal procedure.

Tailgate Spoiler

Replacement

NOTE:


- Take care not to scratch the tailgate.
- An assistant is helpful when removing the tailgate spoiler.

1. Open the tailgate, then remove the nuts while holding the tailgate spoiler.
2. Remove the tailgate spoiler by lifting it up.

●: Nut locations, 4



6 x 1.0 mm
9.8 N·m
(1.0 kgf·m,
7.2 lbf·ft)

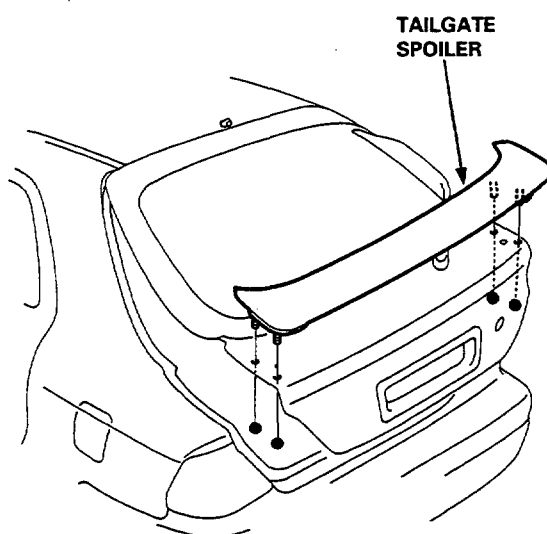

3. Installation is the reverse of the removal procedure.