


Tailgate Weatherstrip

Replacement


When installing the tailgate weatherstrip, align it with the alignment mark on the tailgate opening.

NOTE:

- Before installing the tailgate weatherstrip, apply clear sealant in its channel at all around.
- Make sure there are no wrinkles in the weatherstrip.
- Check for water leaks.

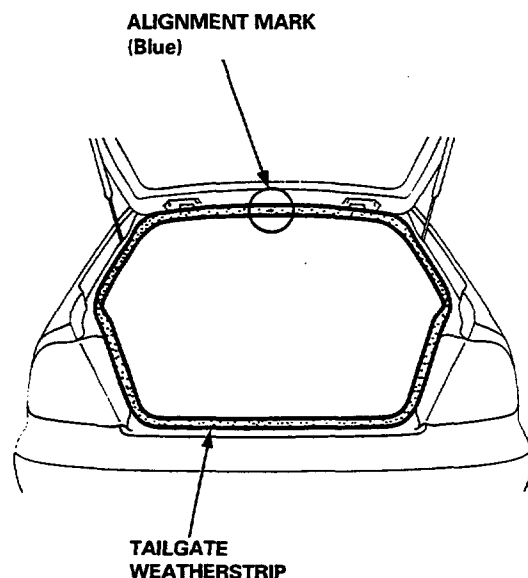

Sealant: Cemedine #8500, or equivalent

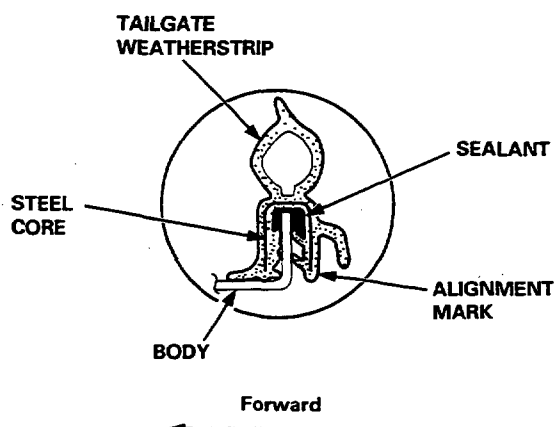

License Plate Trim



Replacement

CAUTION: Wear gloves to remove and install the license plate trim.


NOTE: Take care not to scratch the tailgate.

1. Remove:
 - Tailgate side trims (see page 20-91)
 - Tailgate trim panel (see page 20-91)
 - Tailgate latch (see page 20-98)


2. Remove the nuts.

NOTE: Take care not to drop the nuts inside the trunk lid.

• Nut locations, 4

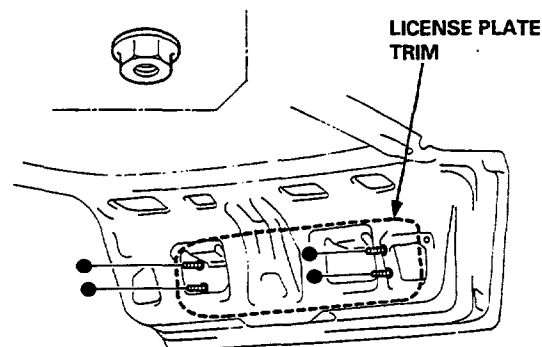

3. Detach the clips, then remove the license plate trim.

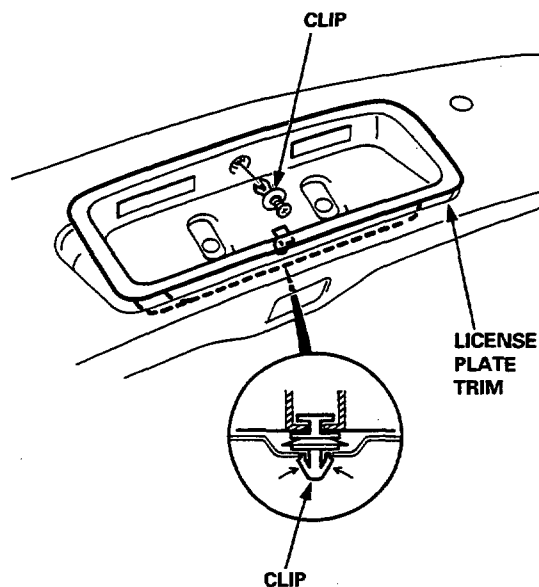

4. Installation is the reverse of the removal procedure.

NOTE: If damaged, replace the clip.