




Ceiling Light Test/Replacement


1. Turn the ceiling light switch OFF.
2. Pry off the lens.
3. Remove the two mounting bolts and the ceiling light housing.
4. Disconnect the connectors.

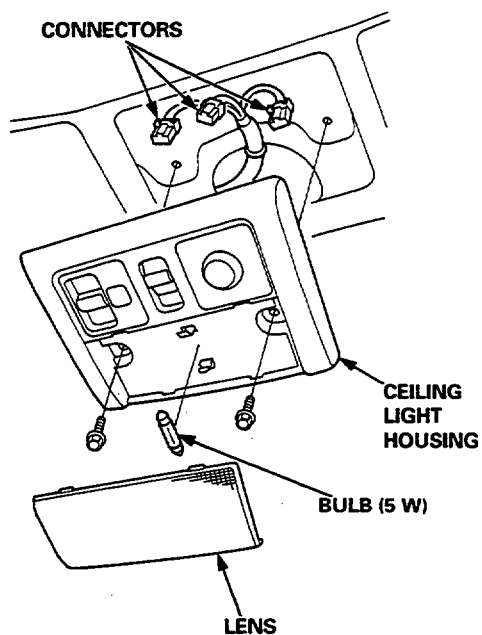

NOTE: LHD type is shown, RHD type is similar.

5. Check for continuity between the terminals in each switch position according to the table.

| Terminal Position | A | | B | C | Ground |
|----------------------|---|---|---|---|--------|
| OFF | ○ | ○ | ○ | | |
| MIDDLE | ○ | ○ | ○ | ○ | |
| ON | ○ | ○ | ○ | | ○ |

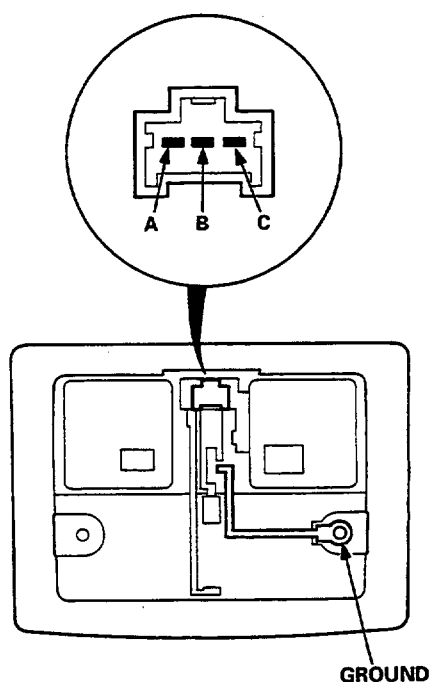

From No.3 (7.5A) FUSE

