




## Reassembly

**NOTE:** Before reassembling, check that all parts are clean.

1. Install the adjuster strut assembly, then upper return spring and spring A in the brake shoes.
2. Connect the parking cable to the parking brake lever.
3. Apply grease on each sliding surface.


**CAUTION:** Contaminated the brake linings reduce stopping power. Keep grease or oil off the brake linings. Wipe any excess grease off the parts.

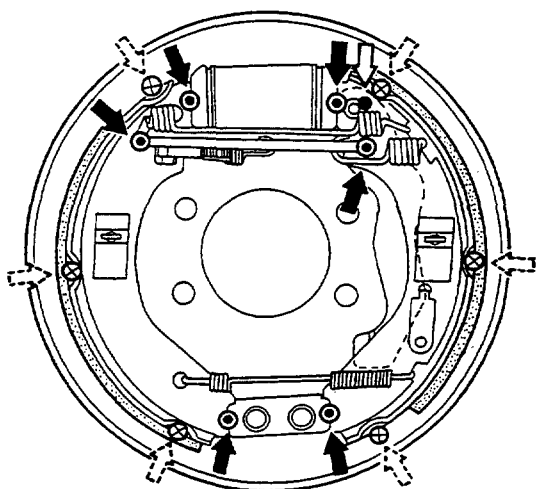

### Greasing Symbols:

- ➡ ● Brake shoe ends
- ↔ ⊗ Opposite the edge of the shoe
- ↗ ● Sliding surface

4. Install the brake shoe assembly, then hook the lower return spring.
5. Install the tension pins and retaining springs.

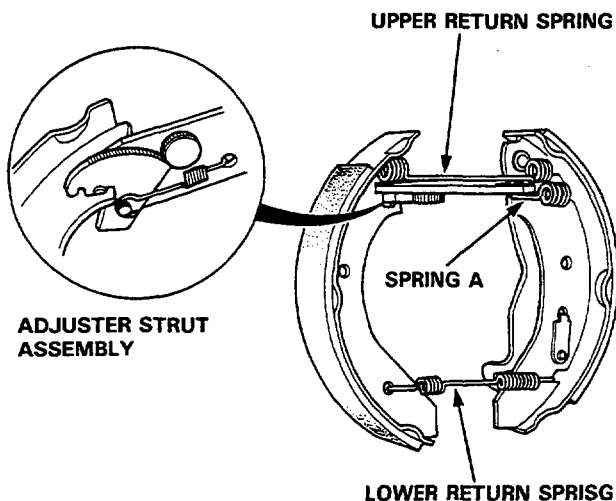

6. Install the brake drum.
7. If the wheel cylinder has been removed, bleed the brake system (see page 19-6).
8. Depress the brake pedal several times to set the self adjusting brake.
9. Adjust the parking brake (see page 19-5).