



Rocker Shaft Collars

Selection (D16Y2 engine)


CAUTION:

If the codes are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

Camshaft Holder Distance Code Location (Marks)

Marks have been stamped on the upper face end of the cylinder head as a code for the distance of each camshaft holder.

Use them, and the marks stamped on the rocker shaft collar (code for collar length), to choose the correct rocker shaft collars from the table below.

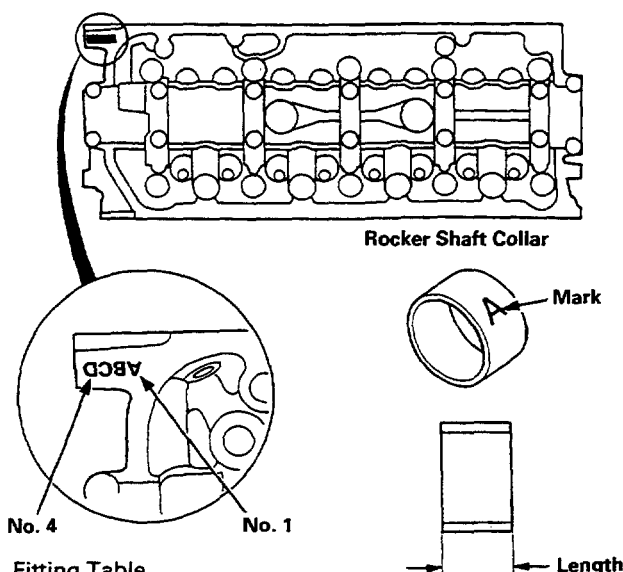

Fitting Table

Head Marks	A	B	C	D	E	F
Shaft Collar Marks	A	B	C	D	E	F

Rocker Shaft Collar

Marks	Part Number	Length mm (in)
A	14651 - P08 - 000	12.325 - 12.375 (0.4852 - 0.4872)
B	14652 - P08 - 000	12.275 - 12.325 (0.4833 - 0.4852)
C	14653 - P08 - 000	12.225 - 12.275 (0.4813 - 0.4833)
D	14654 - P08 - 000	12.175 - 12.225 (0.4793 - 0.4813)
E	14655 - P08 - 000	12.125 - 12.175 (0.4774 - 0.4793)
F	14656 - P08 - 000	12.075 - 12.125 (0.4754 - 0.4774)

Selection (D15Z3 engine)


CAUTION:

If the codes are indecipherable because of an accumulation of dirt and dust, do not scrub them with a wire brush or scraper. Clean them only with solvent or detergent.

Camshaft Holder Length Code Location (Marks)

Marks have been stamped on the upper face end of the cylinder head as a code for the length of each camshaft holder.

Use them, and the marks stamped on the rocker shaft collar (code for collar length), to choose the correct rocker shaft collars from the table below.

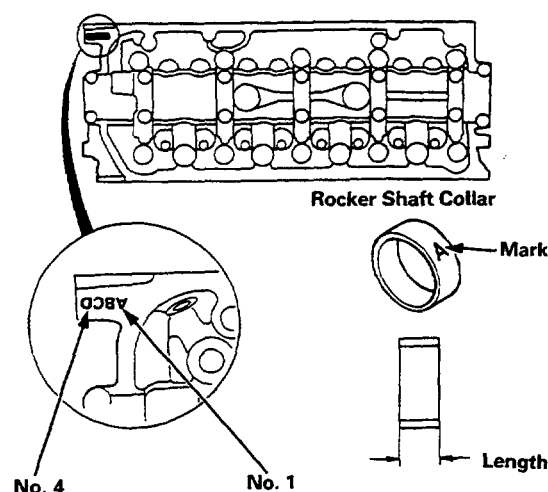

Fitting Table

Cylinder Head Marks	A	B	C	D	E	F
Shaft Collar Marks	A	B	C	D	E	F

Rocker Shaft Collar

Marks	Part Number	Length mm (in)
A	14651 - P07 - 000	8.925 - 8.975 (0.3514 - 0.3533)
B	14652 - P07 - 000	8.875 - 8.925 (0.3494 - 0.3514)
C	14653 - P07 - 000	8.825 - 8.875 (0.3474 - 0.3494)
D	14654 - P07 - 000	8.775 - 8.825 (0.3455 - 0.3474)
E	14655 - P07 - 000	8.725 - 8.775 (0.3435 - 0.3455)
F	14656 - P07 - 000	8.675 - 8.725 (0.3415 - 0.3435)