


Sunroof

Rear Fog Light

Sunroof Relay Testing


There should be continuity between A and B terminals, when applying battery voltage to C (positive) and D (negative) terminals. There should be no continuity when the battery is disconnected.

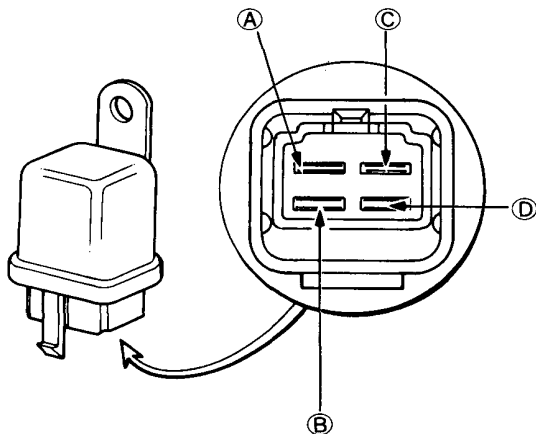


Tilt Switch Testing (Coupe)

Check for continuity between the terminals. There should be continuity when the sunroof is not tilted. There should be no continuity when the sunroof is tilted.

TILT SWITCH TERMINALS

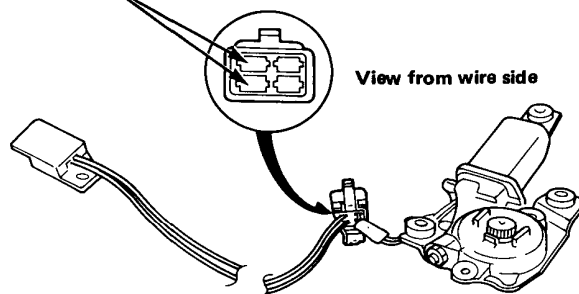

Rear Fog Light Wiring Diagram

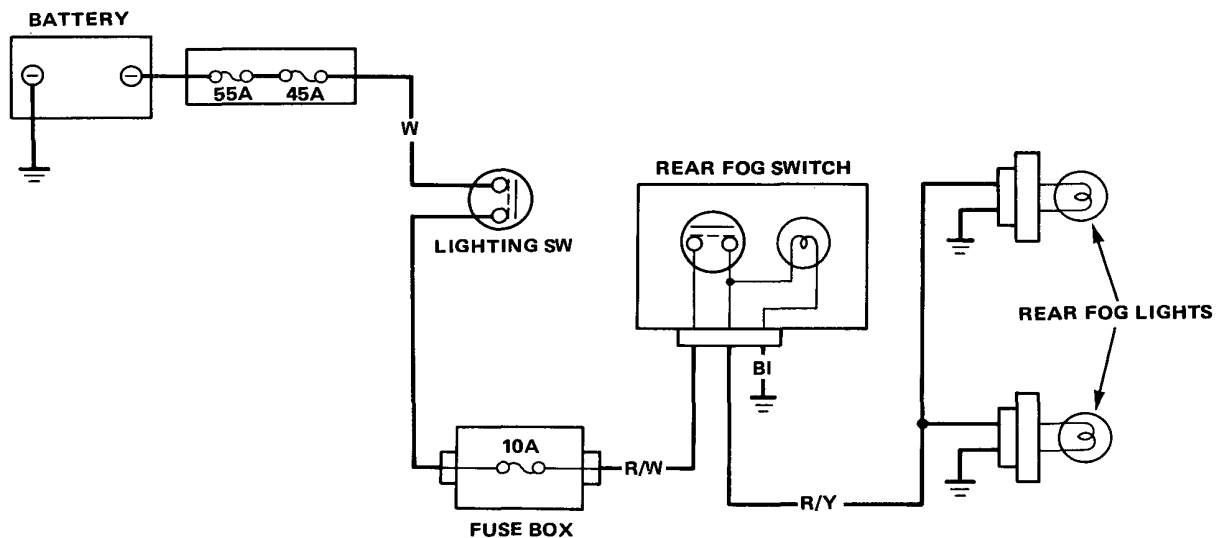


Rear Fog Light, Day Time Running Light



Rear Fog Light Switch Testing

Check for continuity according to the table below.

	B	D		E
OFF		○	⊖	○
ON	○	○	⊖	○

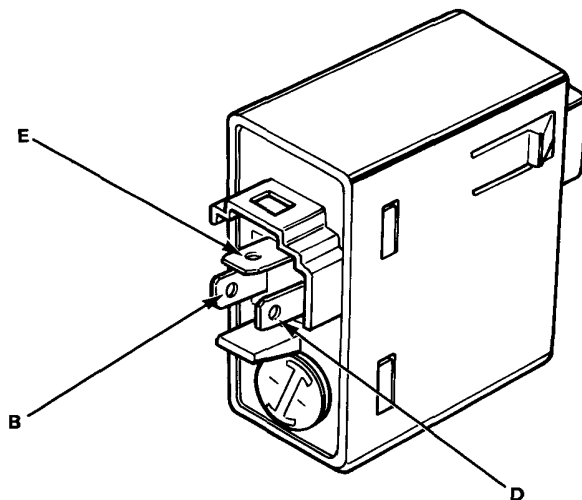

Day Time Running Light Wiring Diagram

