


Lubrication Points

No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SE or SF SAE Viscosity: See chart below
2	Transmission Manual Automatic	API Service Grade: SE or SF SAE10W-30 or 10W-40 grade oil DEXRON® or DEXRON® II Automatic transmission fluid
3	Brake line (Including ALB line for ALB models)	Brake fluid DOT 3 or DOT 4
4	Clutch line	Brake fluid DOT 3
5	Steering gearbox (Power)	Power Steering grease P/N 08733-B070E
6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23	Steering ball joint Steering Boot Shift lever pivot (Manual) Shift rod clevis bushings Select lever (Automatic) Pedal linkage Throttle cable end Brake master cylinder pushrod Parking brake wire end Trunk hinges Door hinges upper and lower Door opening detents Fuel filler lid Engine hood hinges Engine hood latch Parking brake equalizer Clutch release fork Clutch master cylinder pushrod	Multi-purpose Grease
24	Caliper Piston seal Dust seal Caliper pin Piston	Silicone Grease
25	Power steering system	Power steering fluid P/N 08208-99961

Recommended Engine oil
(SE or SF Grade Only)

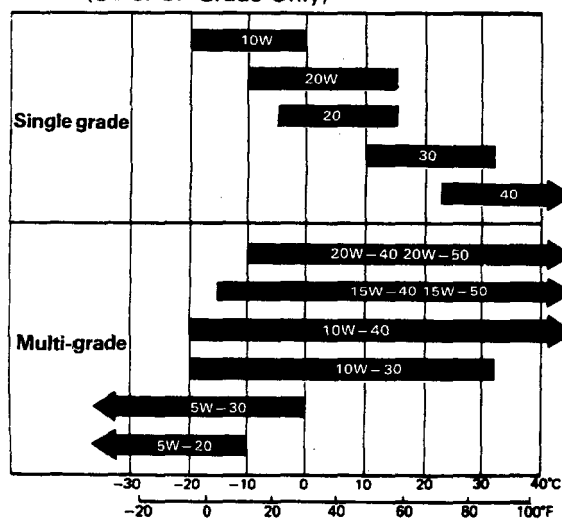

Engine oil viscosity for
ambient temperature ranges.

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

