


REAR FLOOR SIDE REINFORCEMENT (ASSY)



REPLACEMENT

With the body lower back panel removed.

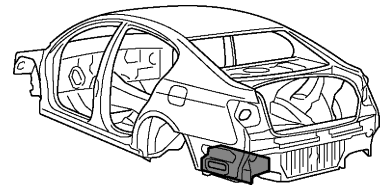

F22275A

REMOVAL

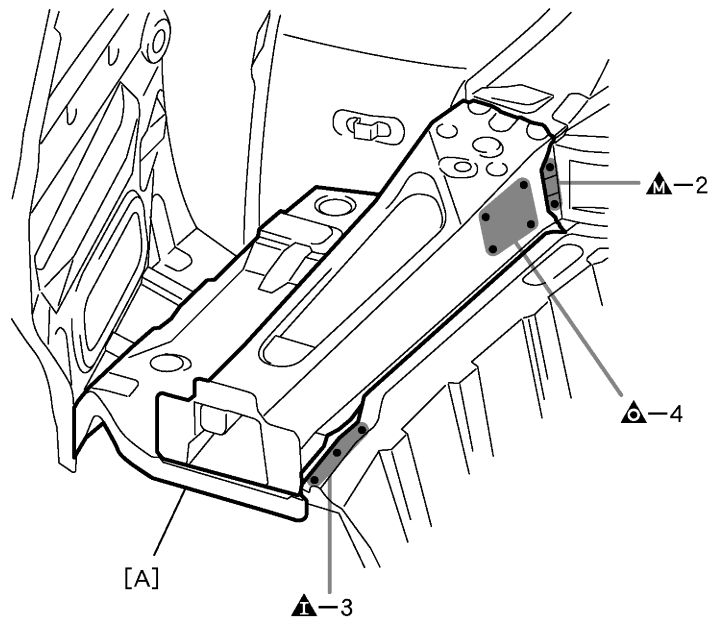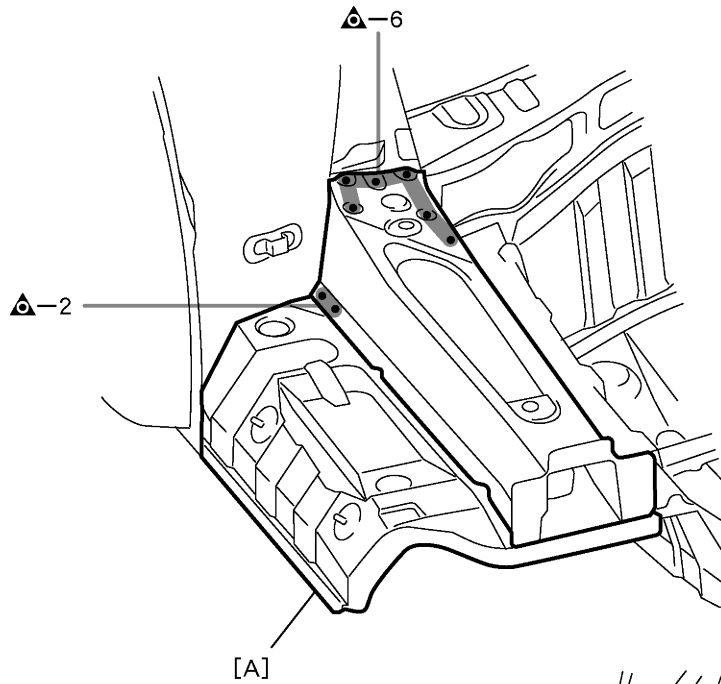



F22275

POINT

1 Remove the [A], at the same time.



PART NAME

[A] Rear Floor Pan To Quarter Panel Extension

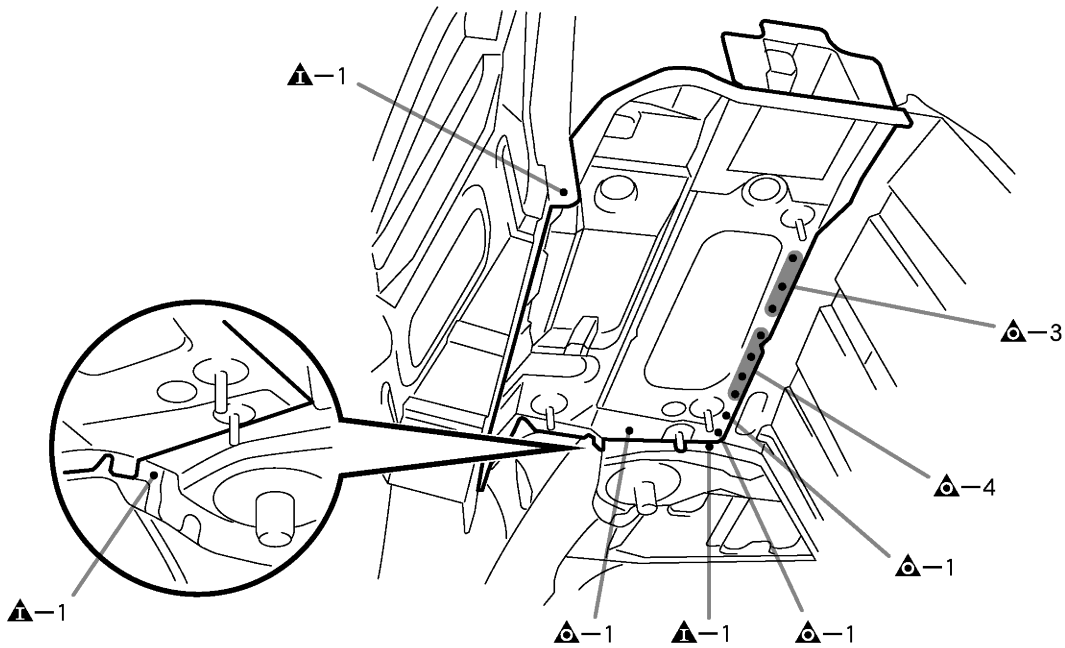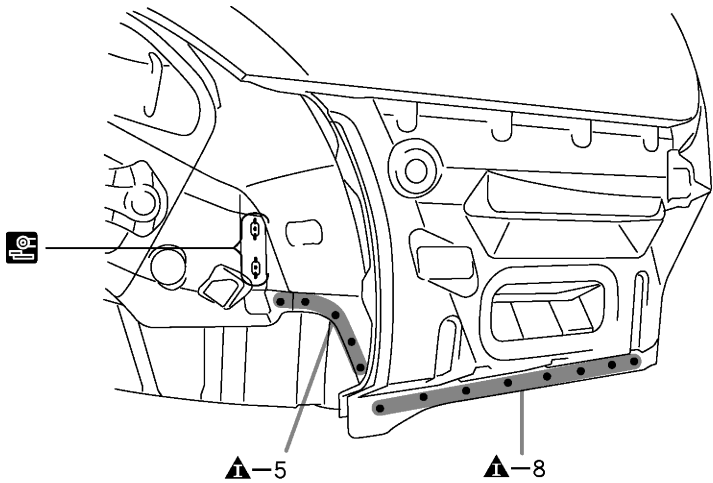

INSTALLATION


- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

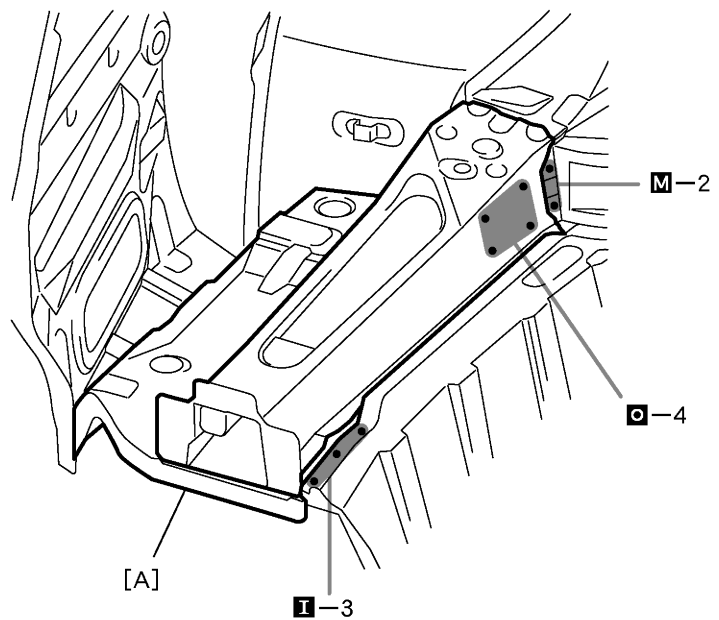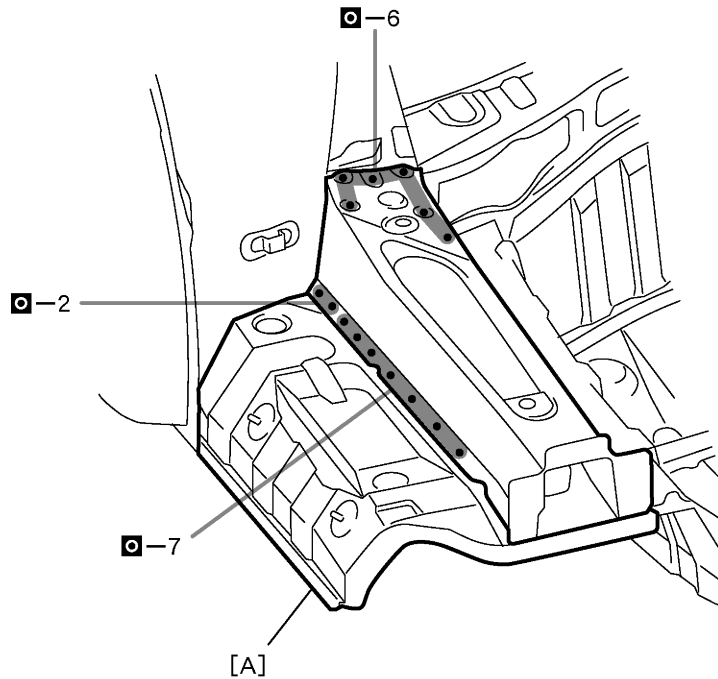

F22277

PART NAME

[A] Rear Floor Pan To Quarter Panel Extension

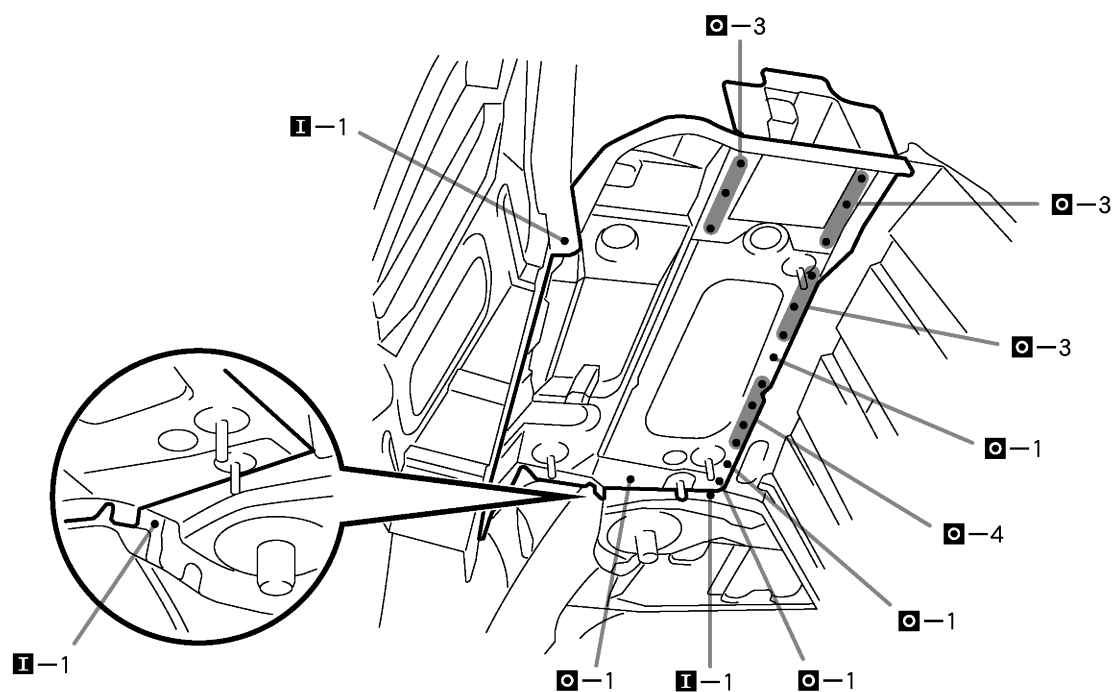

10 mm (0.39 in.)