


SYSTEM DIAGRAM

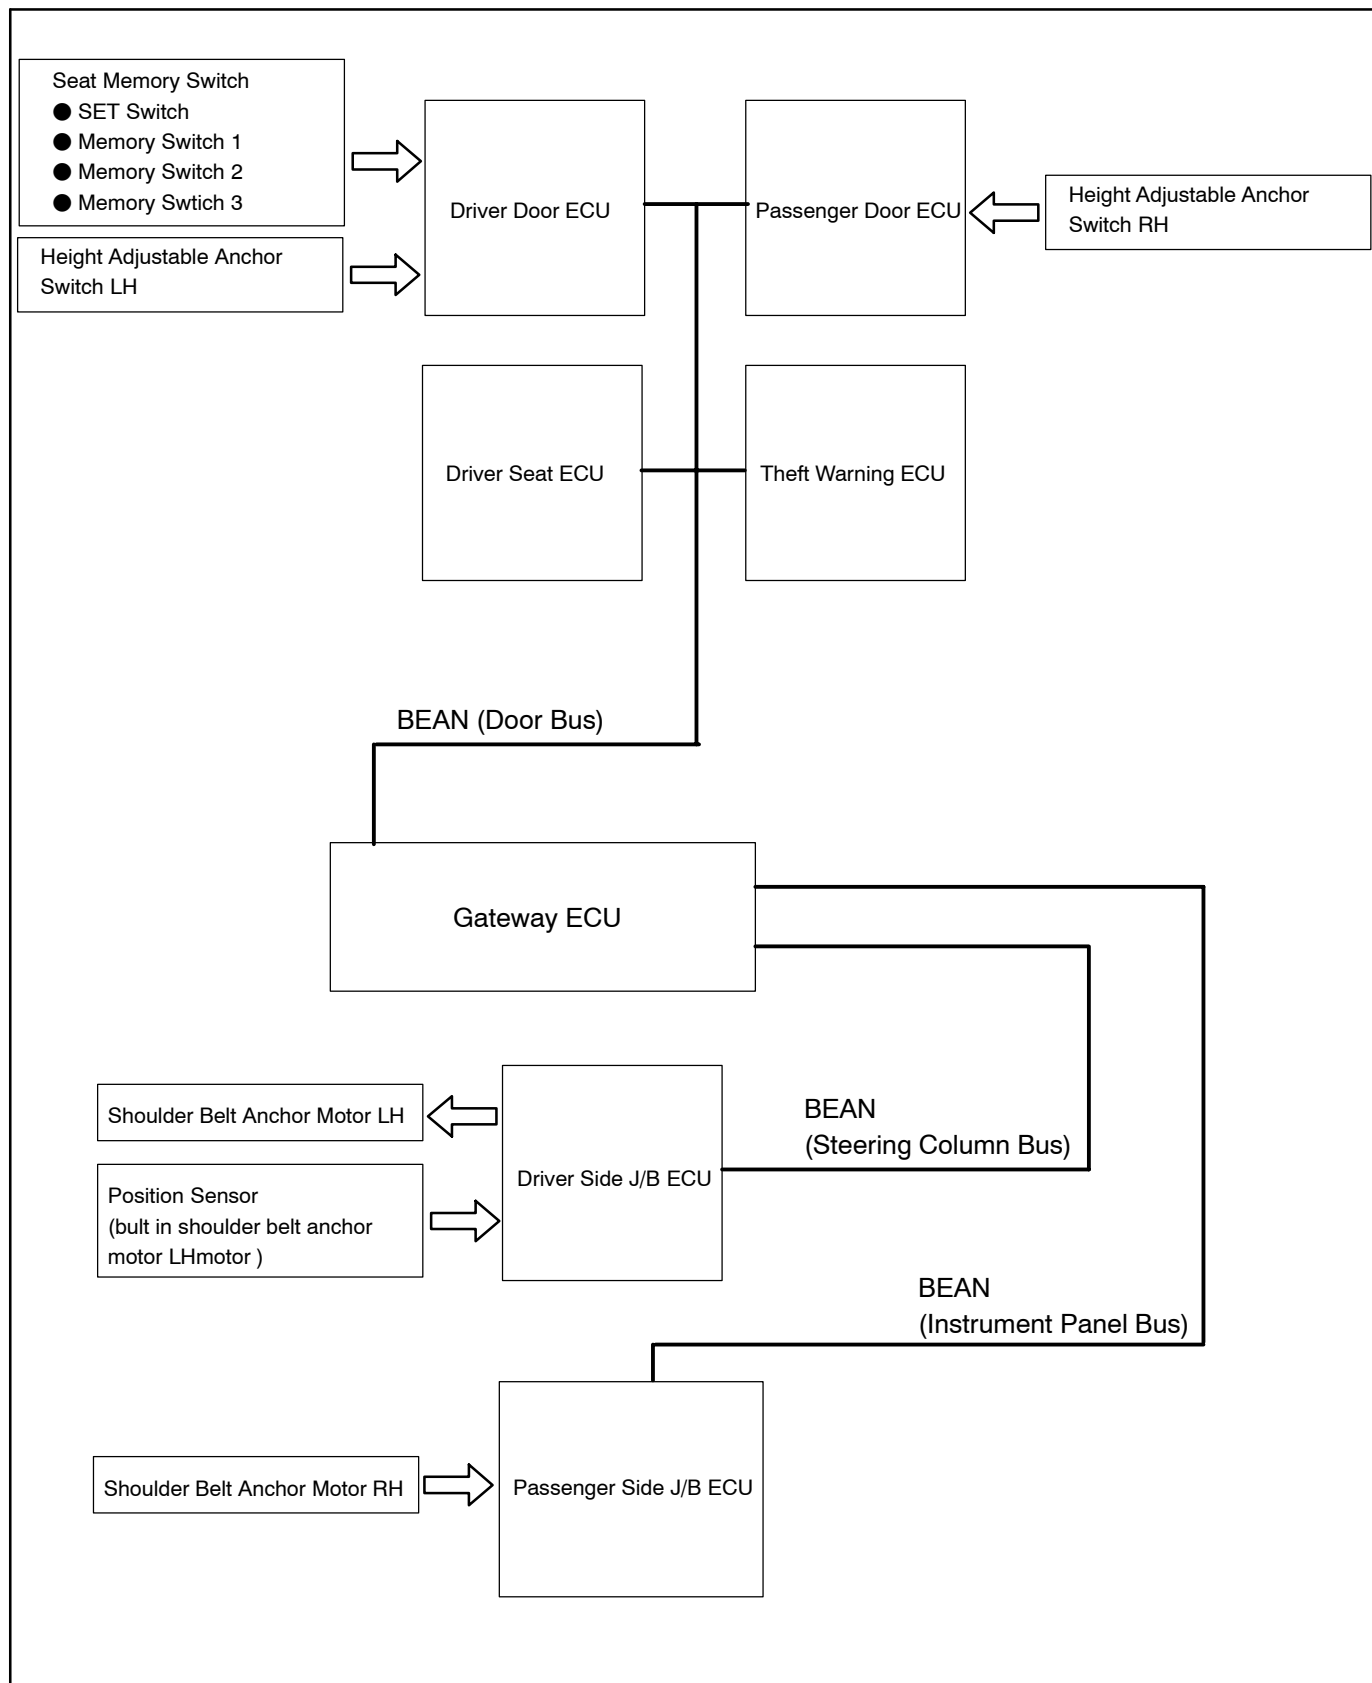

Sender	Receiver	Signal	Communication Line
Passenger Door ECU	Passenger Side J/B ECU	• Passenger side seat belt adjuster signal	BEAN
Driver Side J/B ECU	Driver Seat ECU	• Belt anchor position data signal • Belt anchor memory restoration execution signal • Memory data transmission request signal • Belt anchor memory restoration completion signal	BEAN
Driver Seat ECU	Driver Side J/B ECU	• Memory registration command signal • Memory restoration command signal • Belt anchor restoration permit signal • Belt anchor restoration position signal	BEAN
Driver Door ECU	Theft Deterrent ECU	• Memory switch SET ON signal • Memory switch M1 ON signal • Memory switch M2 ON signal • Memory switch M3 ON signal	BEAN
Driver Door ECU	Driver Seat ECU	• Memory switch signal	BEAN
Driver Door ECU	Driver Side J/B ECU	• Seat belt adjuster activation signal	BEAN