



ENTIRE COMBINATION METER DOES NOT OPERATE


WIRING DIAGRAM

LHD Models:

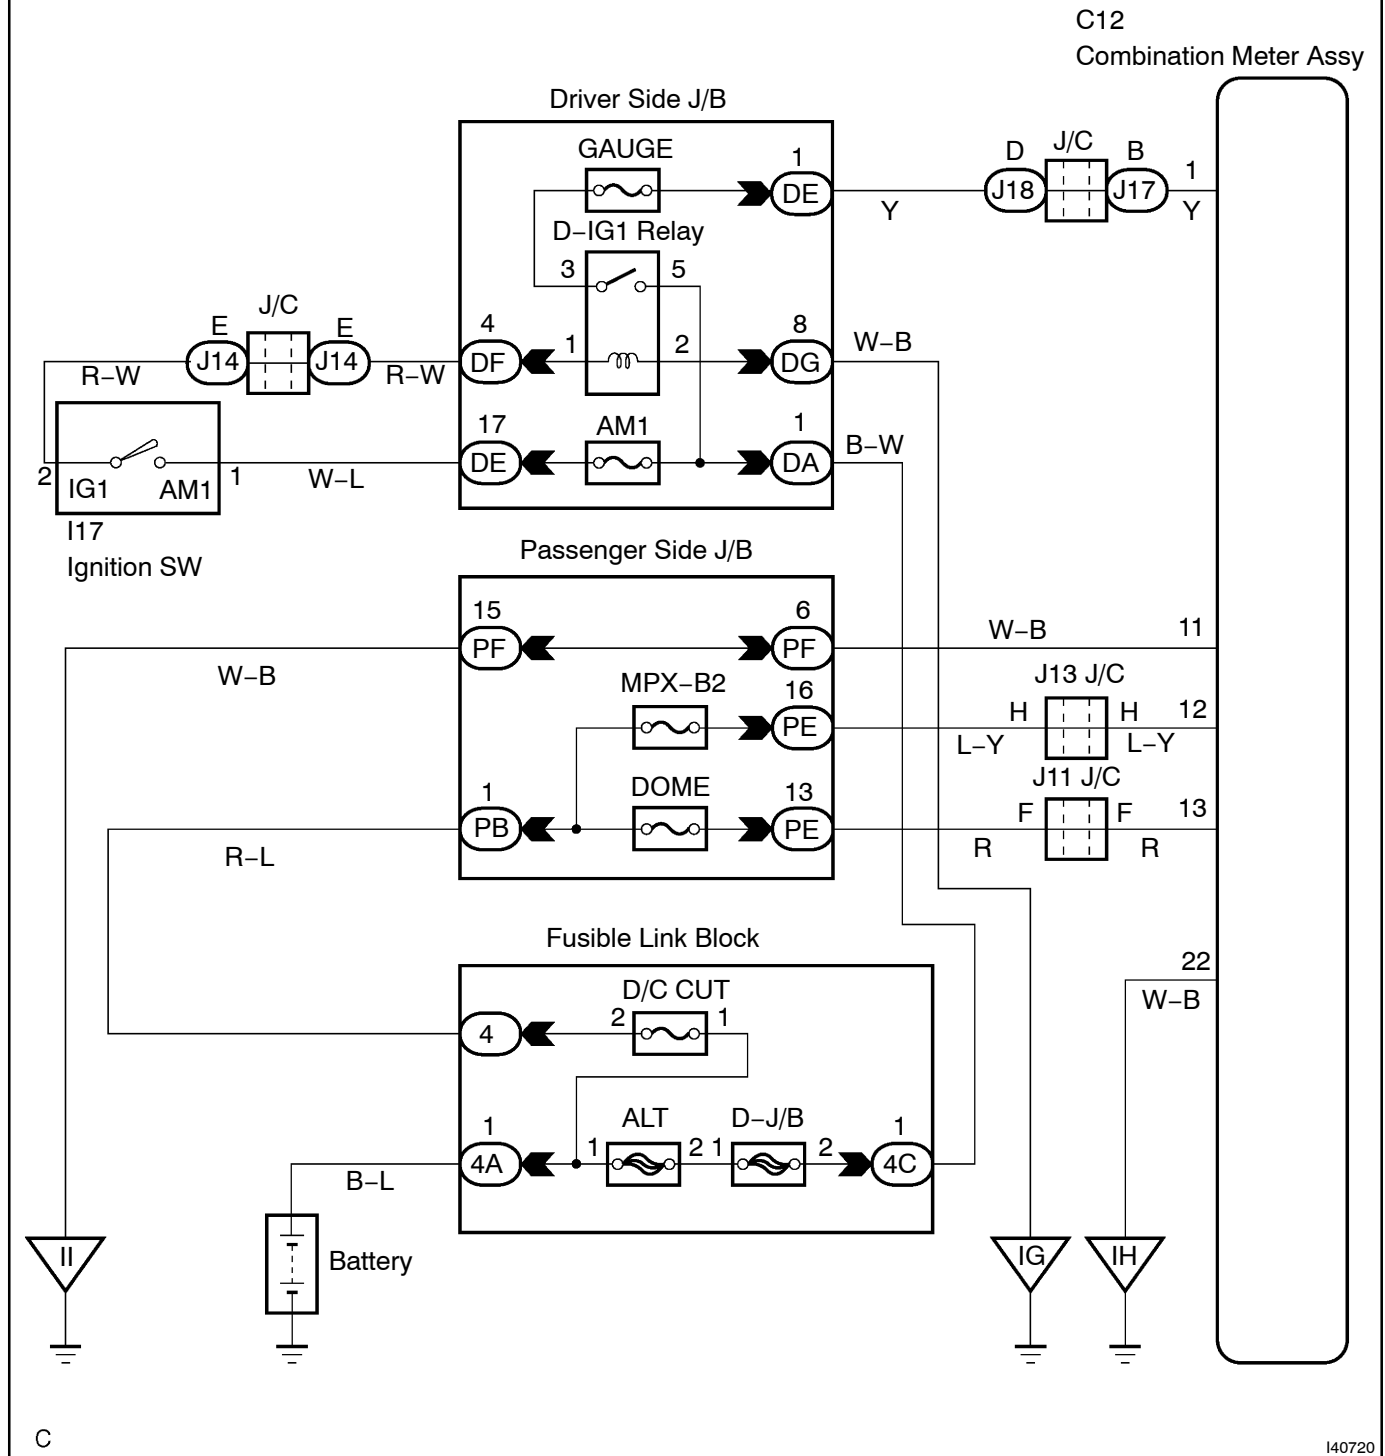

C12
Combination Meter Assy

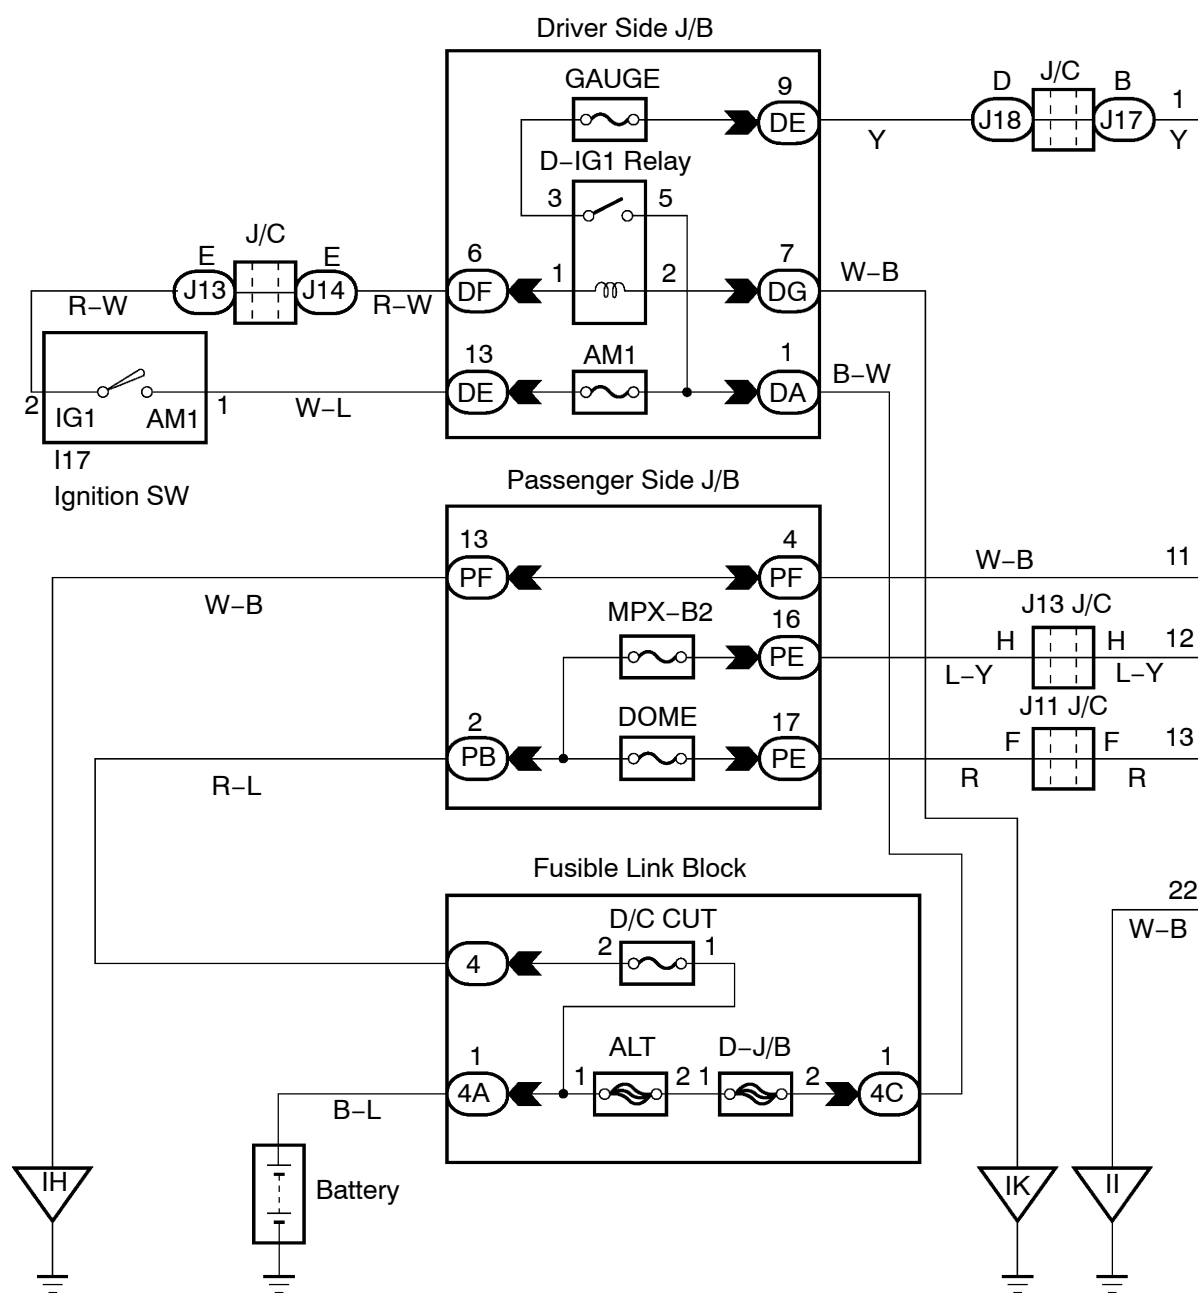

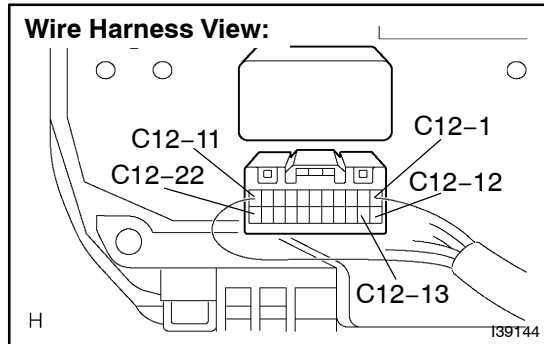INSPECTION PROCEDURE**1 INSPECT COMBINATION METER ASSY**

- (a) Measure the resistance according to the value(s) in the table below.

Standard:

Terminal No	Condition	Specified condition
C12-11 - Body ground	Always	Below 1 Ω
C12-22 - Body ground	Always	Below 1 Ω

- (b) Measure the voltage according to the value(s) in the table below.

Standard:

Terminal No	Condition	Specified condition
C12-12 - Body ground	Always	10 to 14 V
C12-13 - Body ground	Always	10 to 14 V
C12-1 - Body ground	Ignition switch ACC or ON	10 to 14 V

NG**REPAIR OR REPLACE HARNESS OR CONNECTOR****OK****REPLACE COMBINATION METER ASSY(SEE PAGE 71-21)**