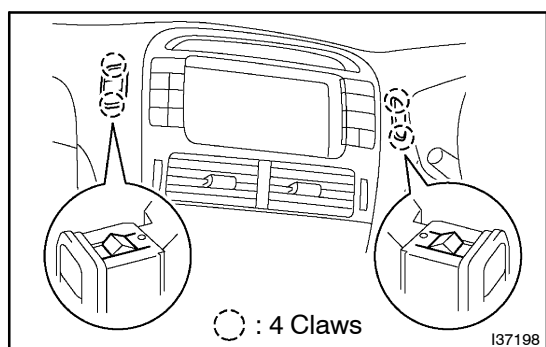


MULTI-DISPLAY REPLACEMENT

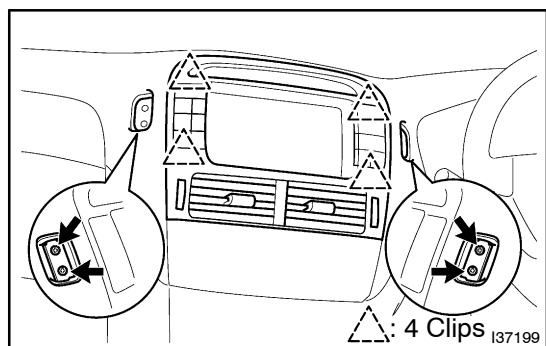
67140-01

HINT:

- COMPONENTS: [SEE PAGE 71-1](#).
 - LOCATION: [SEE PAGE 67-2](#).
 - Installation is in the reverse order of removal.
1. **SHIP MODE SETTING** ([SEE PAGE 67-5](#))
 2. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER CENTER** ([SEE PAGE 71-6](#))
 3. **REMOVE PANEL INSTRUMENT CLUSTER FINISH LOWER** ([SEE PAGE 71-6](#))
 4. **REMOVE RADIO RECEIVER ASSEMBLY W/BACKET** ([SEE PAGE 67-5](#))
 5. **SHIP MODE CONFIRMATION** ([SEE PAGE 67-5](#))

**6. REMOVE TEMPERATURE CONTROL SWITCH ASSY**

- (a) Disengage the 2 claws.
- (b) Disconnect the connector and remove the temperature control switch assembly.
- (c) Perform the same procedure on the other side.

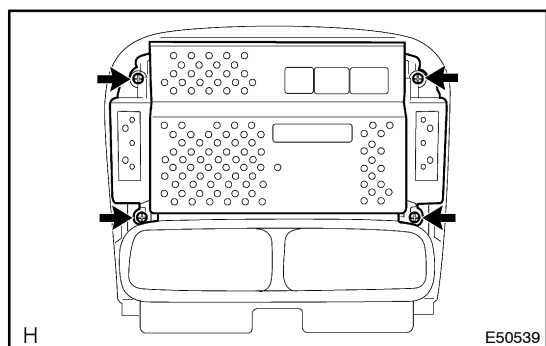
**7. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSY CENTER**

- (a) Remove the 4 bolts.
- (b) Disengage the 4 clips.

NOTICE:

In order to prevent the safety pad from being damaged, do not pry with a screwdriver or similar tool.

- (c) Disconnect the connector and remove the instrument cluster finish panel sub-assy center.

**8. REMOVE MULTI-DISPLAY**

- (a) Remove the 4 screws and multi-display.

HINT:

After the replacement, perform the screen noise automatic adjustment when screen noise occurs ([see page 05-1806](#)).