



# SERVICE BULLETIN

QUALITY INFORMATION ANALYSIS

OVERSEAS SERVICE DEPT. MITSUBISHI MOTORS CORPORATION

SERVICE BULLETIN		No.: MSB-97E52-003	
		Date: 1997-11-24	<b>&lt;Model&gt;</b> GALANT(EA0)
<b>Subject:</b> SEATBACK DISASSEMBLY PROCEDURE FOR SIDE AIR BAG EQUIPPED CAR			<b>&lt;M/Y&gt;</b> 97-10
<b>Group:</b> INTERIOR		<b>Draftno:</b> 97-JY-025	
<b>INFORMATION</b>	OVERSEAS SERVICE DEPT	 R. USAMI - MANAGER QUALITY INFORMATION ANALYSIS	

## 1. Description:

With supply of the service seat wire and seatback pad for side air bag equipped cars, the seatback disassembly procedure has been established.

## 2. Applicable Manuals:

Manual	Pub. No.	Language	Page(s)
'97 GALANT Workshop Manual chassis	PWDE9611	(English)	52A-13, 52A-14
	PWDS9612	(Spanish)	
	PWDF9613	(French)	
	PWDG9614	(German)	
	PWDD9615	(Dutch)	
	PWDW9616	(Swedish)	

## 3. Details:


## DISASSEMBLY AND REASSEMBLY

52200150297


**Caution**  
 Do not disassemble the front seatback assembly with built-in side air bag module.

&lt;Deleted&gt;

&lt;Normal seat&gt;

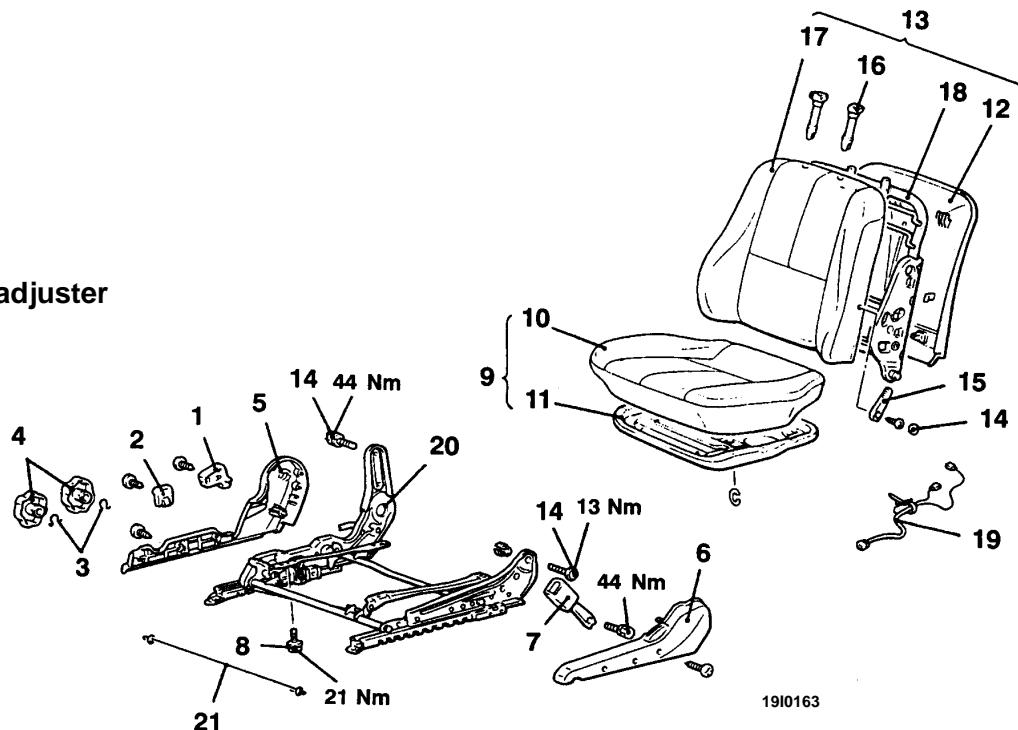


Seat without height adjuster

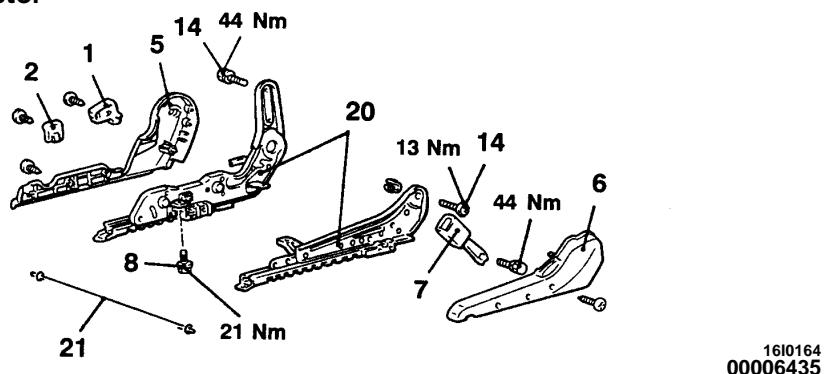

## Disassembly steps

1. Reclining adjuster knob  
 2. Slide adjuster knob  
 3. Clip  
 4. Height adjuster knob  
 5. Front seat shield cover  
 6. Front seat hinge cover  
 7. Inner seat belt  
 8. Bolt  
 9. Front seat cushion assembly  
 10. Front seat cushion cover  
 11. Front seat cushion frame
- ◀ A ▶
12. Front seatback panel  
 13. Front seatback assembly  
 14. Cap  
 15. Lumbar support lever  
 16. Headrest restraint guide  
 17. Front seatback cover  
 18. Front seatback frame  
 19. Seat heater harness  
 20. Seat adjuster assembly  
 21. Wire

## &lt;Power seat&gt;

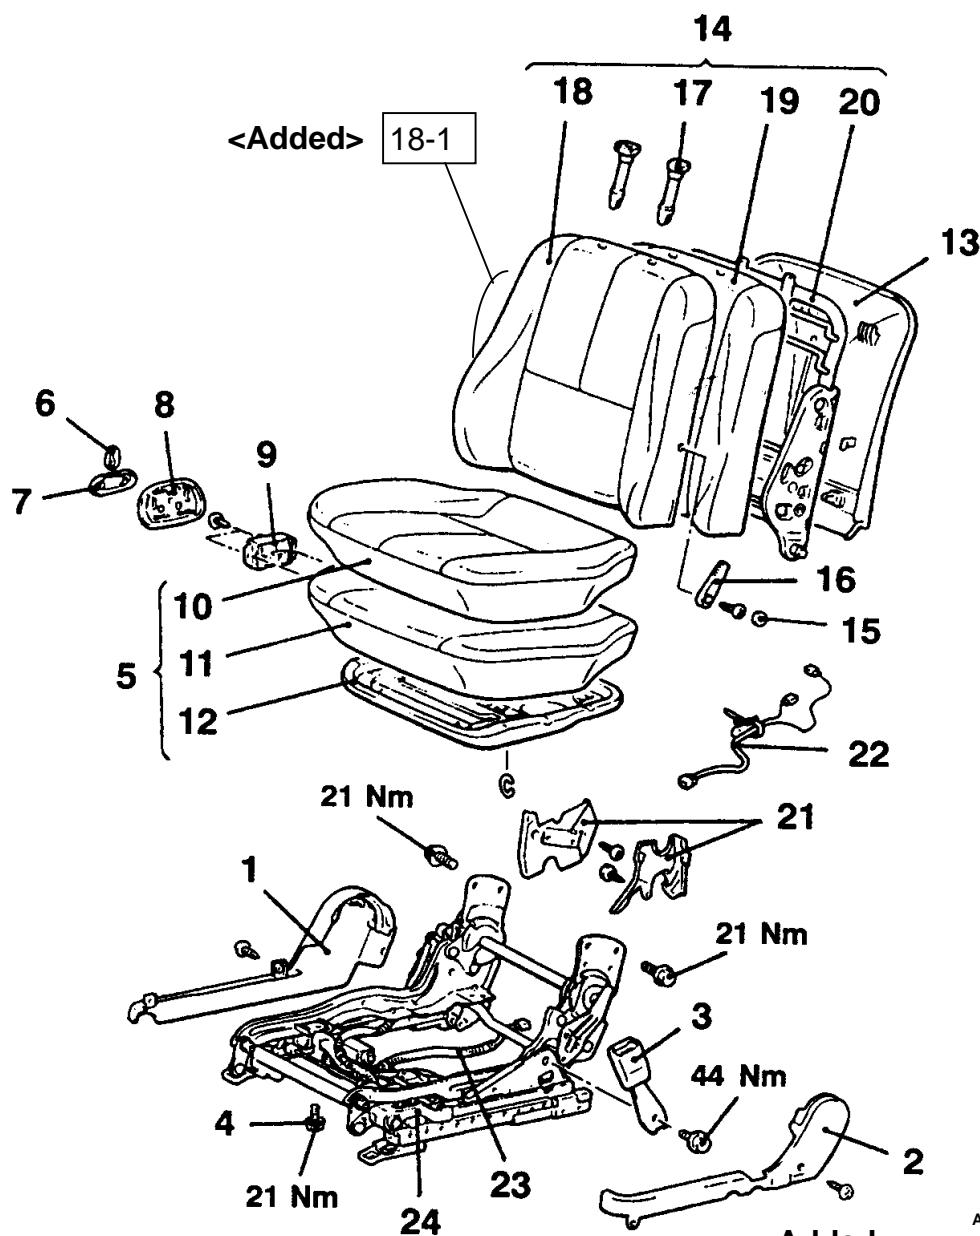

**<Added>**  
18-1. Front seat wire

## Disassembly steps

1. Front seat side shield cover
2. Front seat hinge cover
3. Inner seat belt
4. Bolt
5. Front seat cushion assembly
6. Front seat reclining adjuster lever
7. Front seat slide adjuster lever
8. Garnish
9. Power seat switch
10. Front seat cushion cover
11. Front seat cushion pad
12. Front seat cushion frame

◀A▶

13. Front seatback panel
14. Front seatback assembly
15. Cap
16. Lumbar support lever
17. Headrest guide
18. Front seatback cover
19. Front seatback pad
20. Front seatback frame
21. Reclining adjuster lower cover
22. Seat heater harness
23. Power seat harness
24. Power seat adjuster assembly

**<Added>** <Vehicles without SRS side air bag>