


CARGO BED SIDE MOLDING

EXTERIOR/INTERIOR TRIM


32. Cargo Bed Side Molding

A: REMOVAL


- 1) Remove cargo bed side tray. <Ref. to EI-63, REMOVAL, Cargo Bed Side Tray.>
- 2) Using TORX® bit T25, remove bolt to remove luggage pipe lower cover.

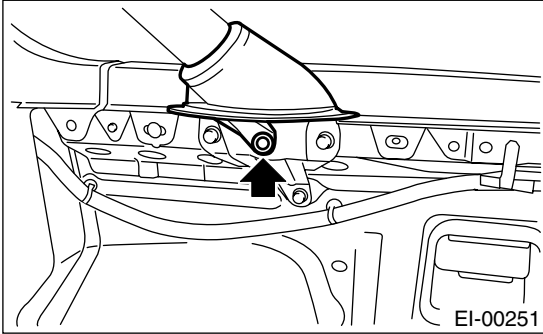

- 3) Remove bolt using TORX® bit T25.

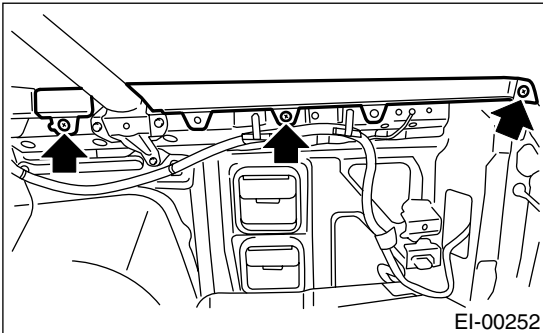

- 4) Remove clip and cargo bed side molding.

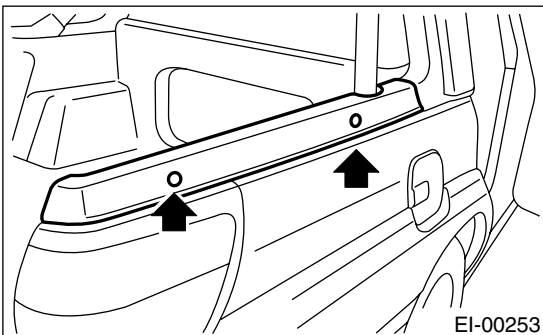

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Do not reuse the removed clips; use new ones.

Tightening torque:

Cargo bed side molding;

7.5 N·m (0.76 kgf-m, 5.53 ft-lb)

Luggage pipe lower cover;

7.5 N·m (0.76 kgf-m, 5.53 ft-lb)

Cargo bed side tray;

7.5 N·m (0.76 kgf-m, 5.53 ft-lb)