


6. Sunroof Switch

A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Remove the spot map light. <Ref. to LI-29, REMOVAL, Spot Map Light.>
- 3) Disconnect the harness connector, and then remove the sunroof switch (A).

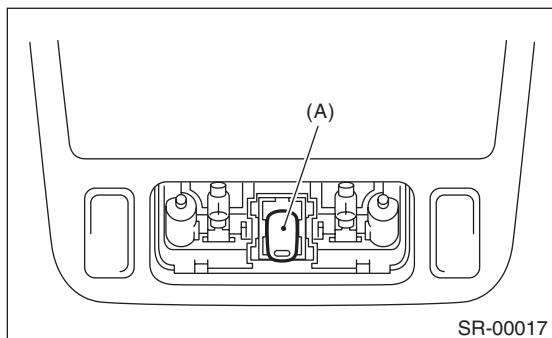

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

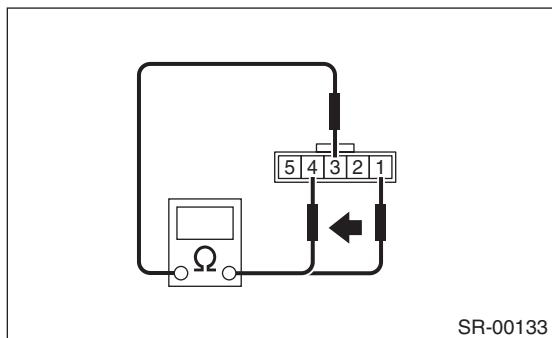

Inspect the continuity between each terminal during operation of the switches.

Switch	Terminal No.	Standard
Open	1 and 3	Less than 1 Ω
Close	4 and 3	Less than 1 Ω

Sunroof Switch

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)
