


4. Electrical Component Location

A: LOCATION

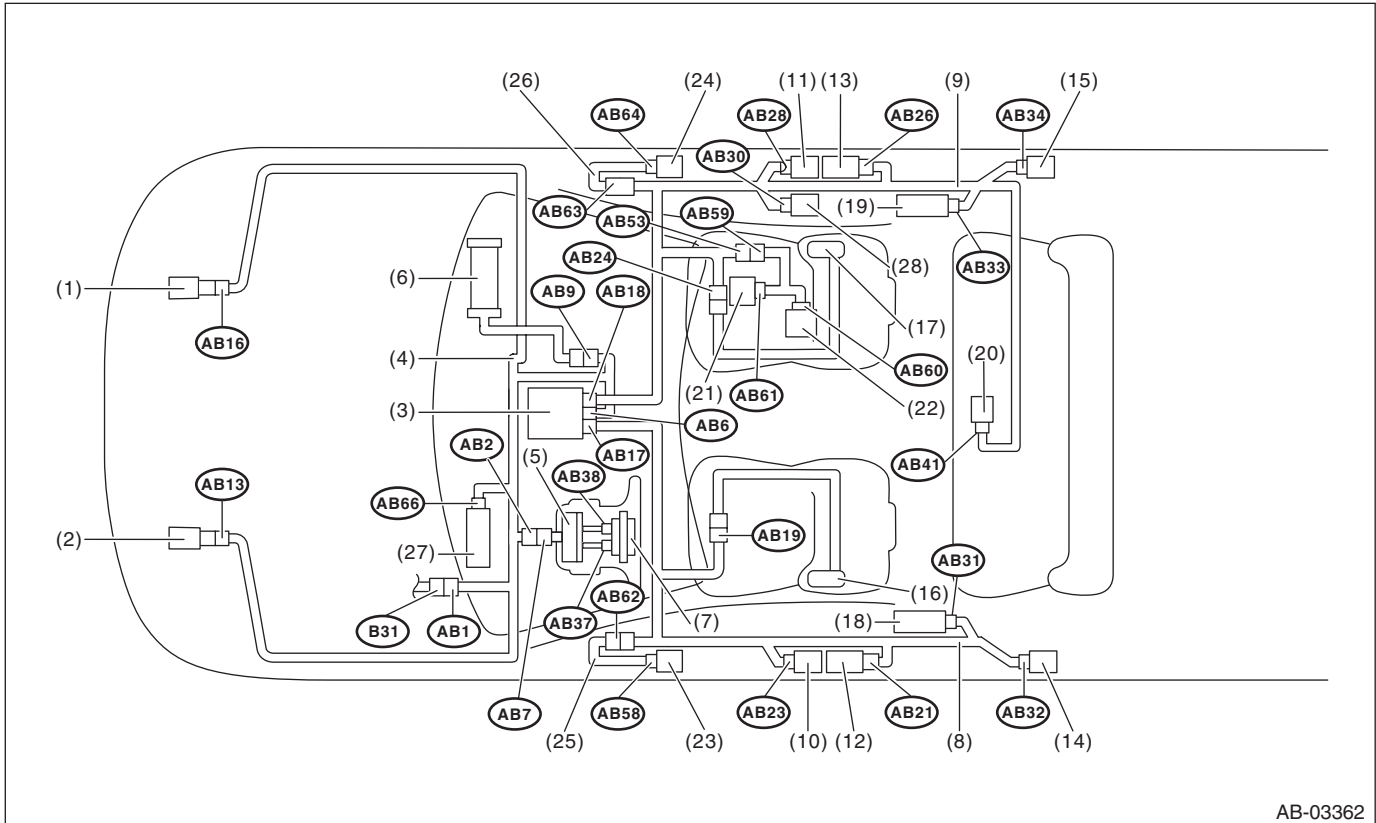

AB-03362

- | | | |
|---------------------------------|---------------------------------|--|
| (1) Front sub sensor RH | (11) Side airbag sensor RH | (20) Satellite safing sensor |
| (2) Front sub sensor LH | (12) Seat belt pretensioner LH | (21) Occupant detection control module |
| (3) Airbag control module | (13) Seat belt pretensioner RH | (22) Buckle switch RH |
| (4) Airbag main harness | (14) Curtain airbag sensor LH | (23) Front door impact sensor LH |
| (5) Roll connector | (15) Curtain airbag sensor RH | (24) Front door impact sensor RH |
| (6) Passenger's airbag inflator | (16) Side airbag inflator LH | (25) Door harness LH |
| (7) Driver's airbag inflator | (17) Side airbag inflator RH | (26) Door harness RH |
| (8) Airbag rear harness LH | (18) Curtain airbag inflator LH | (27) Knee airbag inflator |
| (9) Airbag rear harness RH | (19) Curtain airbag inflator RH | (28) Lap seat belt pretensioner RH |
| (10) Side airbag sensor LH | | |

Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

Connector No.	(AB1)	(AB2)	(AB6)	(AB7)	(AB9)	(AB13)	(AB16)	(AB17)	(AB18)	(AB19)	(AB21)	(AB23)
Pin	2	4	30	4	4	2	2	24	24	4	2	4
Color	Gray	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Black	Yellow
Male/Female	Male	Female	Female	Male	Female	Female	Female	Female	Female	Female	Female	Female
Connector No.	(AB24)	(AB26)	(AB28)	(AB30)	(AB31)	(AB32)	(AB33)	(AB34)	(AB37)	(AB38)	(AB41)	(AB53)
Pin	4	2	4	2	2	4	2	4	2	2	2	3
Color	Yellow	Black	Yellow	Orange	Black	Yellow	Black	Yellow	Orange	Black	Yellow	Dark gray
Male/Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Male
Connector No.	(AB58)	(AB59)	(AB60)	(AB61)	(AB62)	(AB63)	(AB64)	(AB66)				
Pin	2	3	2	6	2	2	2	2				
Color	Yellow	Dark gray	Yellow	Black	Yellow	Yellow	Yellow	Black				
Male/Female	Female	Female	Male	Female	Female	Female	Female	Female				