


Engine Electrical System

WIRING SYSTEM


18.Engine Electrical System

A: WIRING DIAGRAM

1. NON-TURBO MODEL (WITHOUT PUSH BUTTON START)

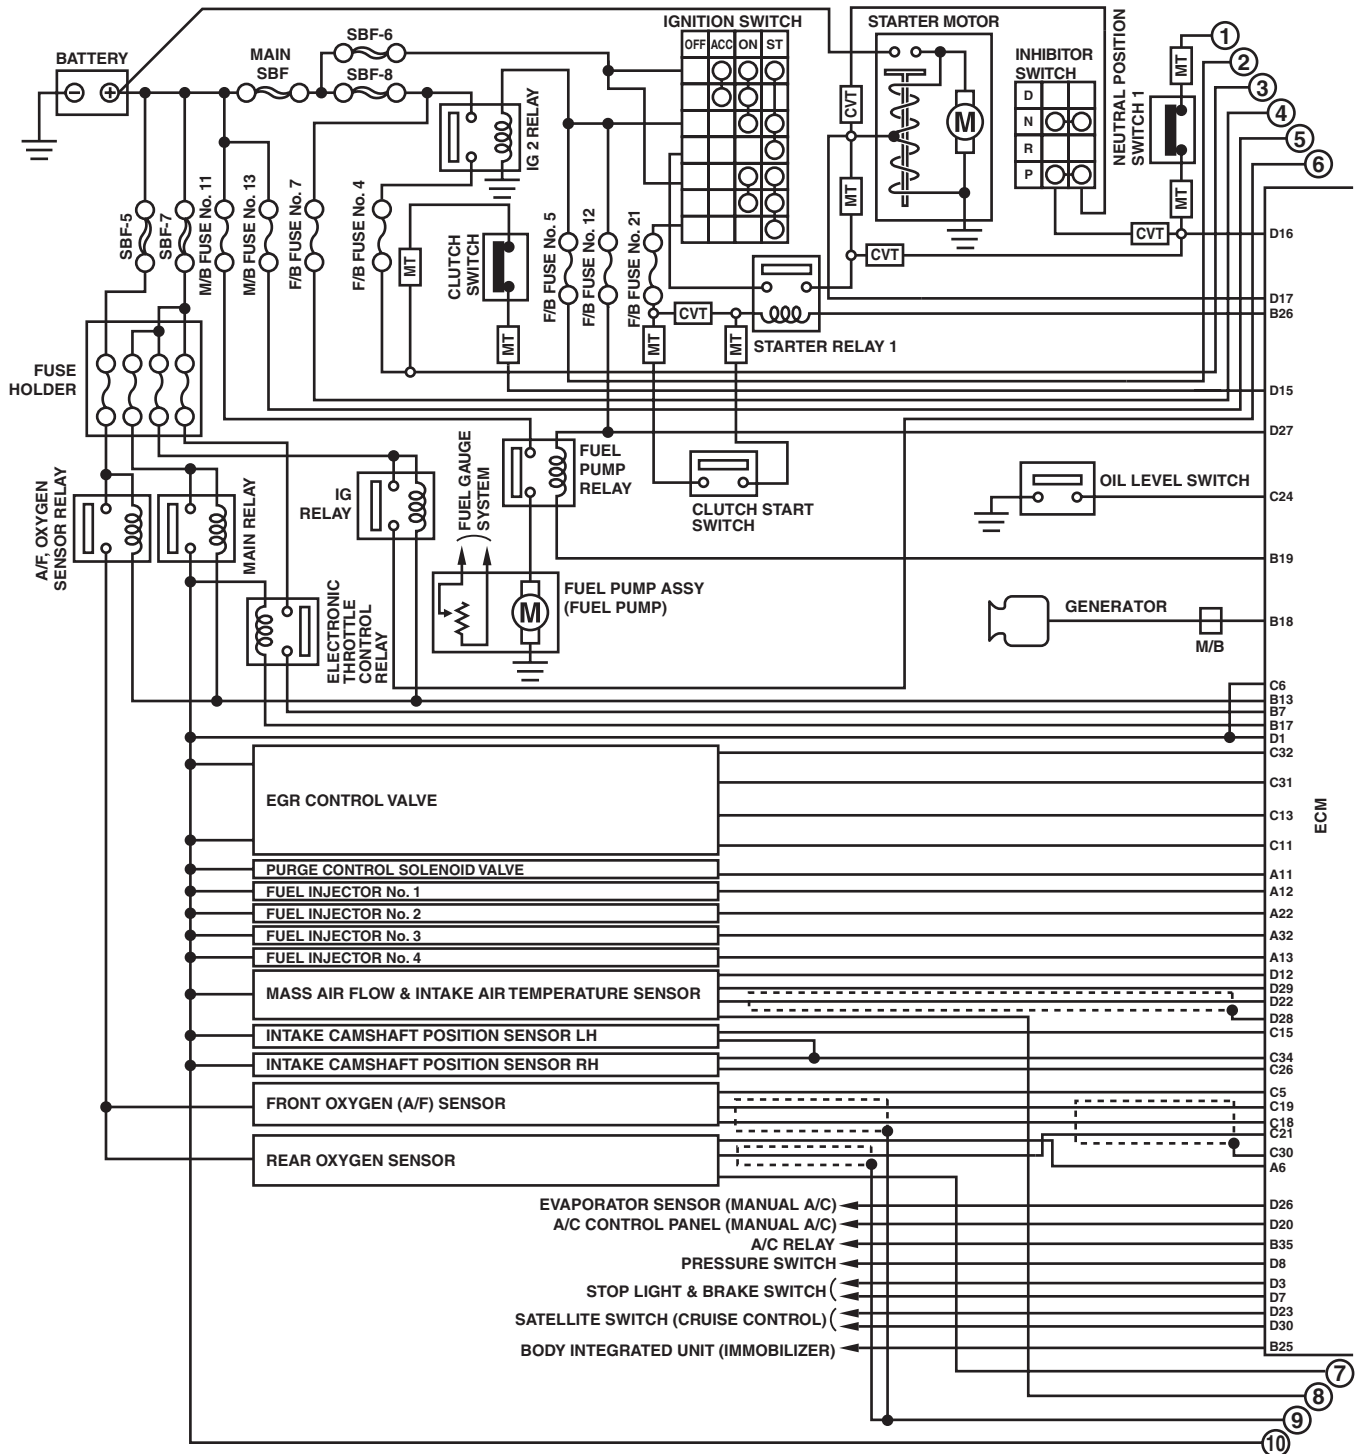

WI-45726

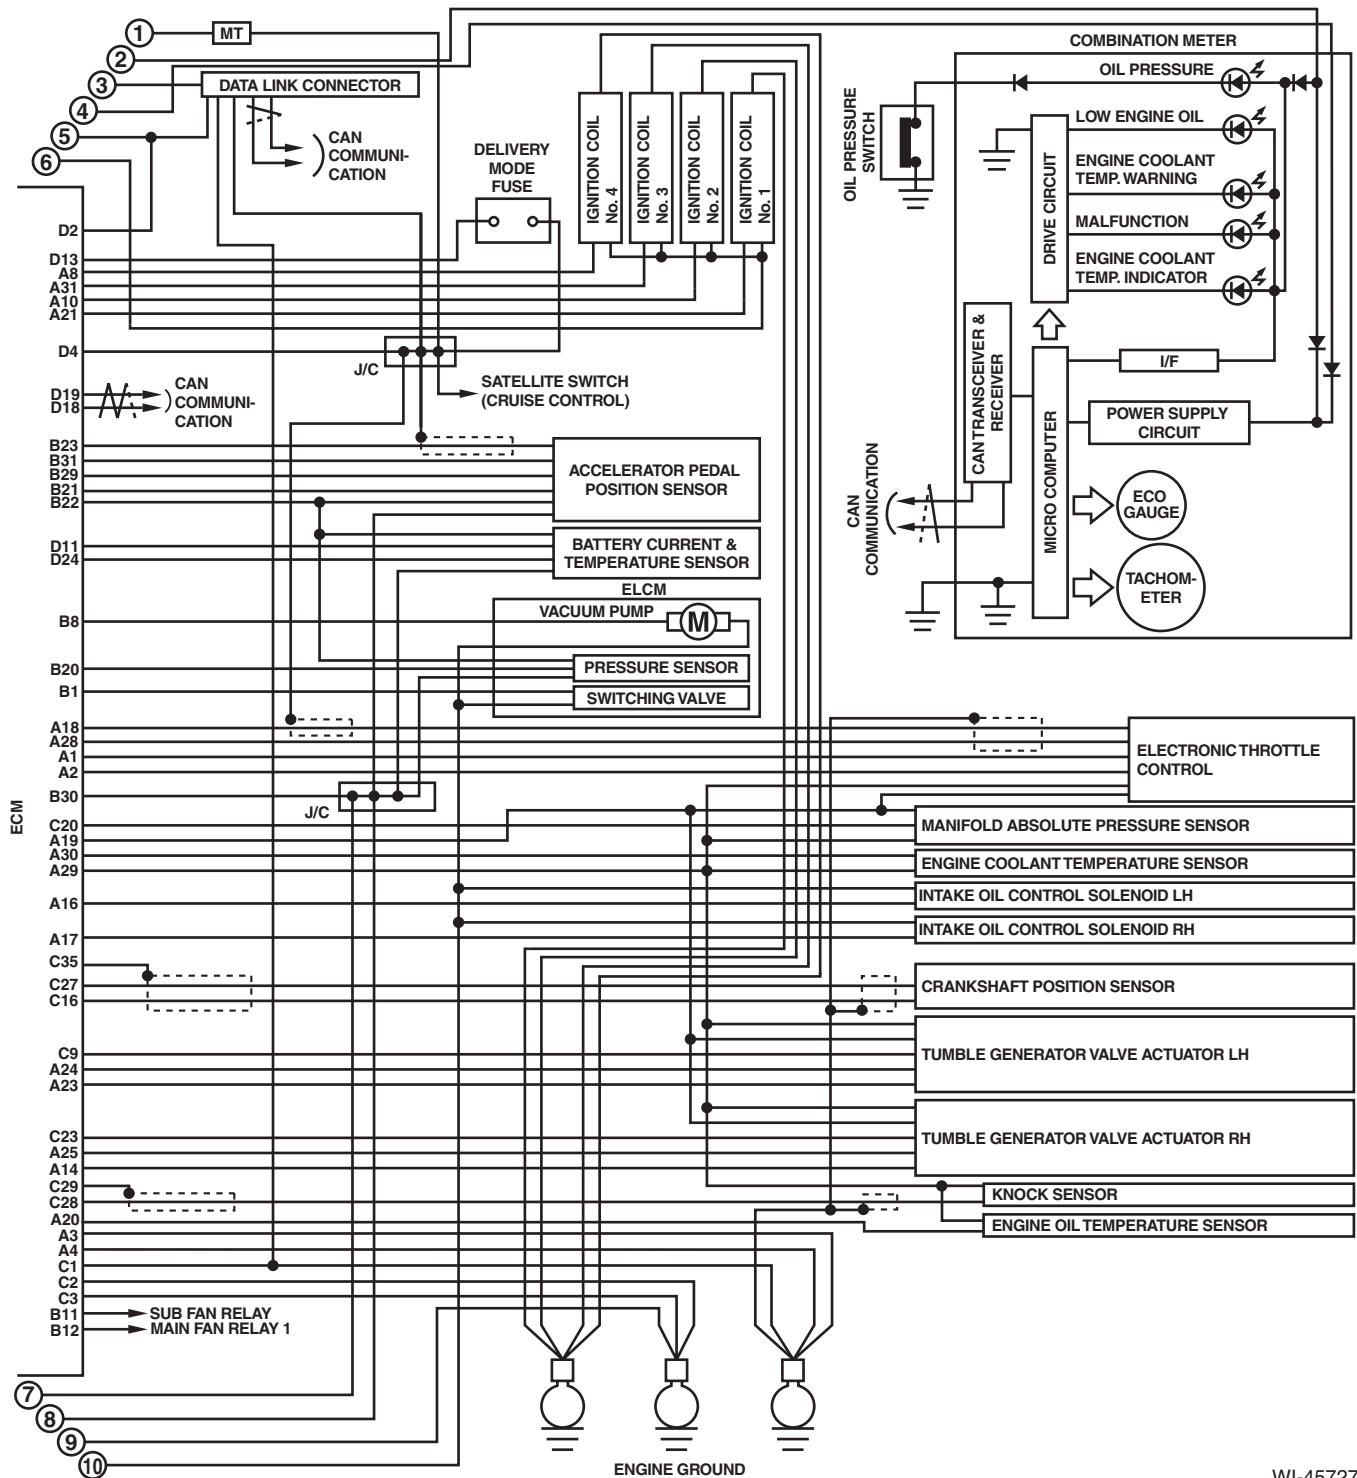

WI-45727

WIRING SYSTEM

1a




WIRING SYSTEM

1b



Engine Electrical System


WIRING SYSTEM

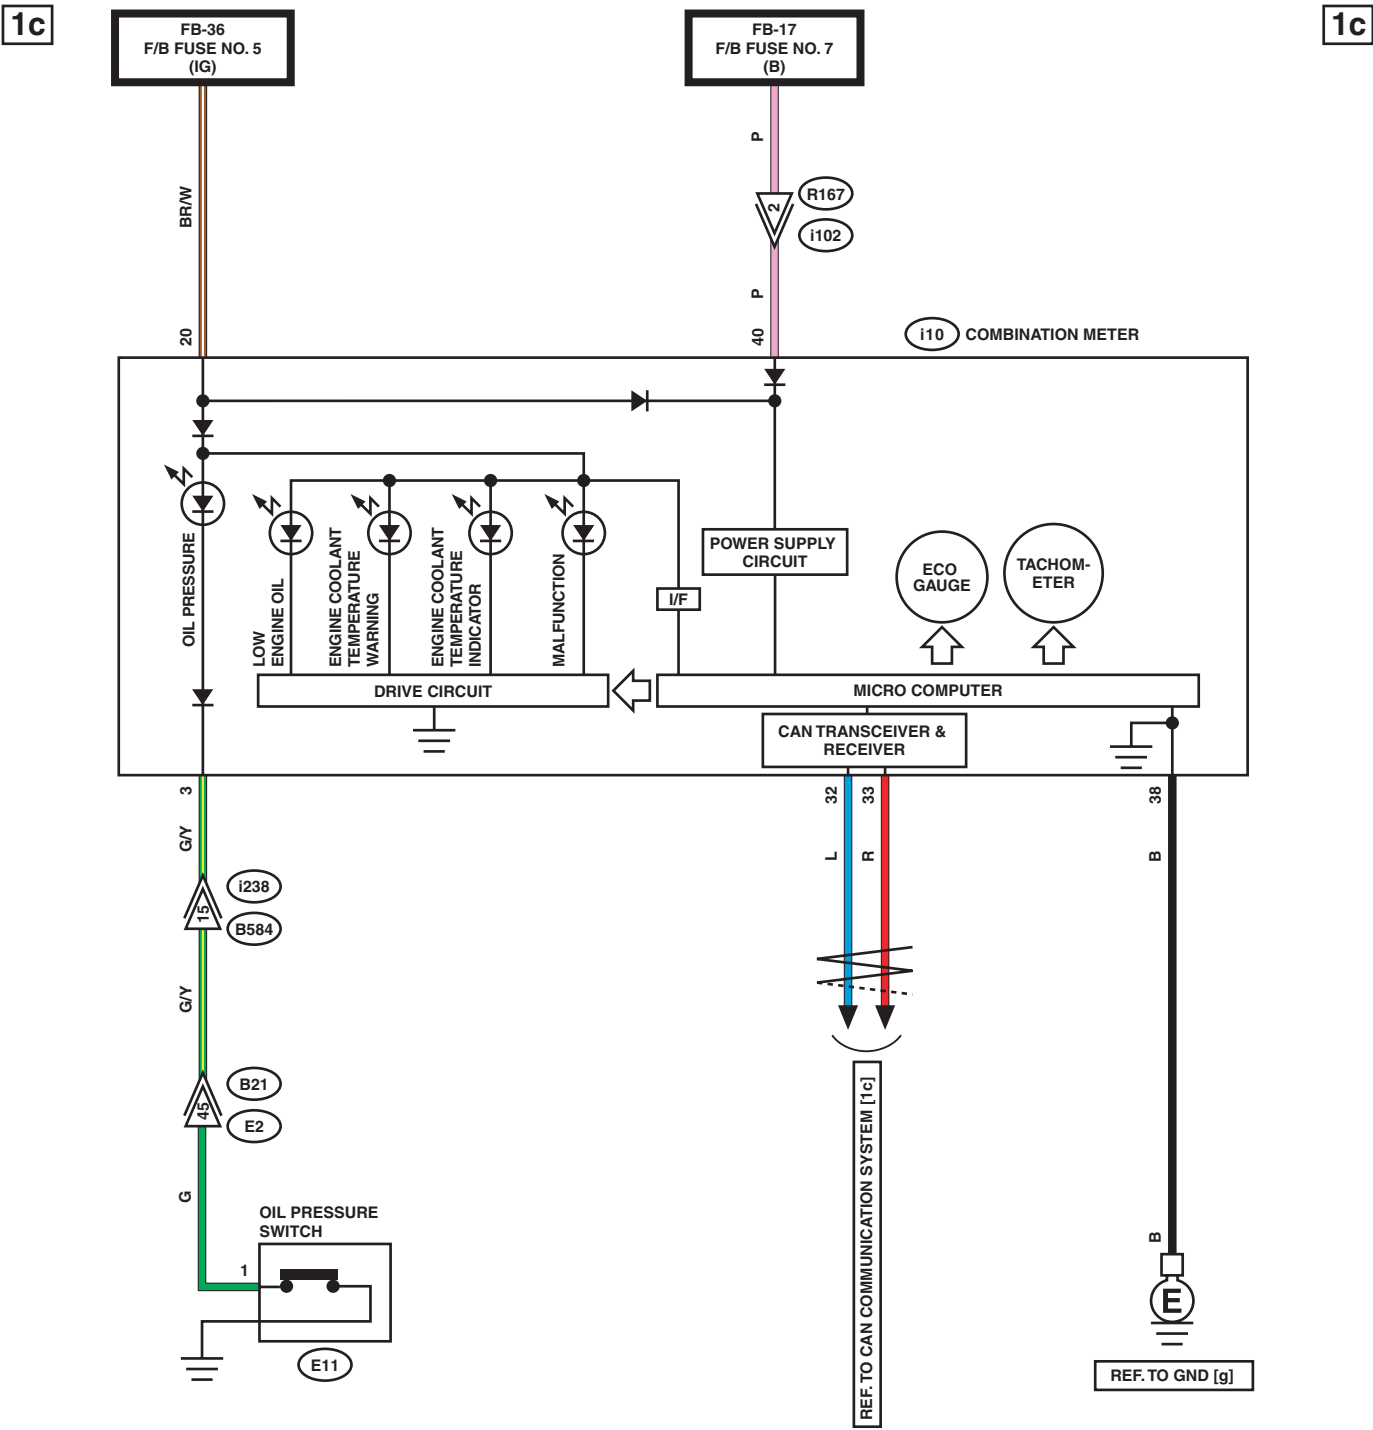

WI-45730

1d

1d

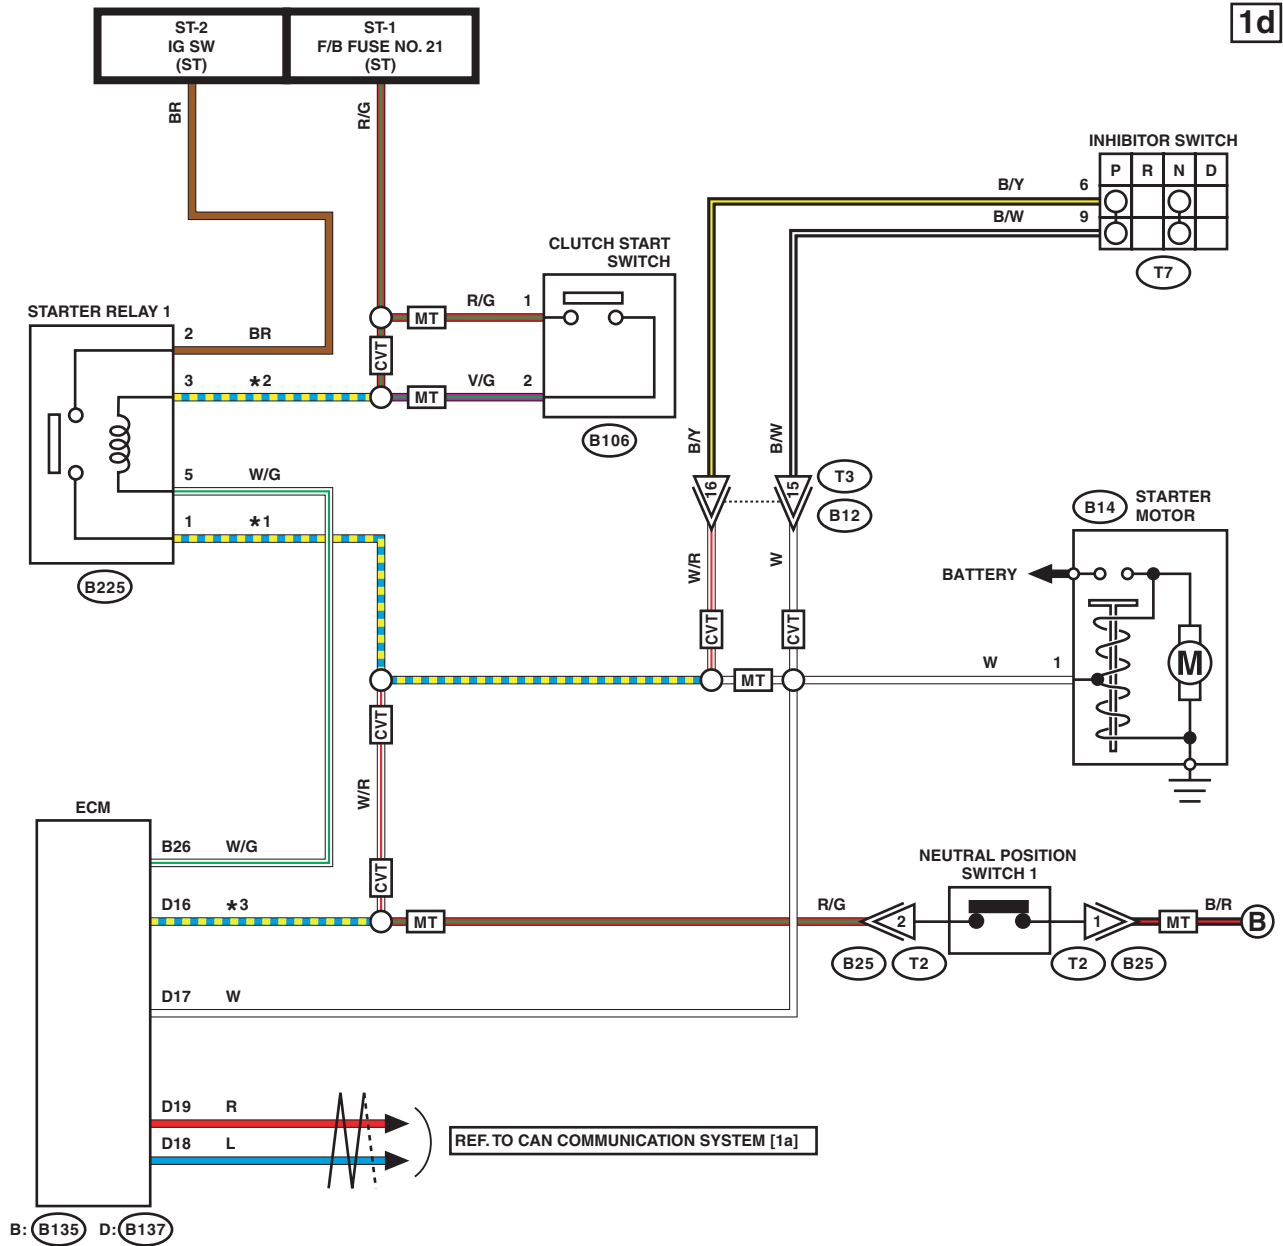


- *1 : MT MODEL : W
CVT MODEL : W/R
- *2 : MT MODEL : V/G
CVT MODEL : R/G
- *3 : MT MODEL : R/G
CVT MODEL : W/R

WI-45731

Engine Electrical System

WIRING SYSTEM

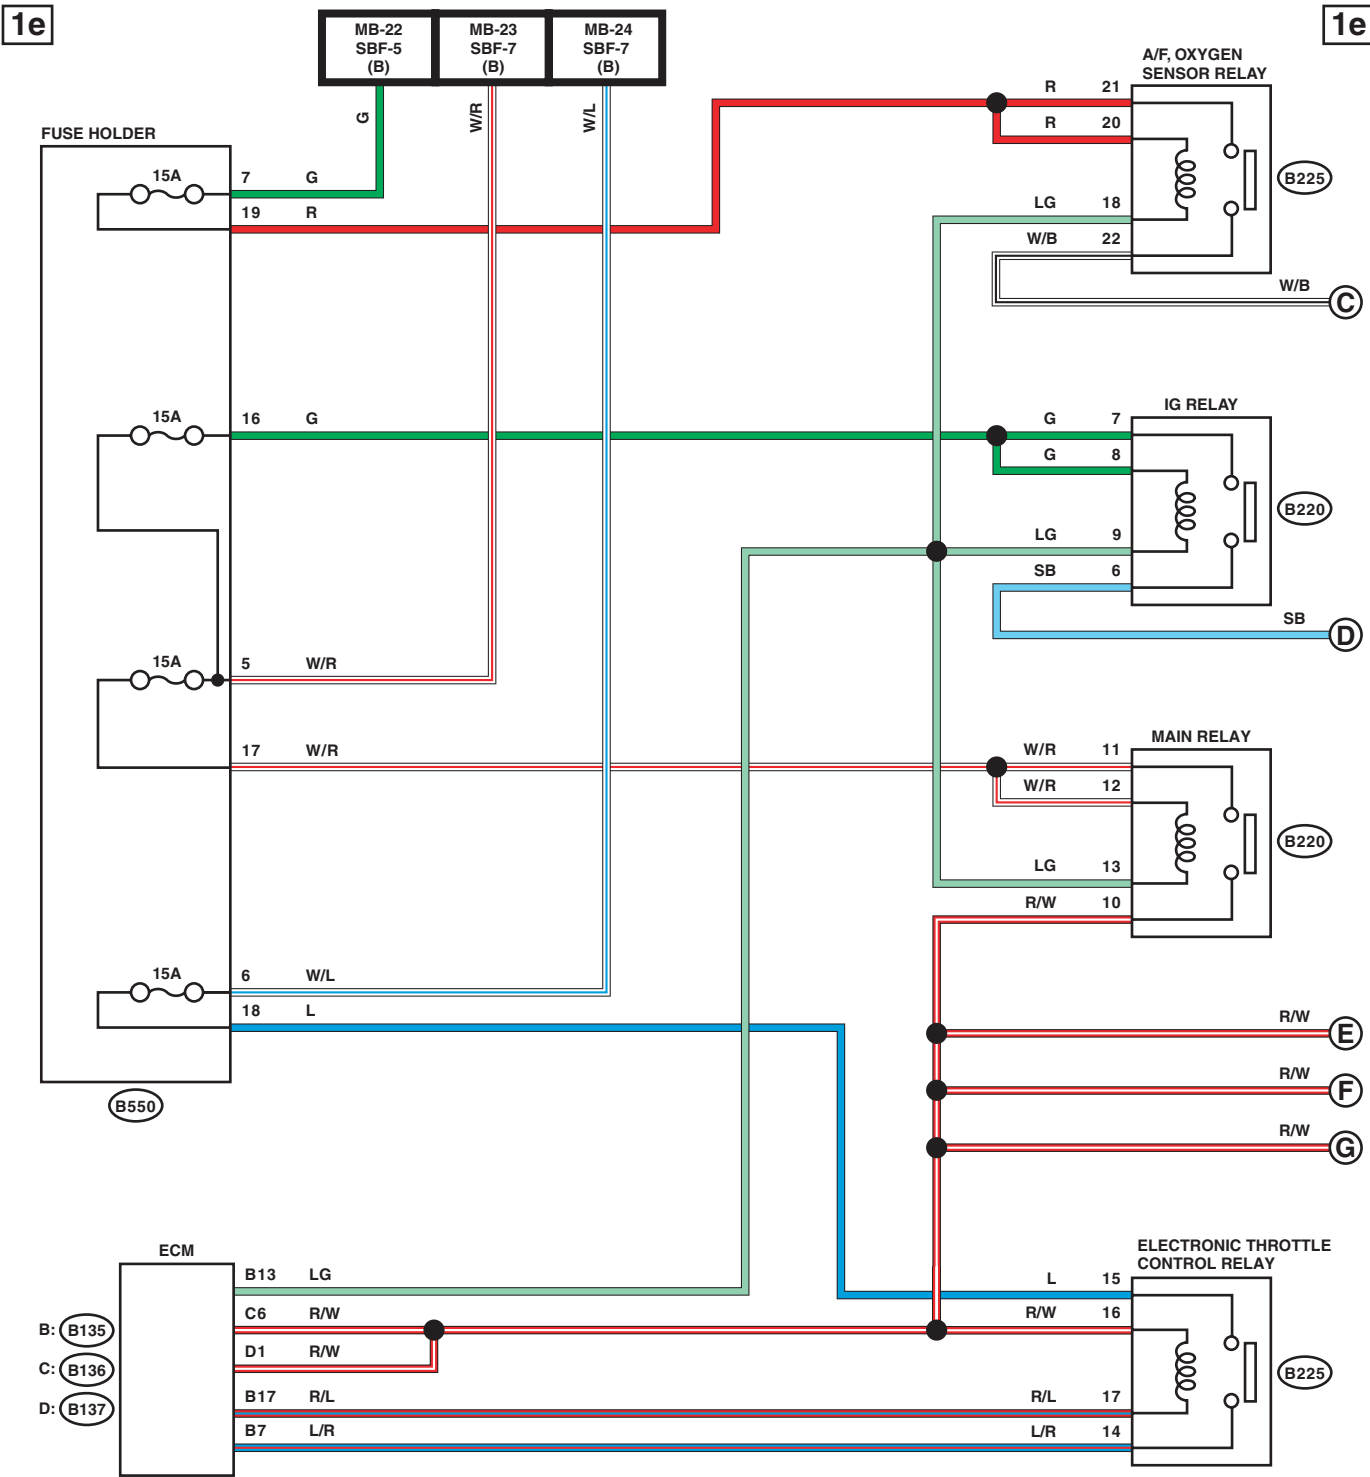

WI-45732

WIRING SYSTEM




WIRING SYSTEM

1g

**WI-168**

1h

1h

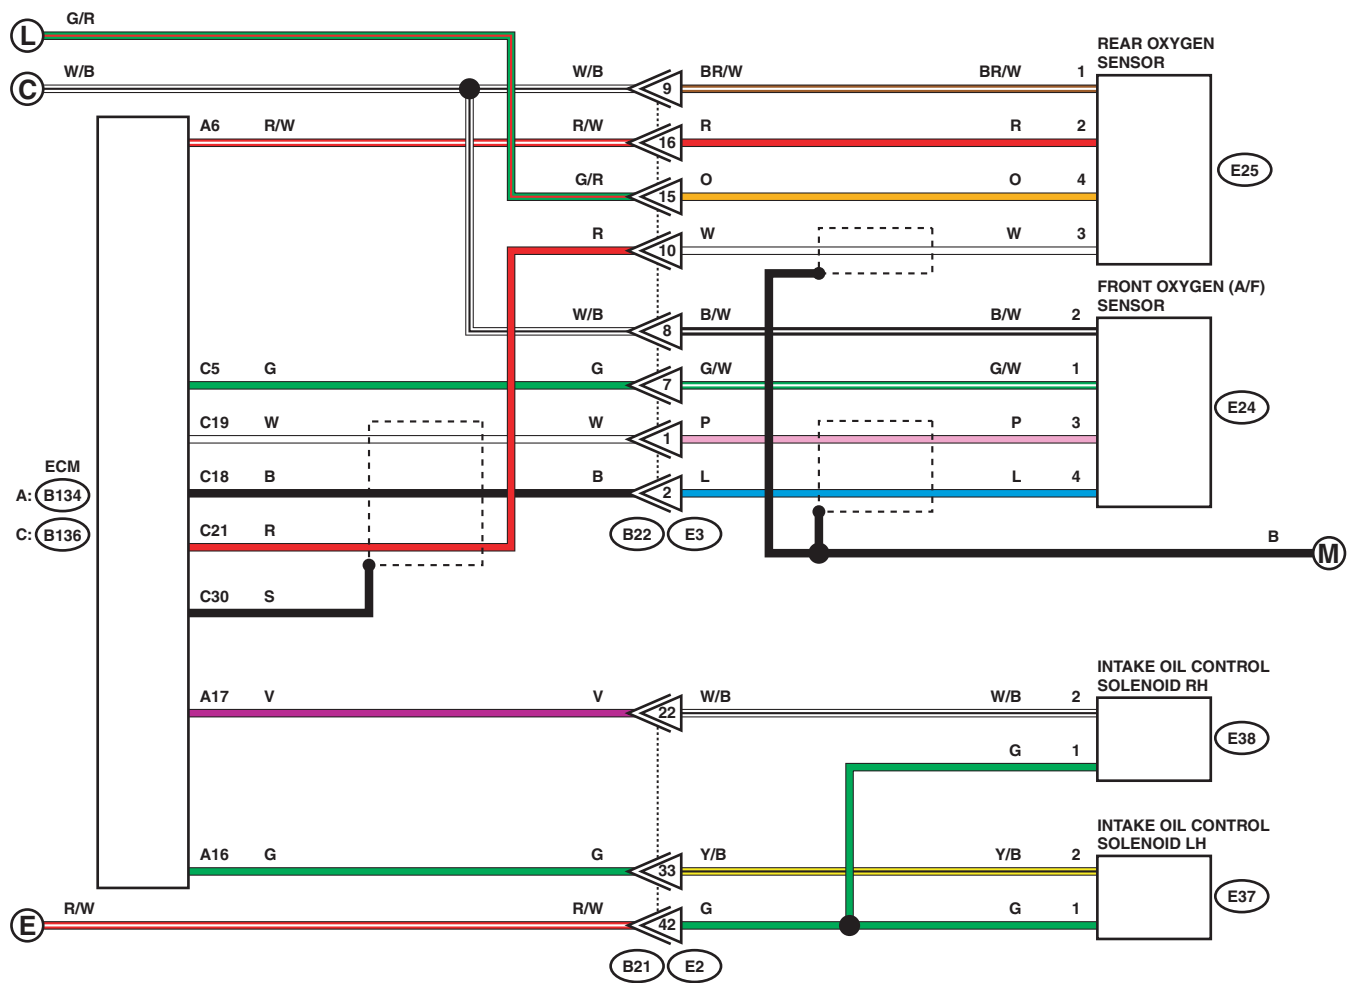


WI-40749

Engine Electrical System

WIRING SYSTEM

1i


1i

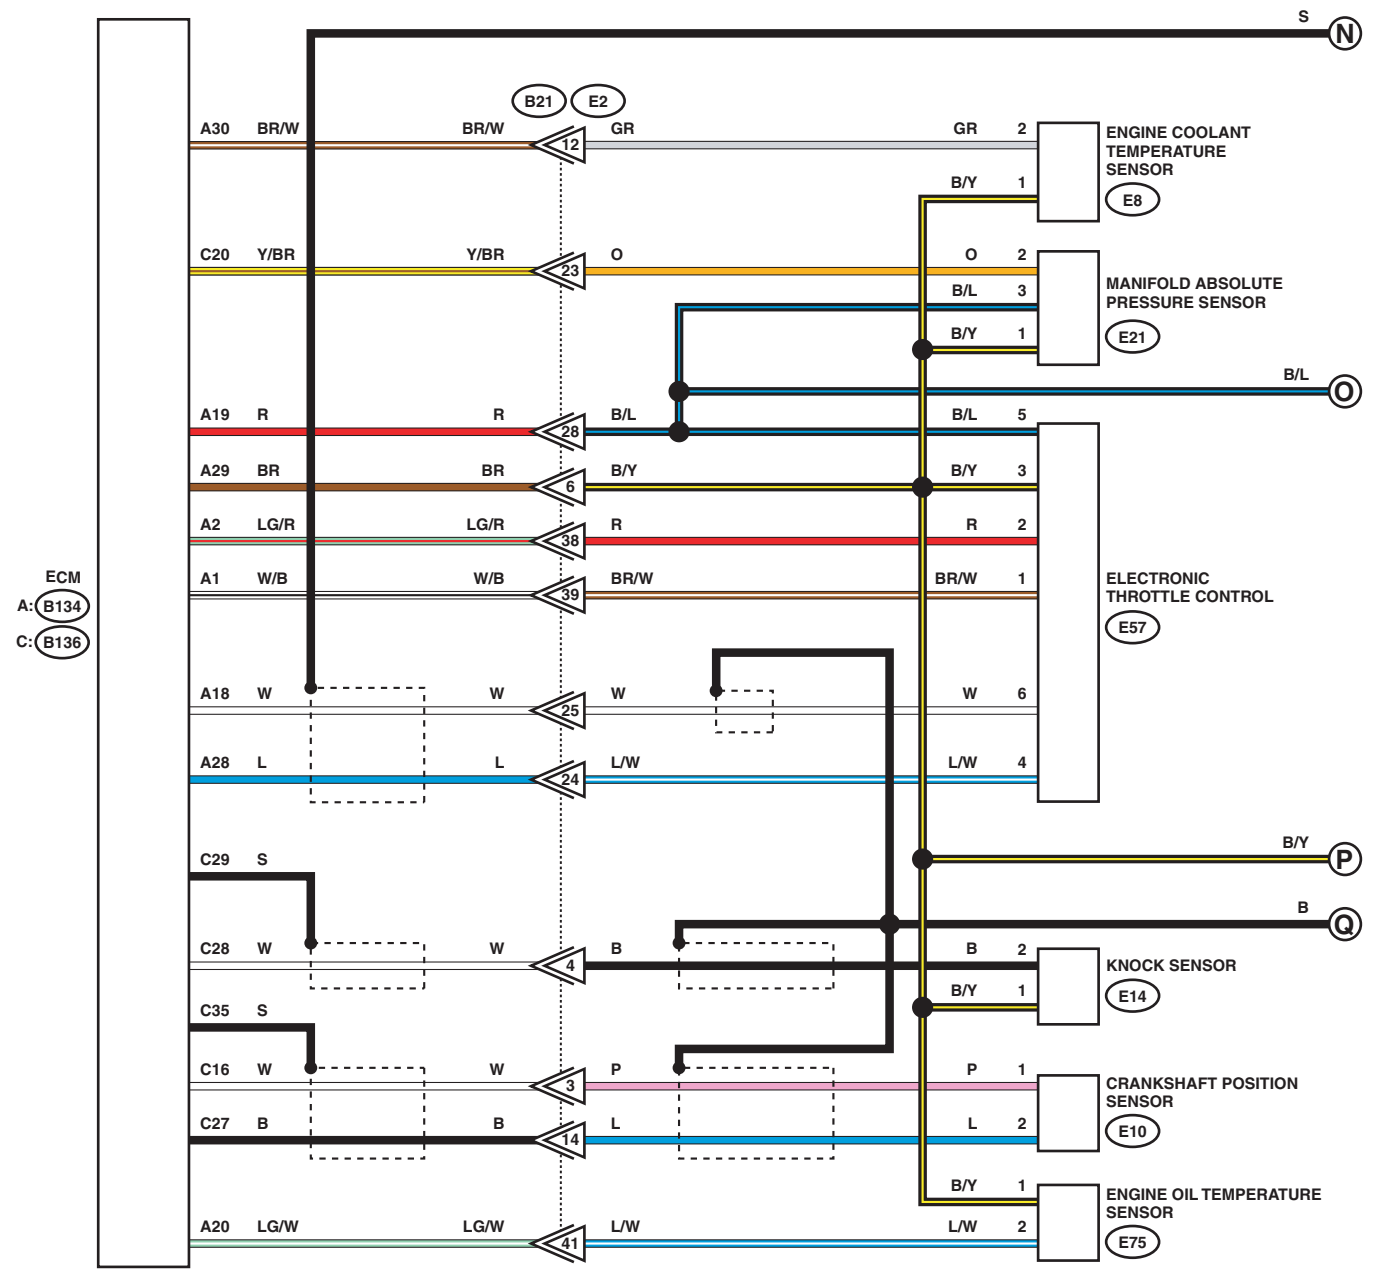

WI-45735

Engine Electrical System

WIRING SYSTEM

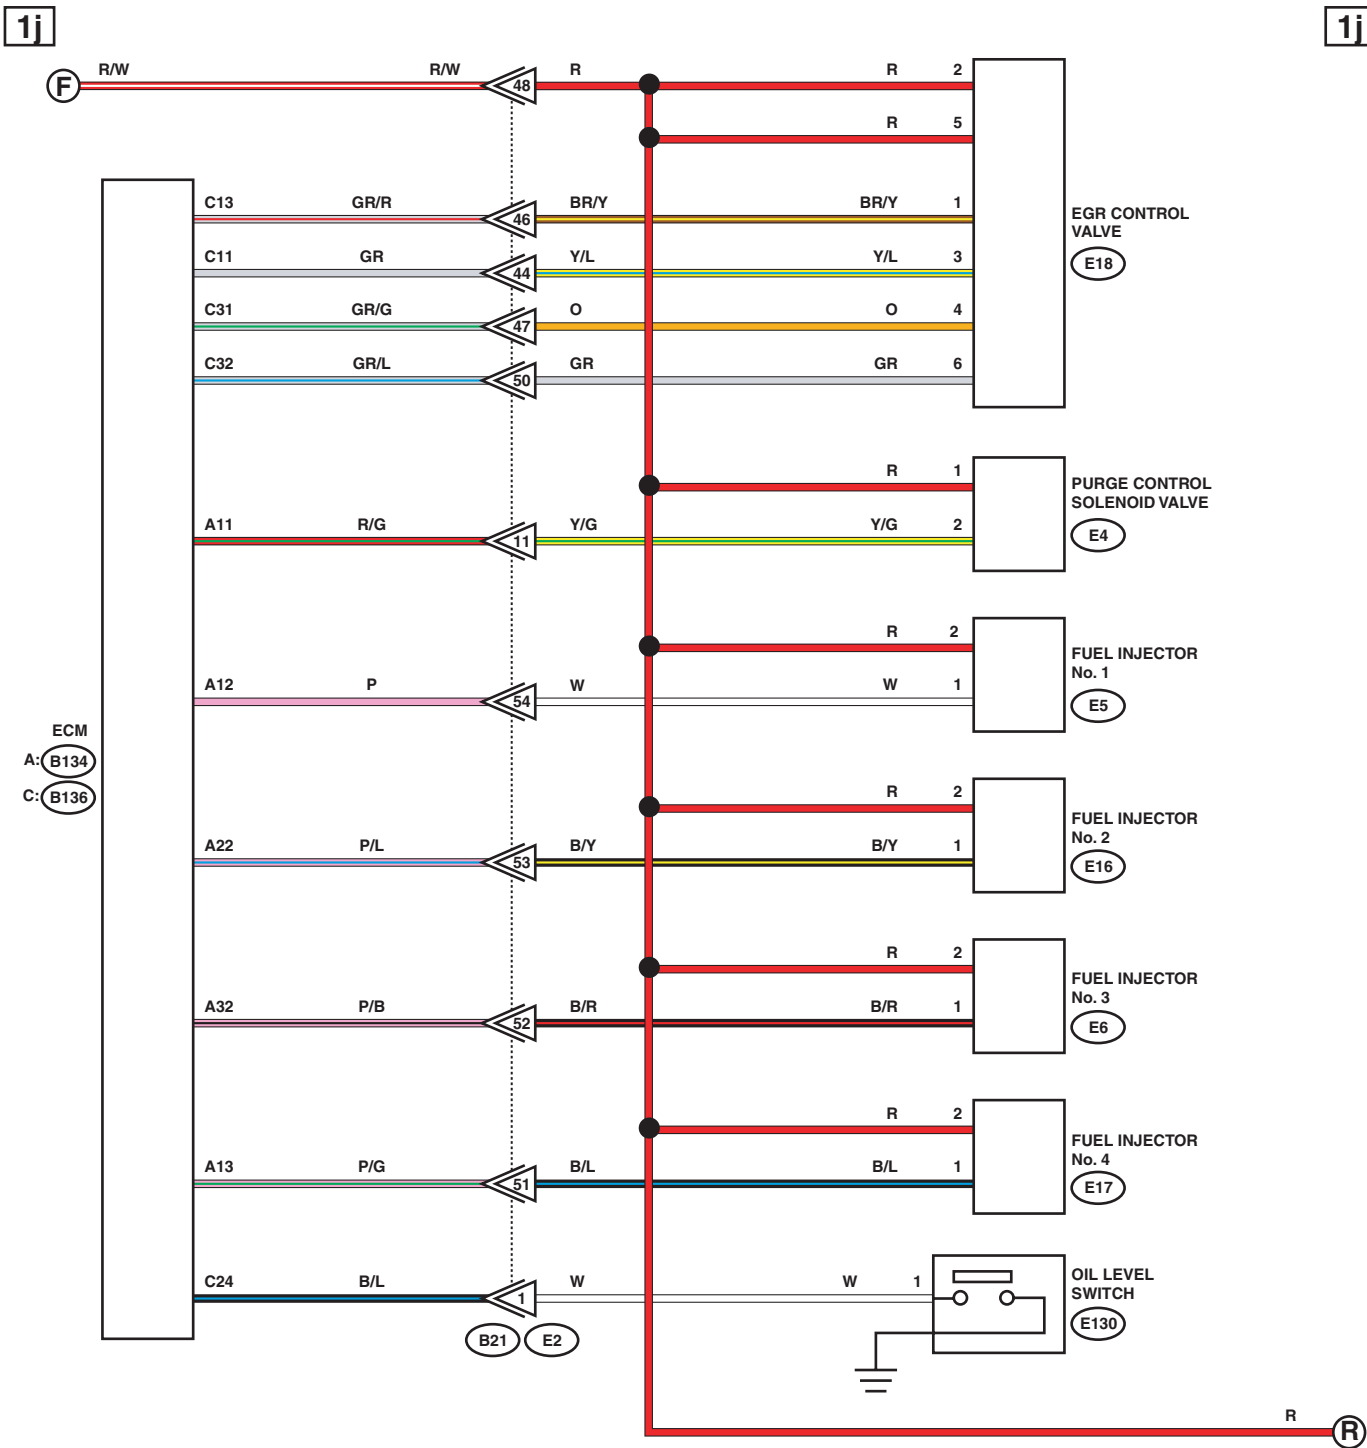

WI-45736


WIRING SYSTEM

1k



11

11

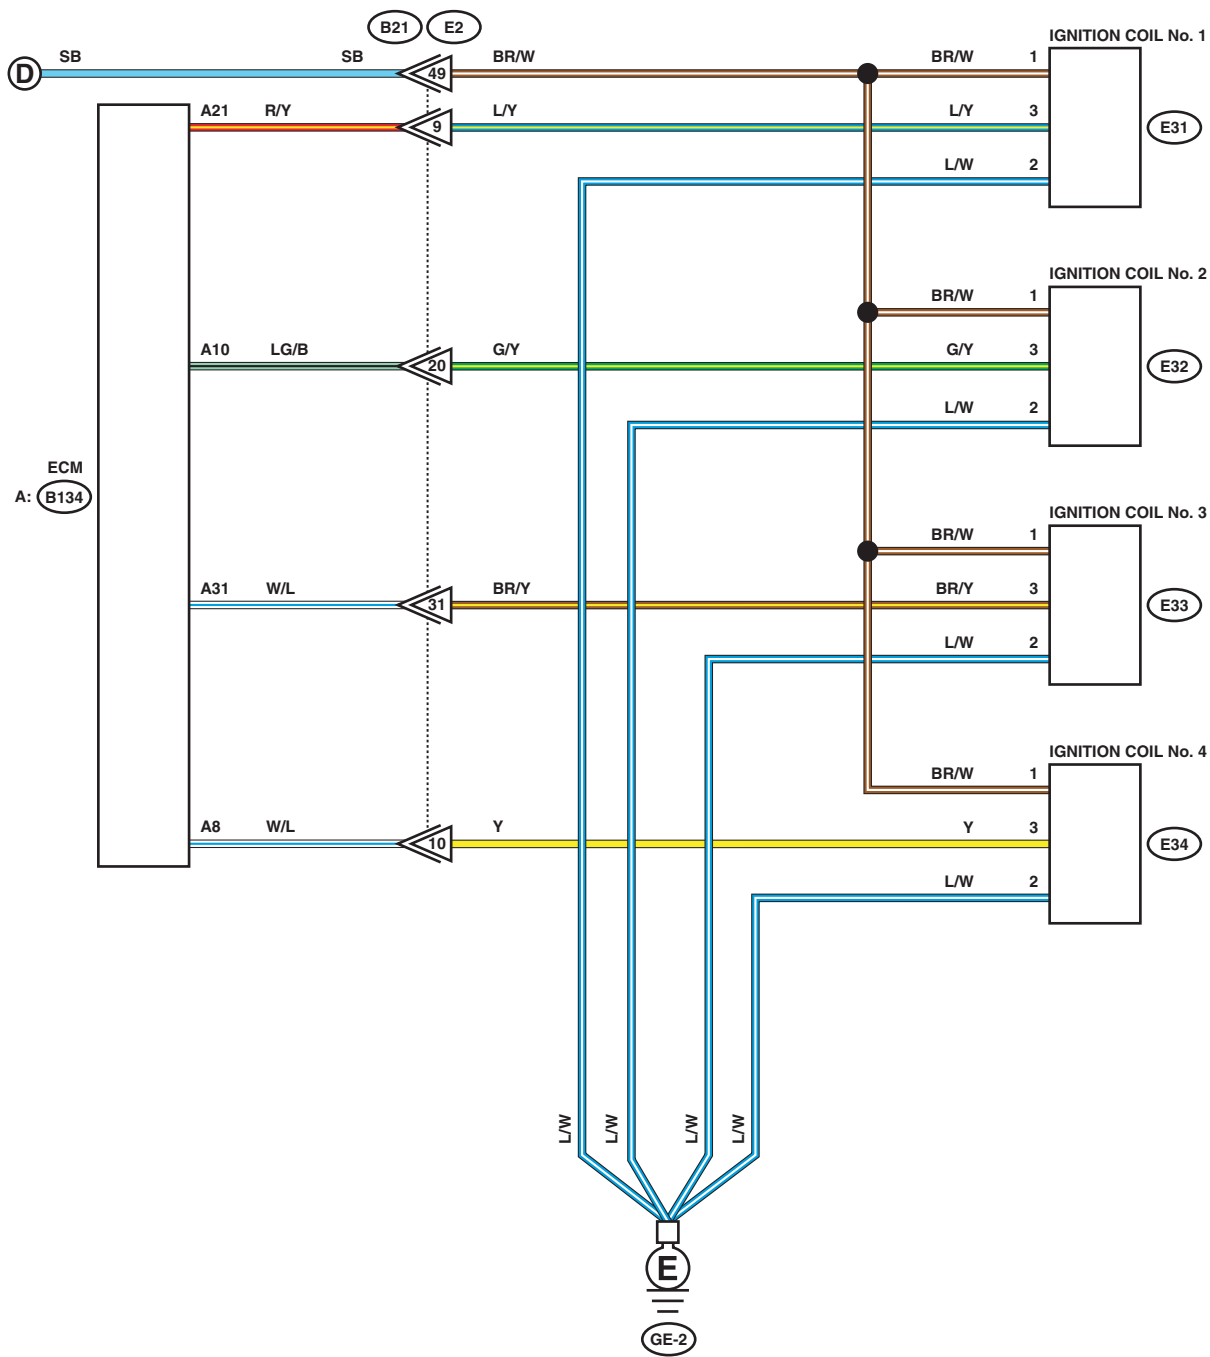

WI-40753


WIRING SYSTEM

**WI-174**

1n

1n

LIST OF CONNECTORS




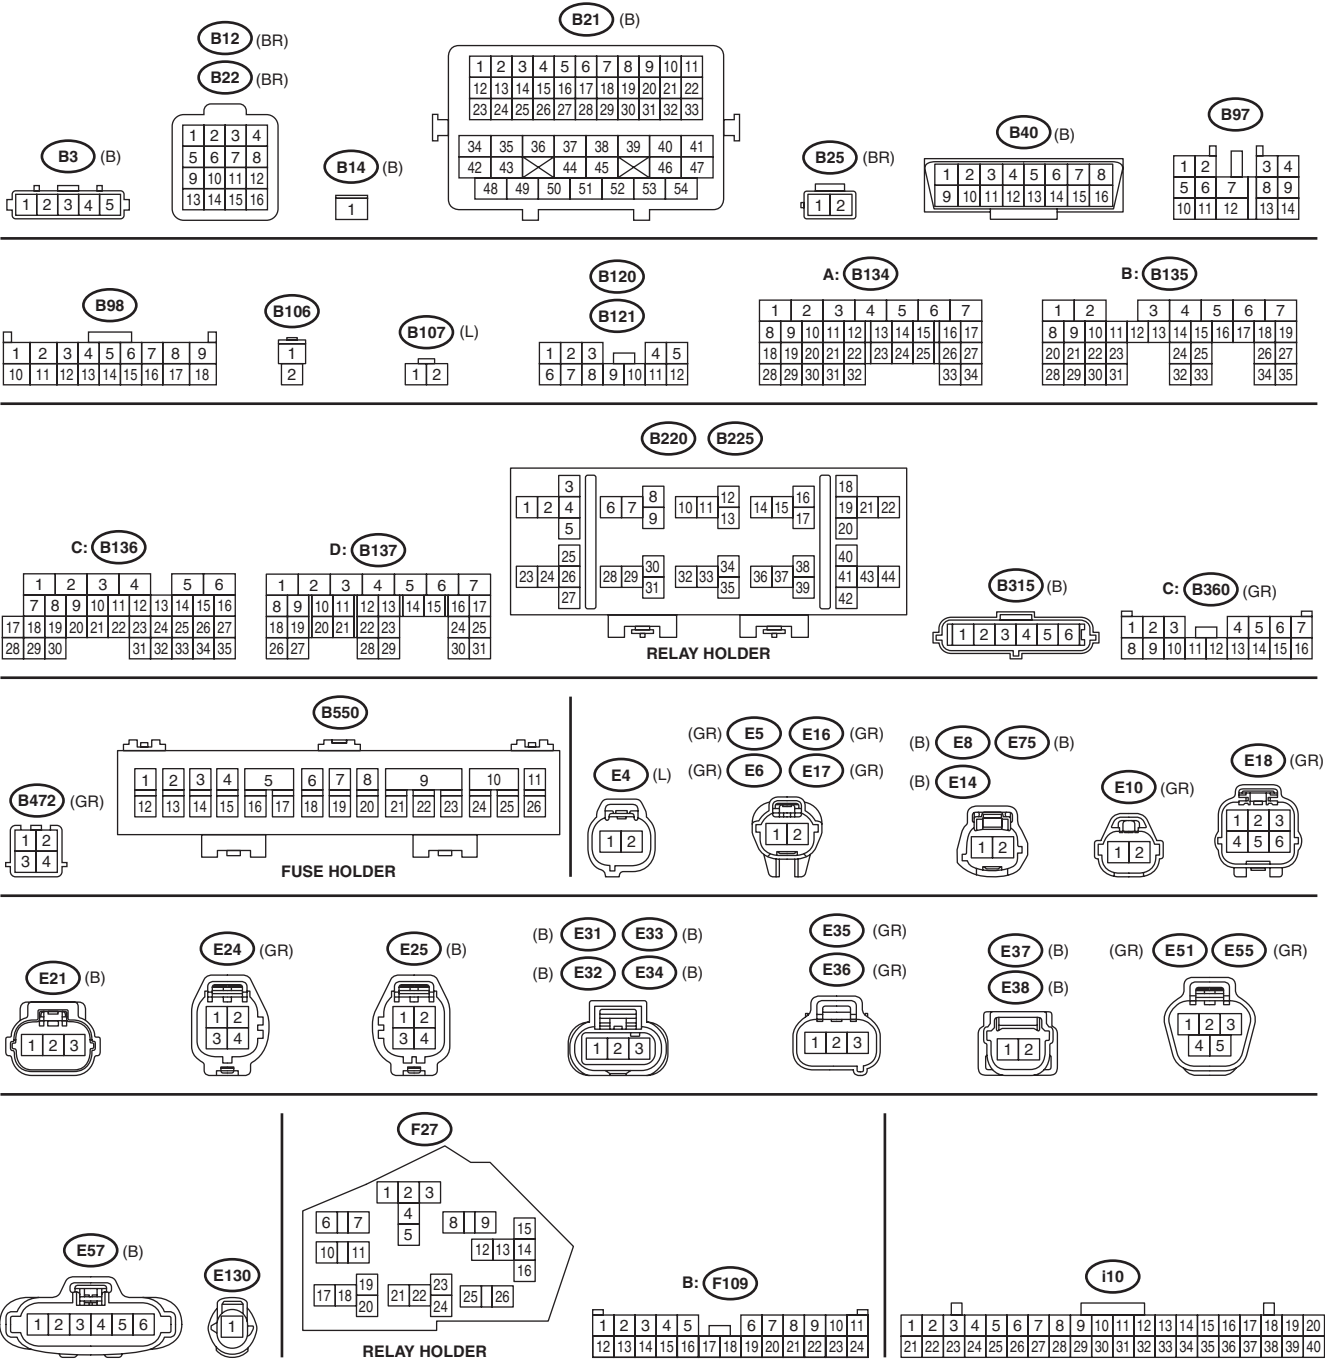


WI-45738

1o

1o


LIST OF CONNECTORS

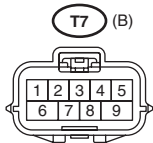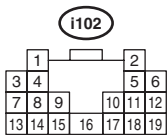


Engine Electrical System

WIRING SYSTEM

2. NON-TURBO MODEL (WITH PUSH BUTTON START)

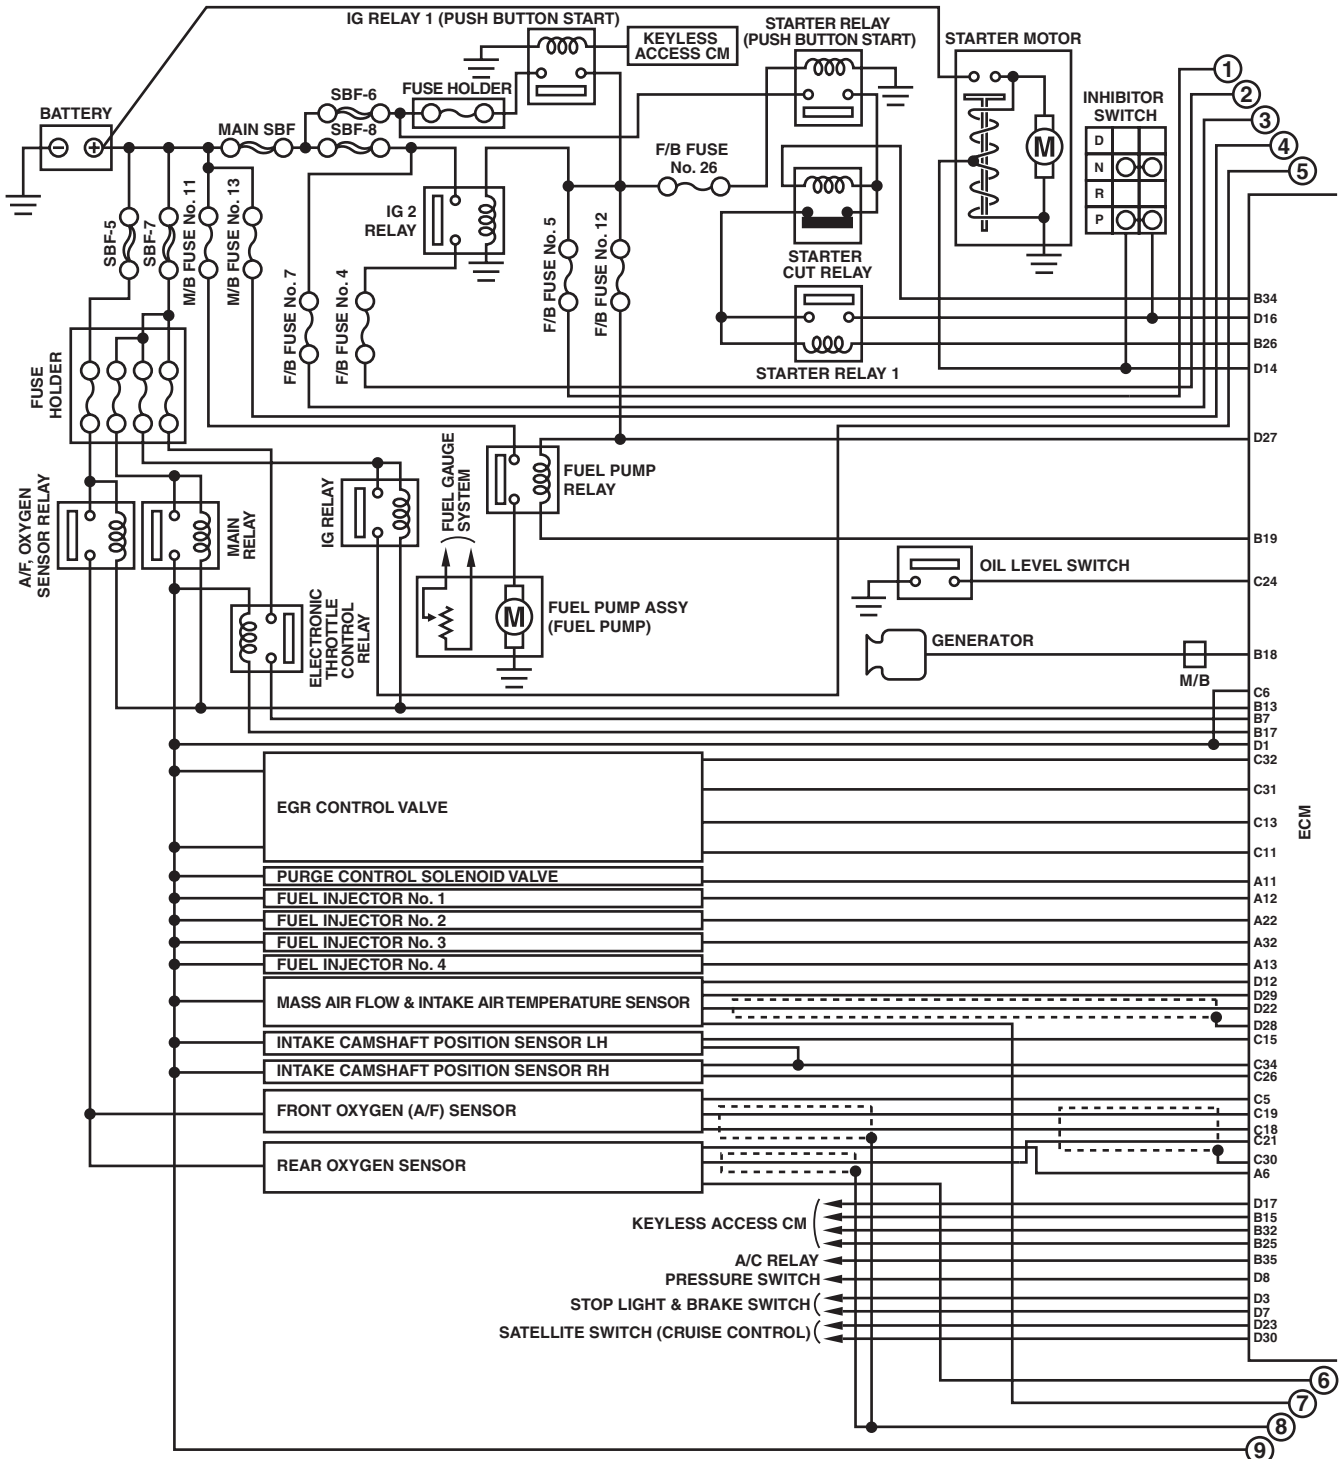

WI-45739

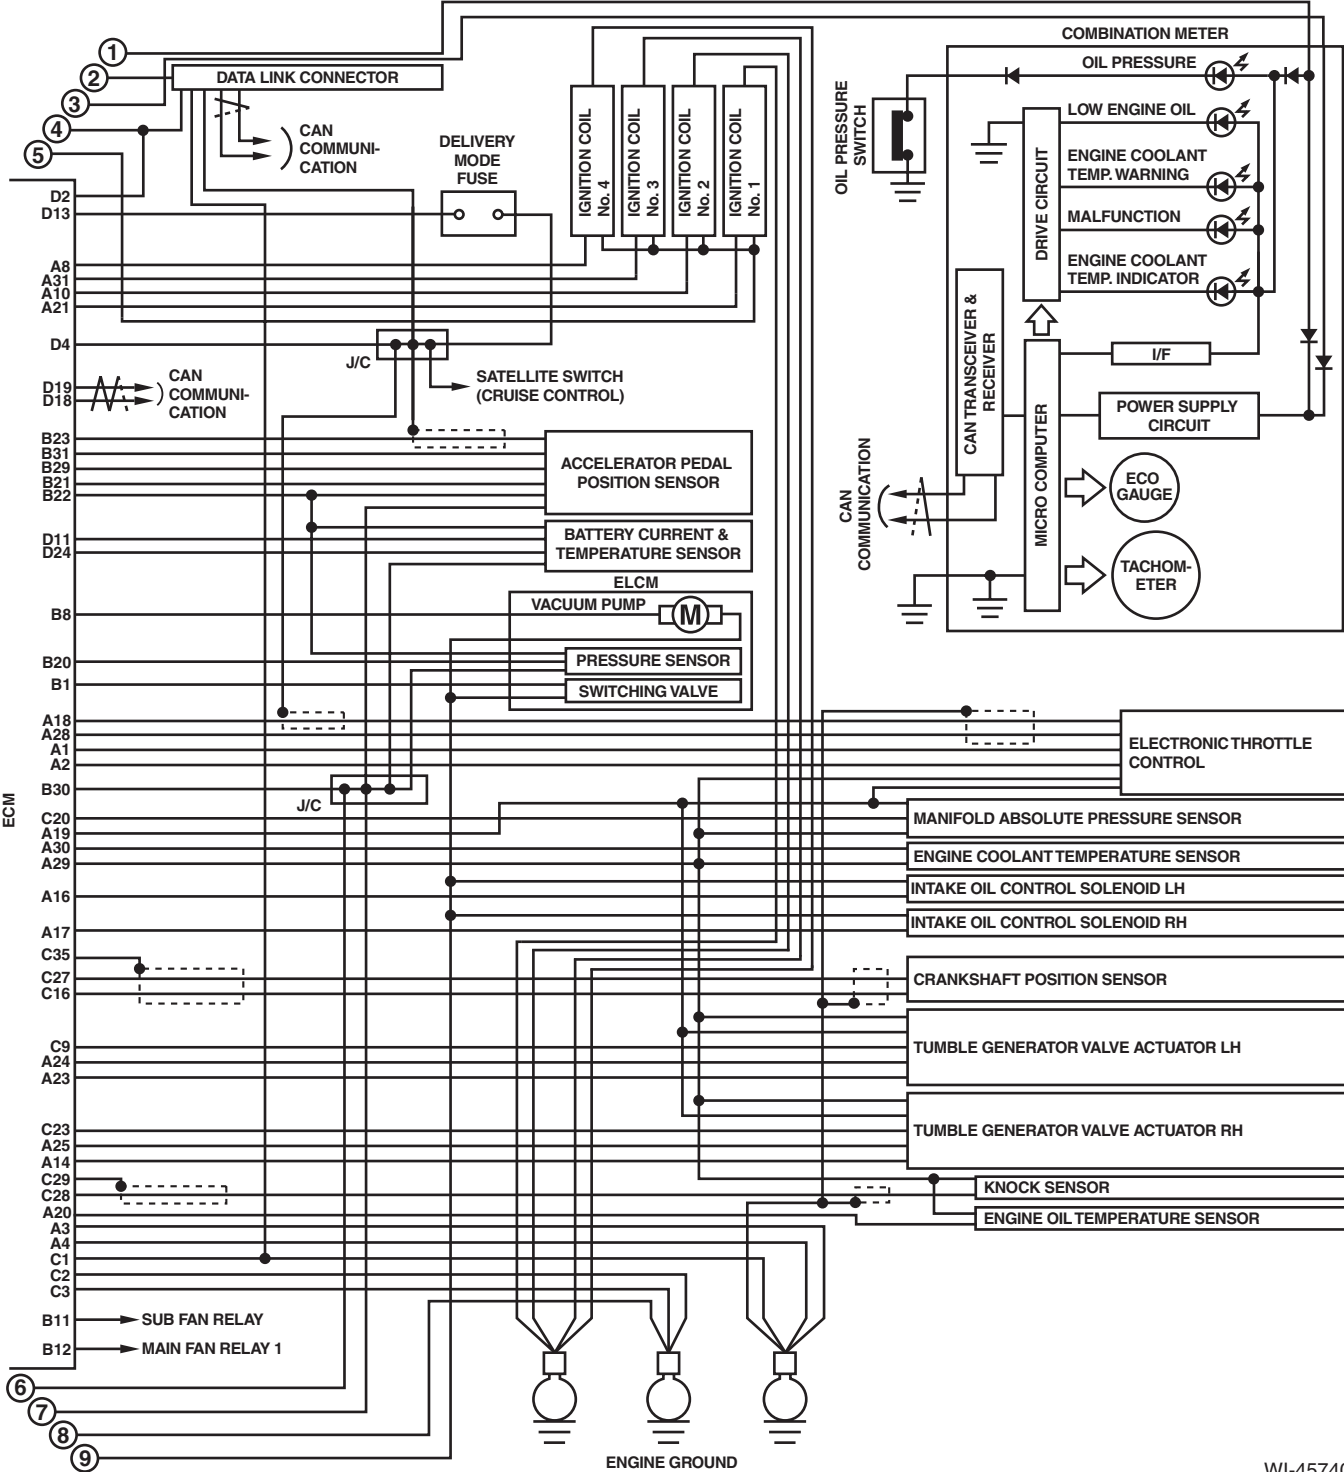


WI-45740

Engine Electrical System

WIRING SYSTEM

2a


2a

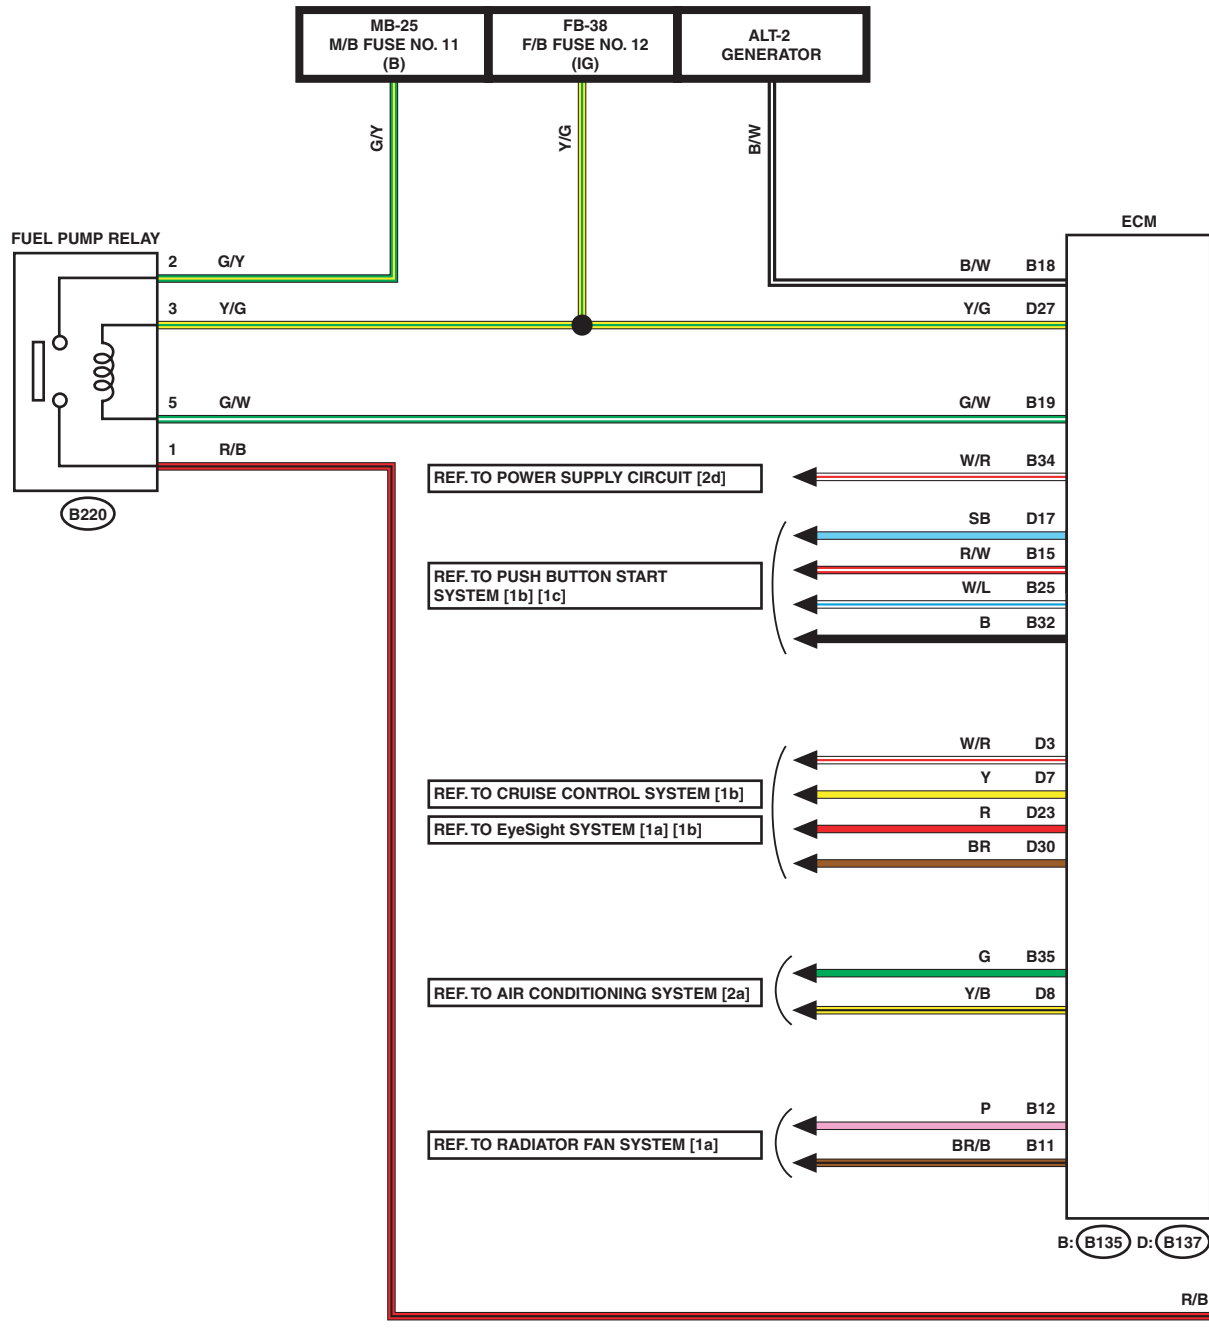

WI-45741

2b


2b

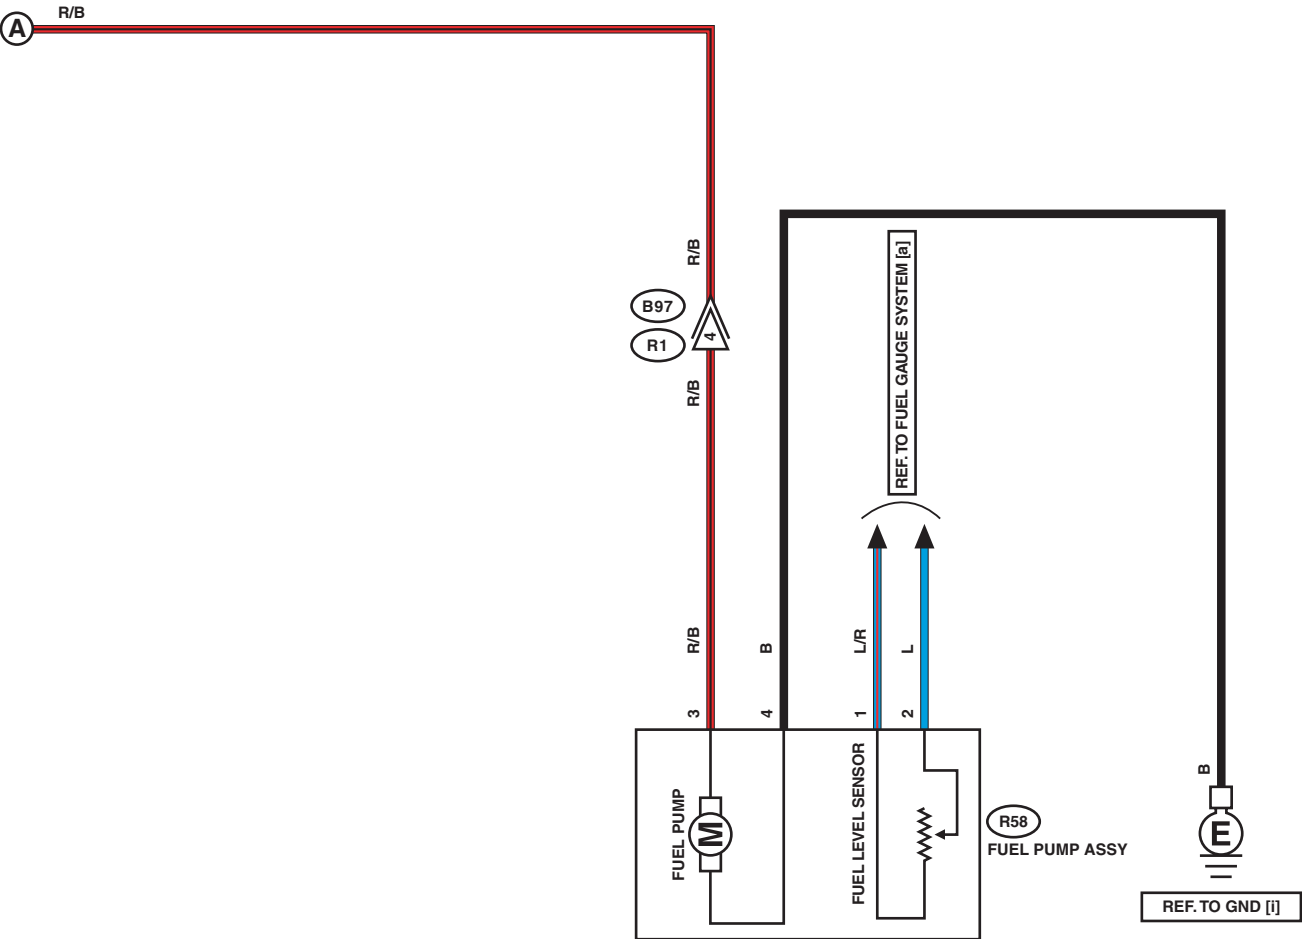

WI-45742

Engine Electrical System


WIRING SYSTEM

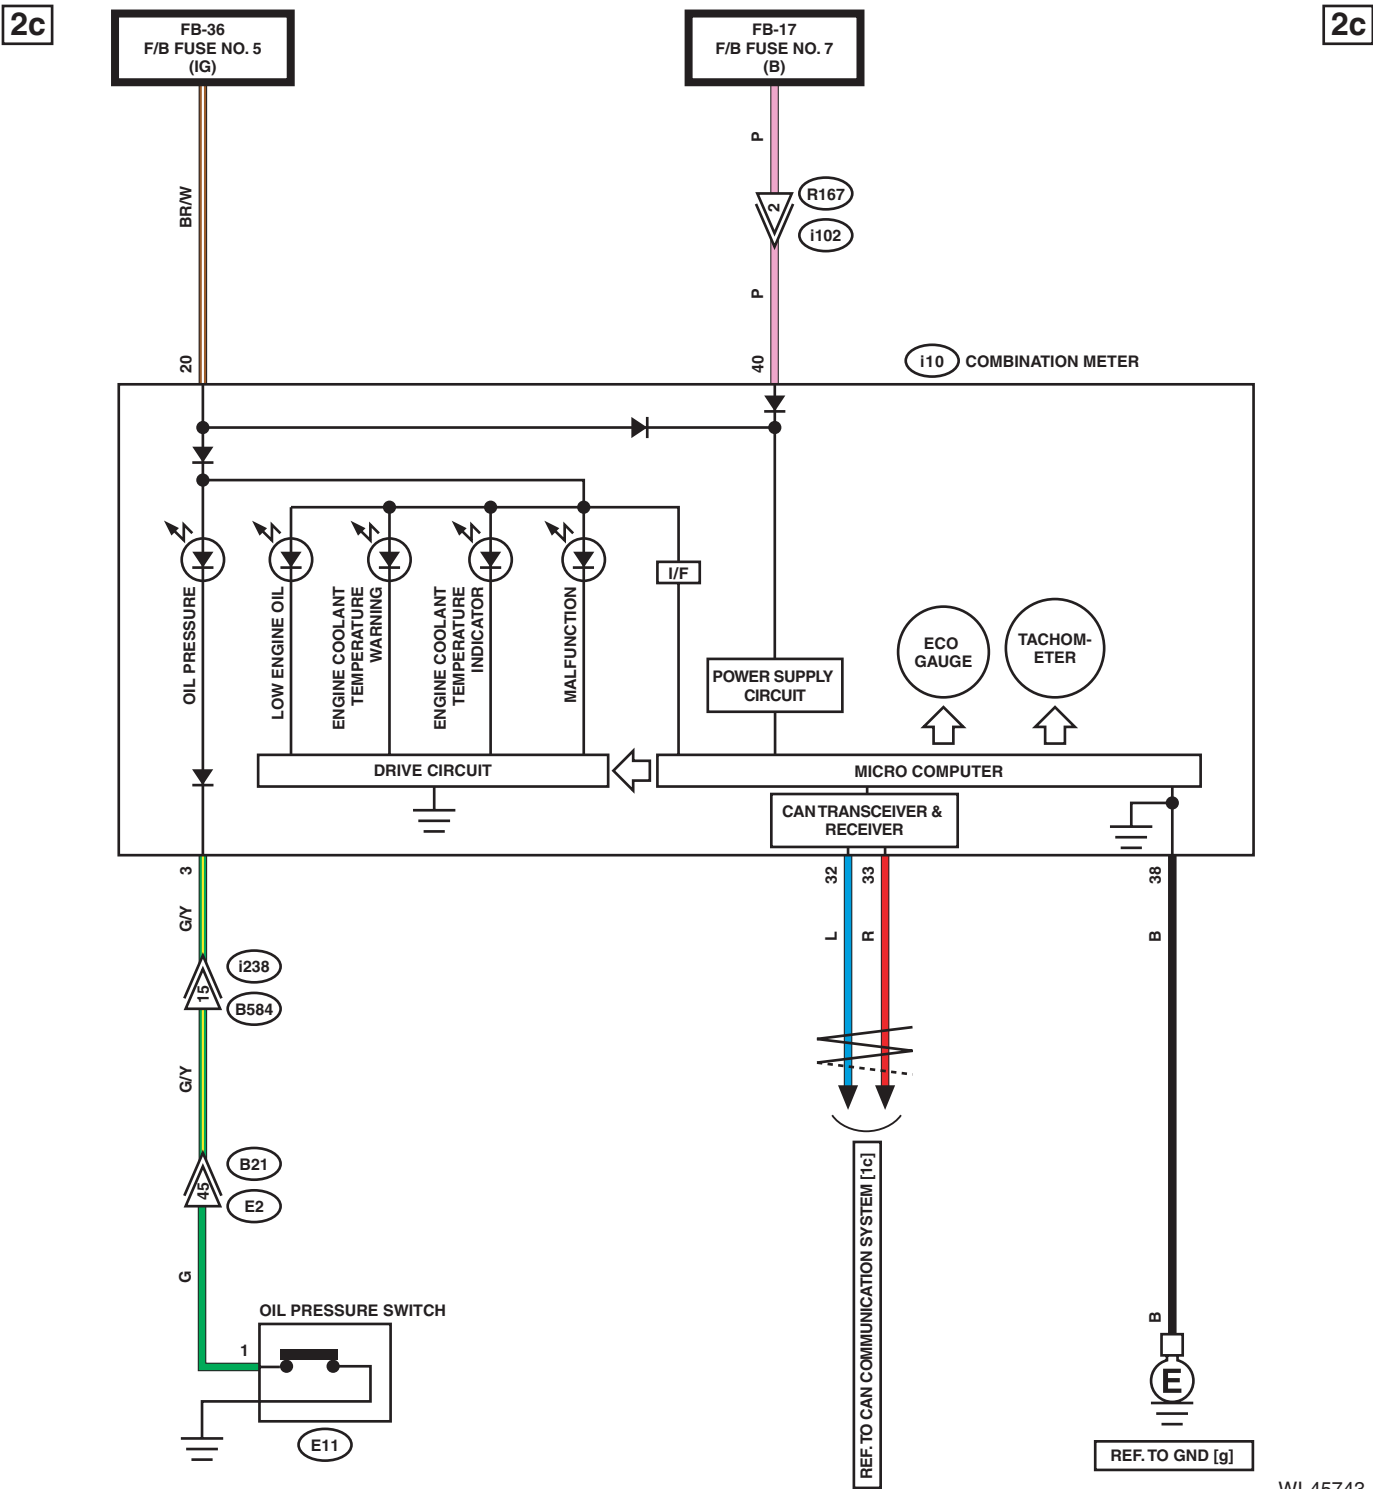

WI-45743

2d


2d

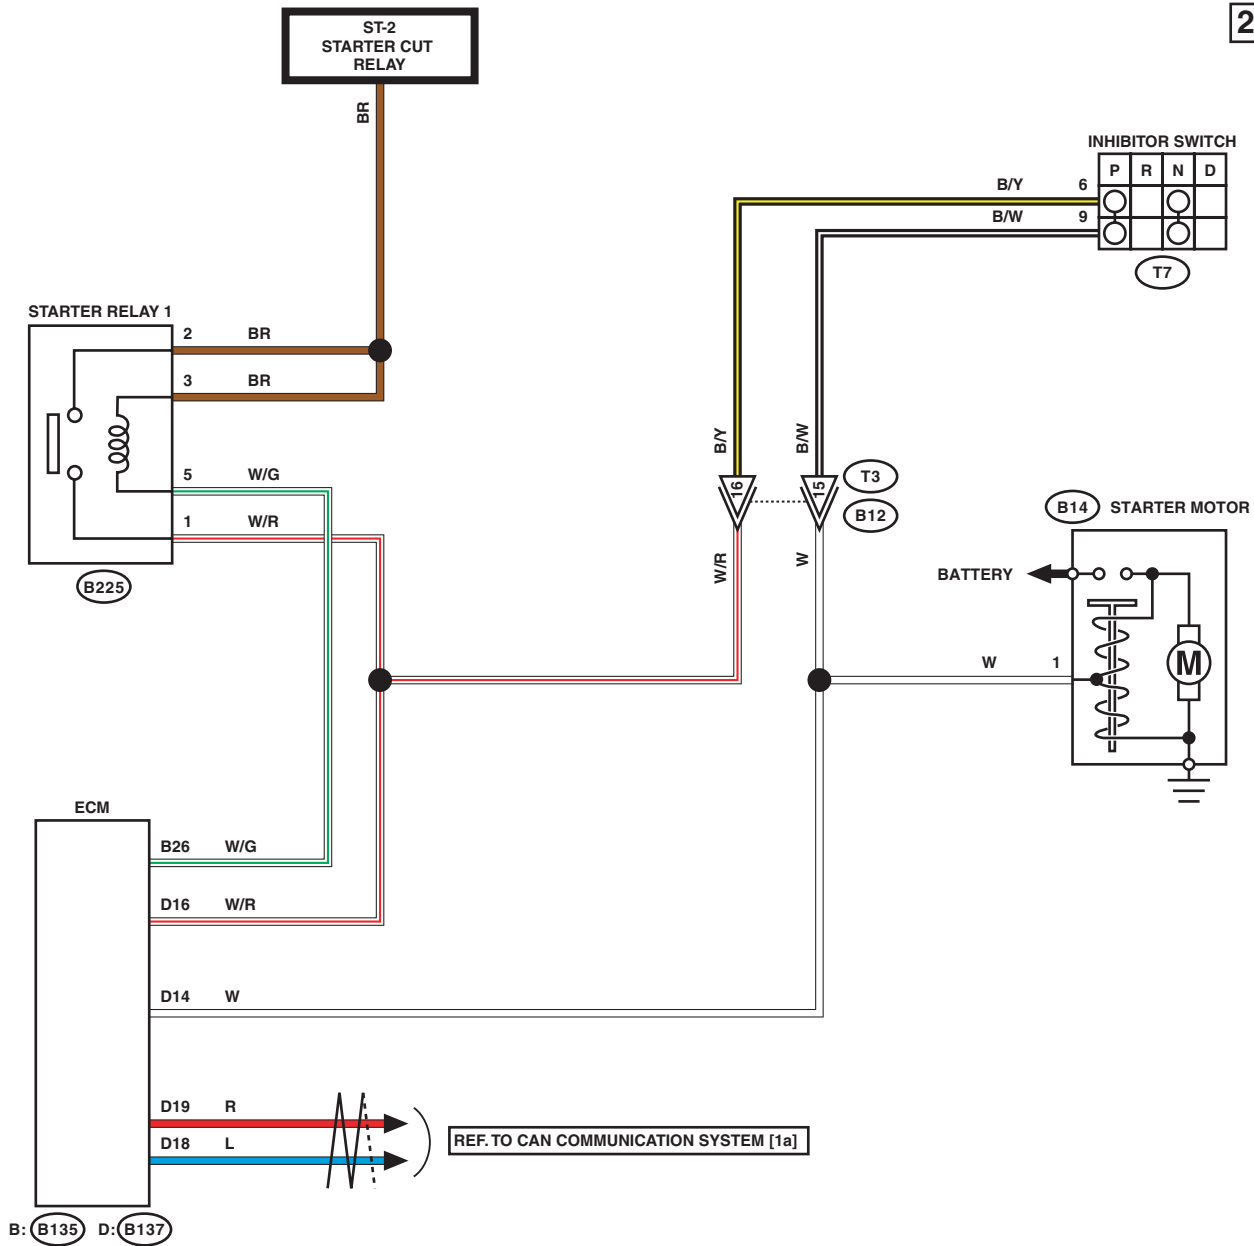

WI-40761


Engine Electrical System

WIRING SYSTEM

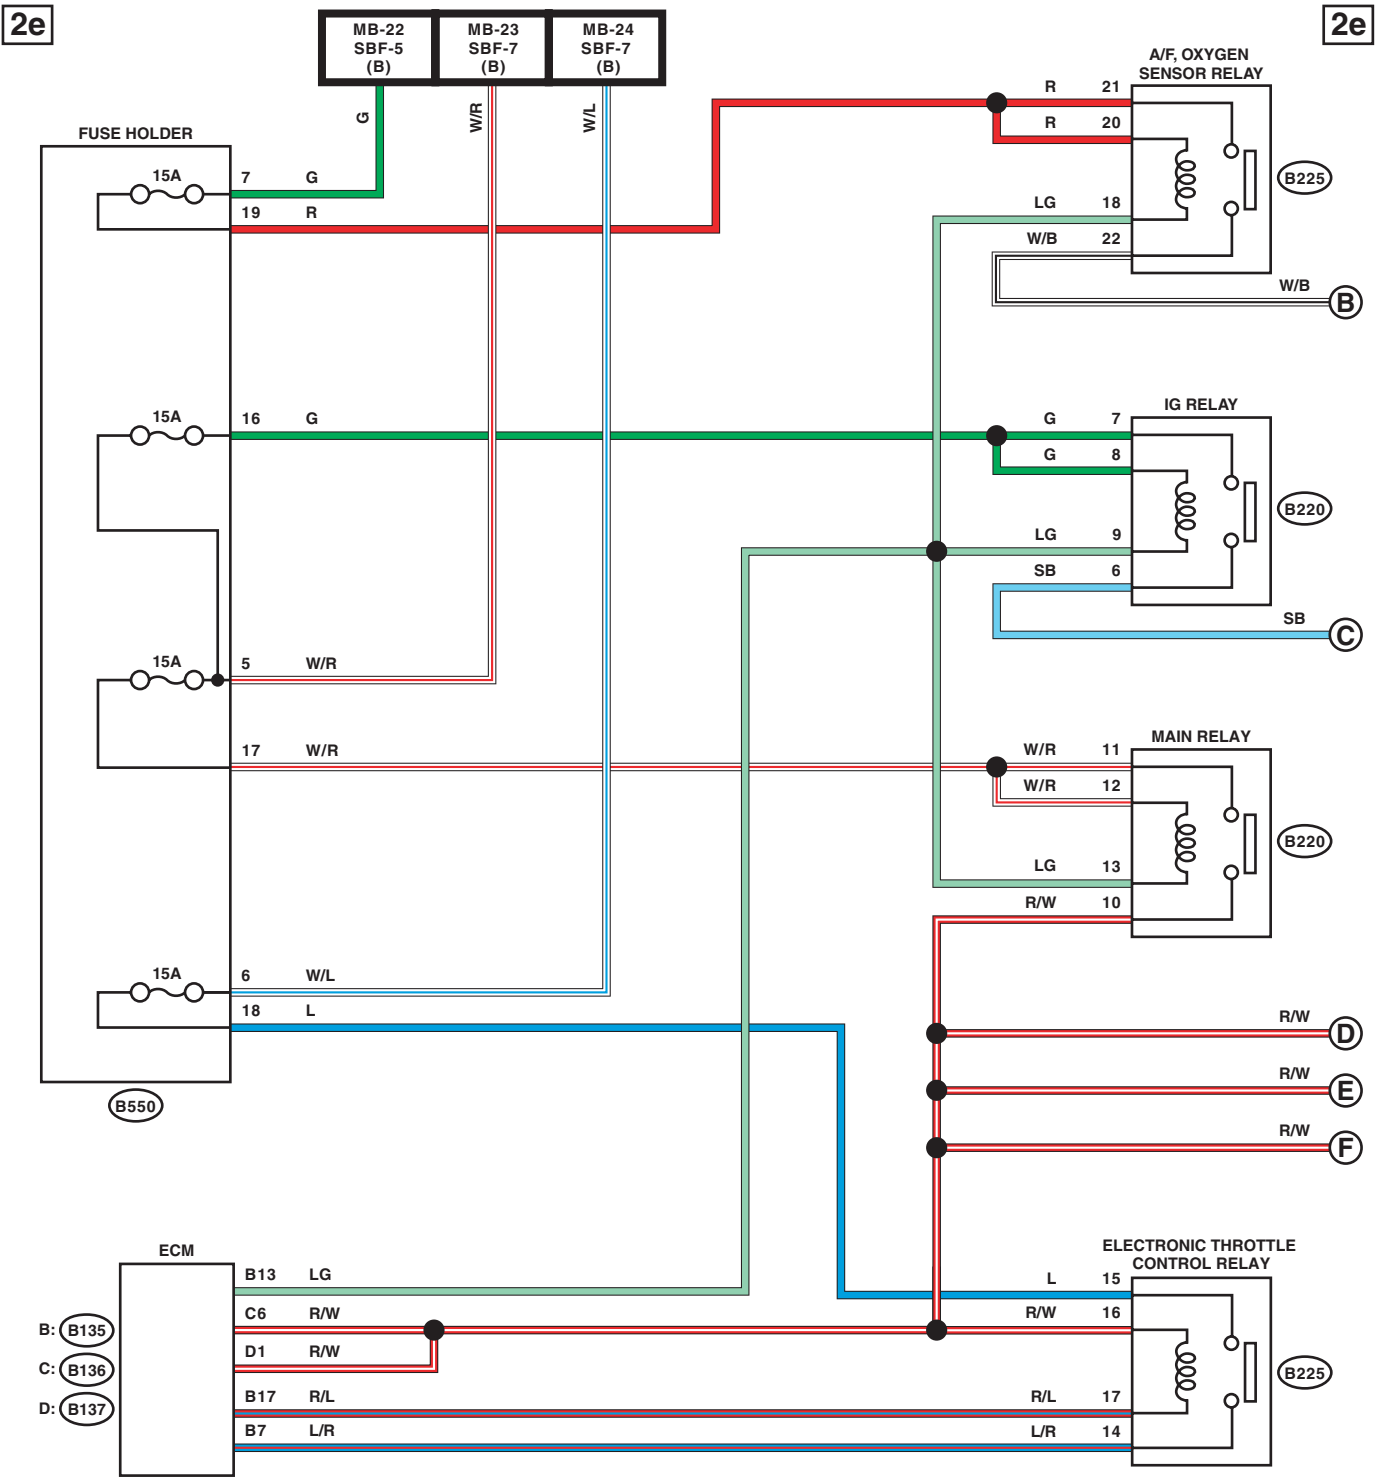

WIRING SYSTEM

2f

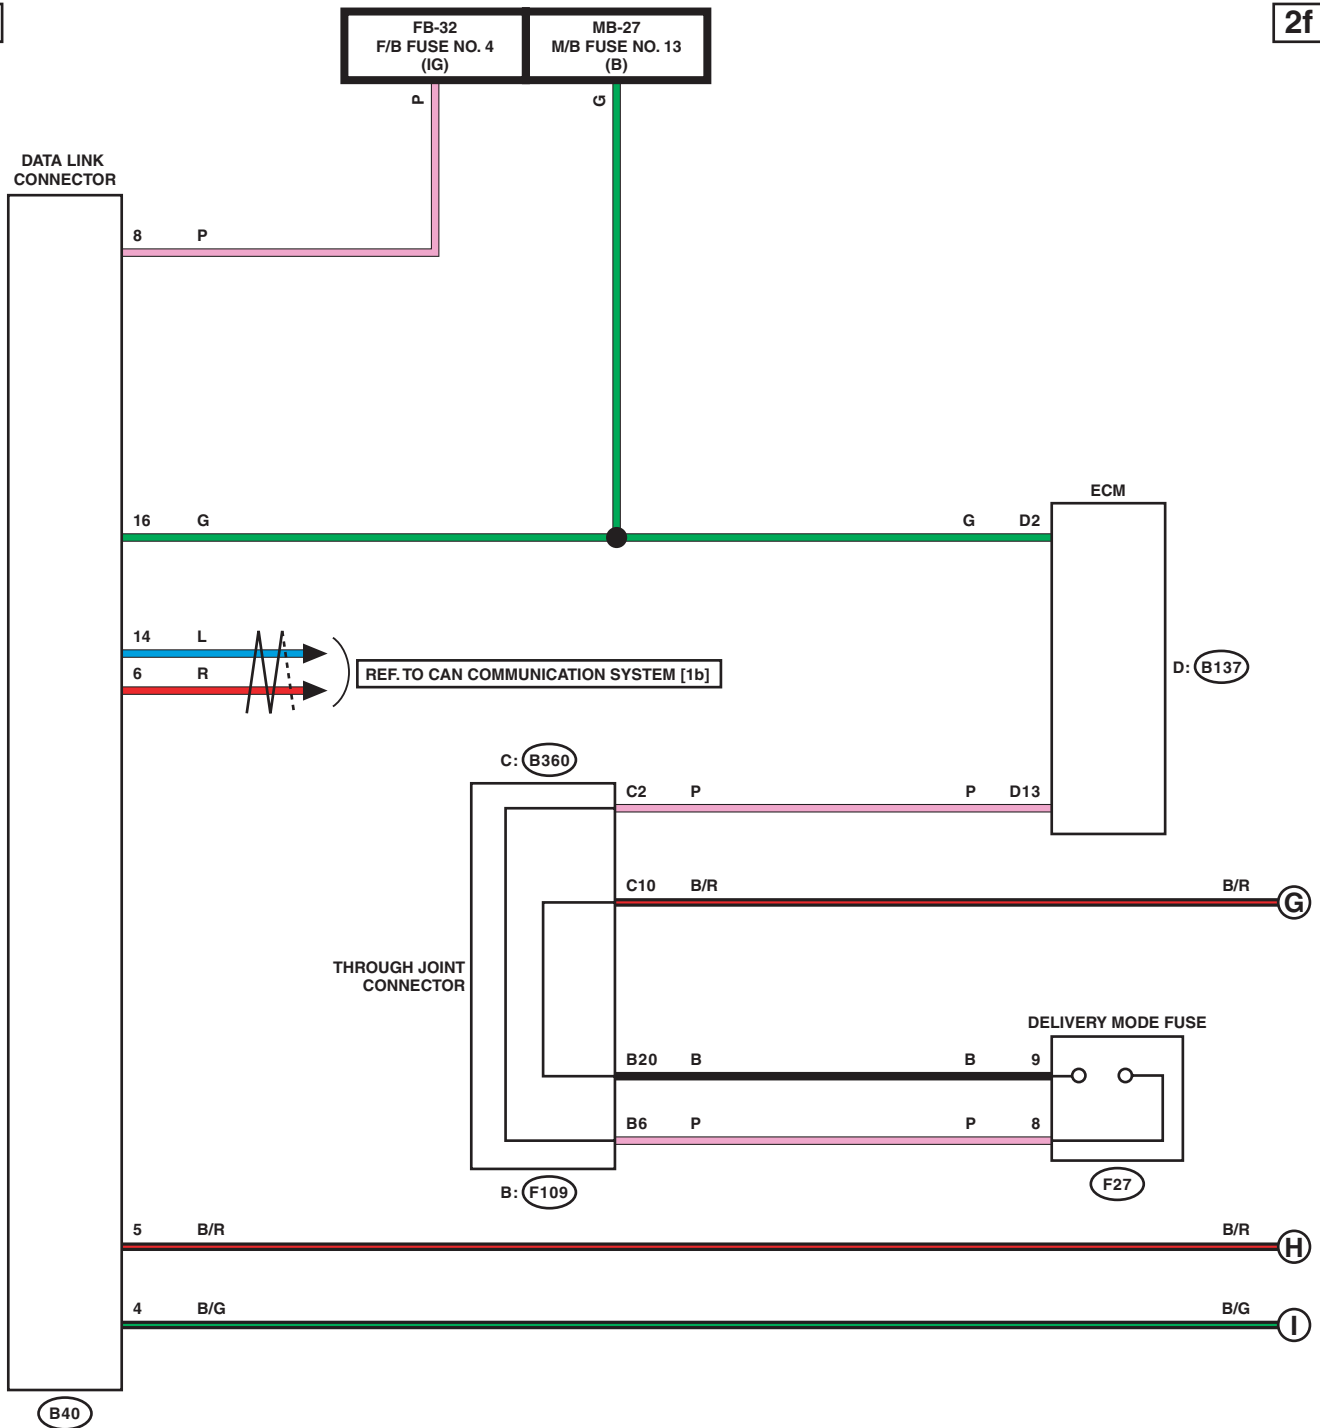
**WI-185**

Engine Electrical System

WIRING SYSTEM

2g


2g

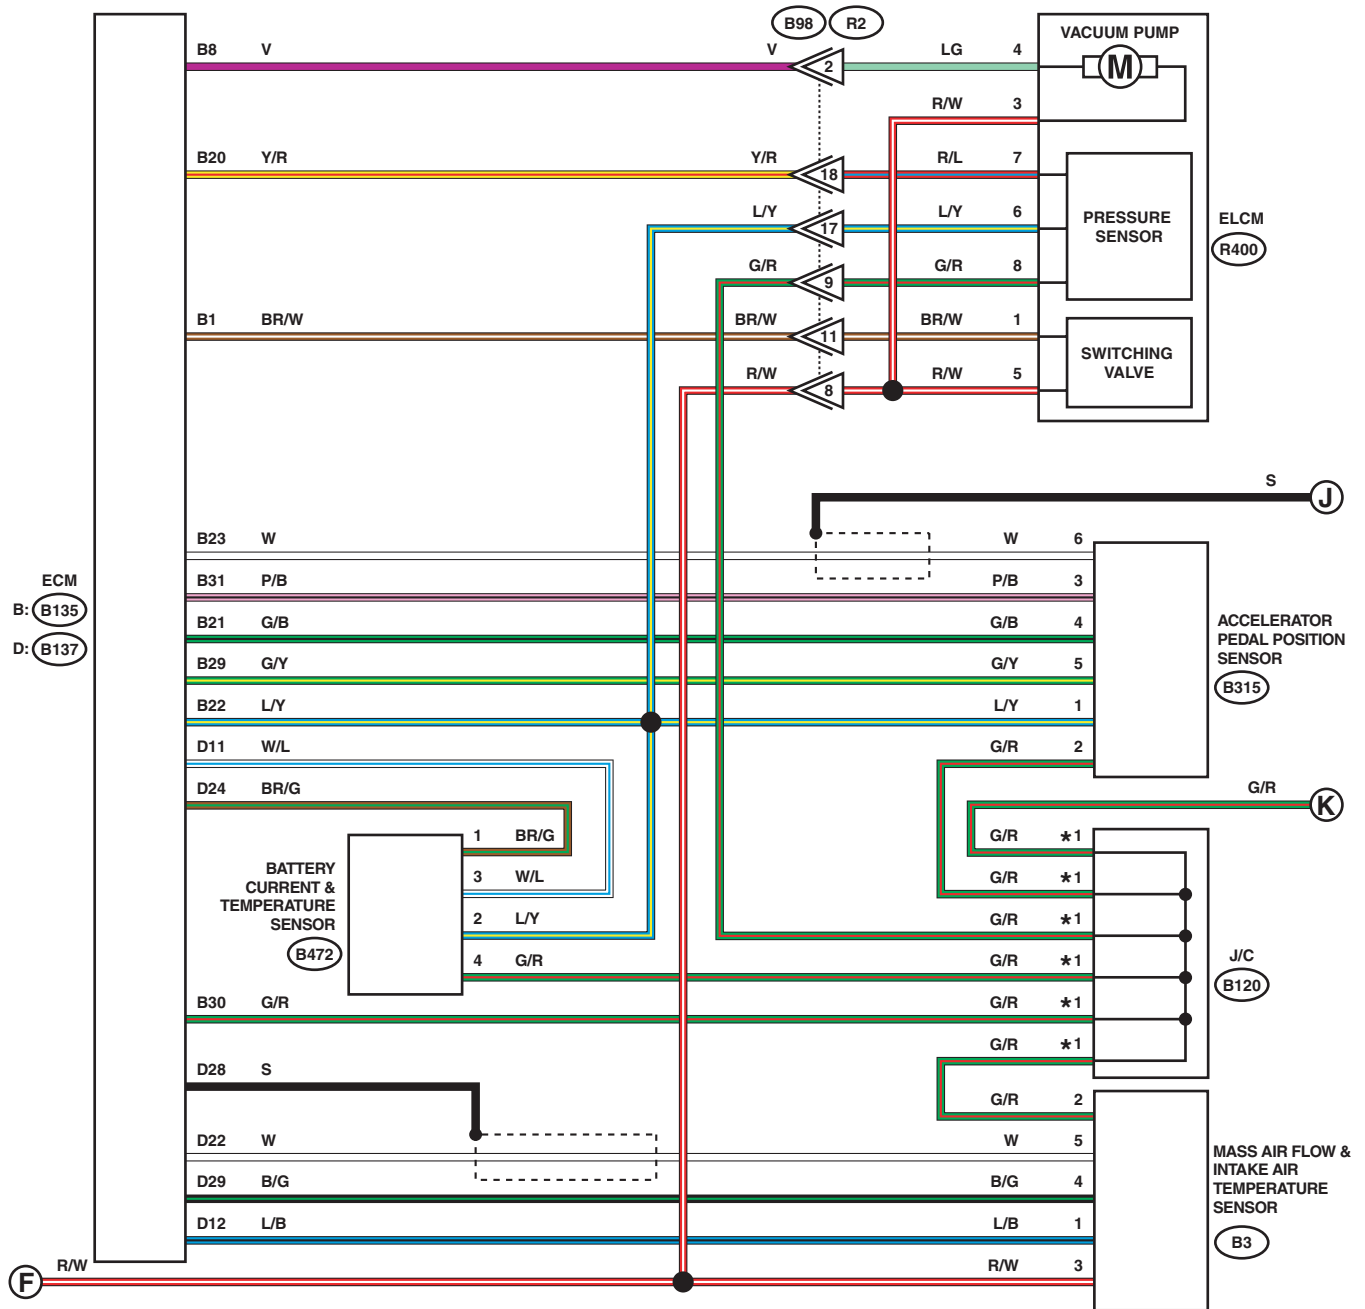

WI-45746

2h

2h

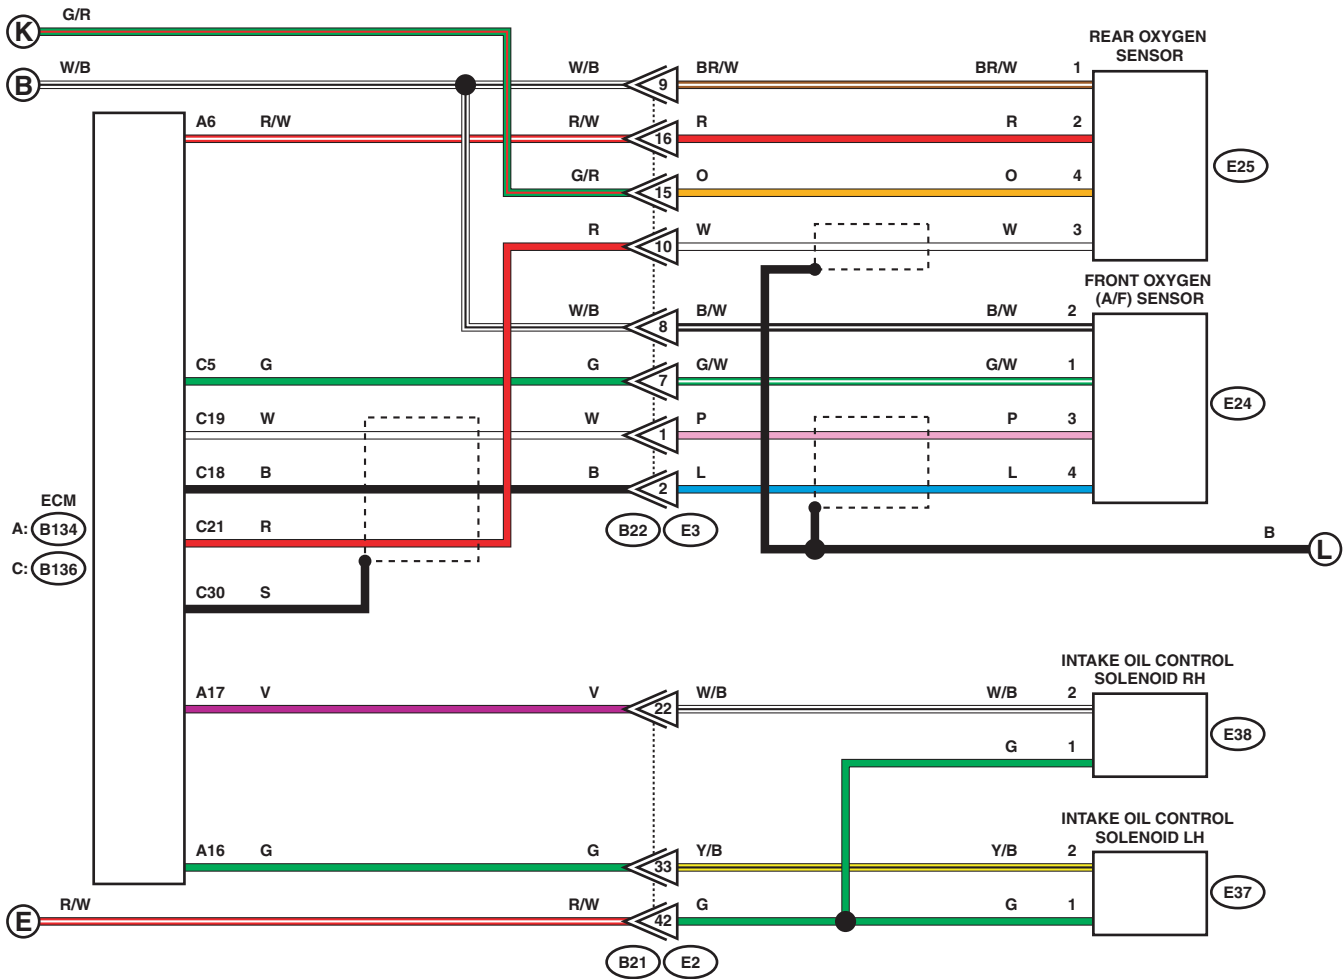


WI-40765

Engine Electrical System

WIRING SYSTEM

2i


2i

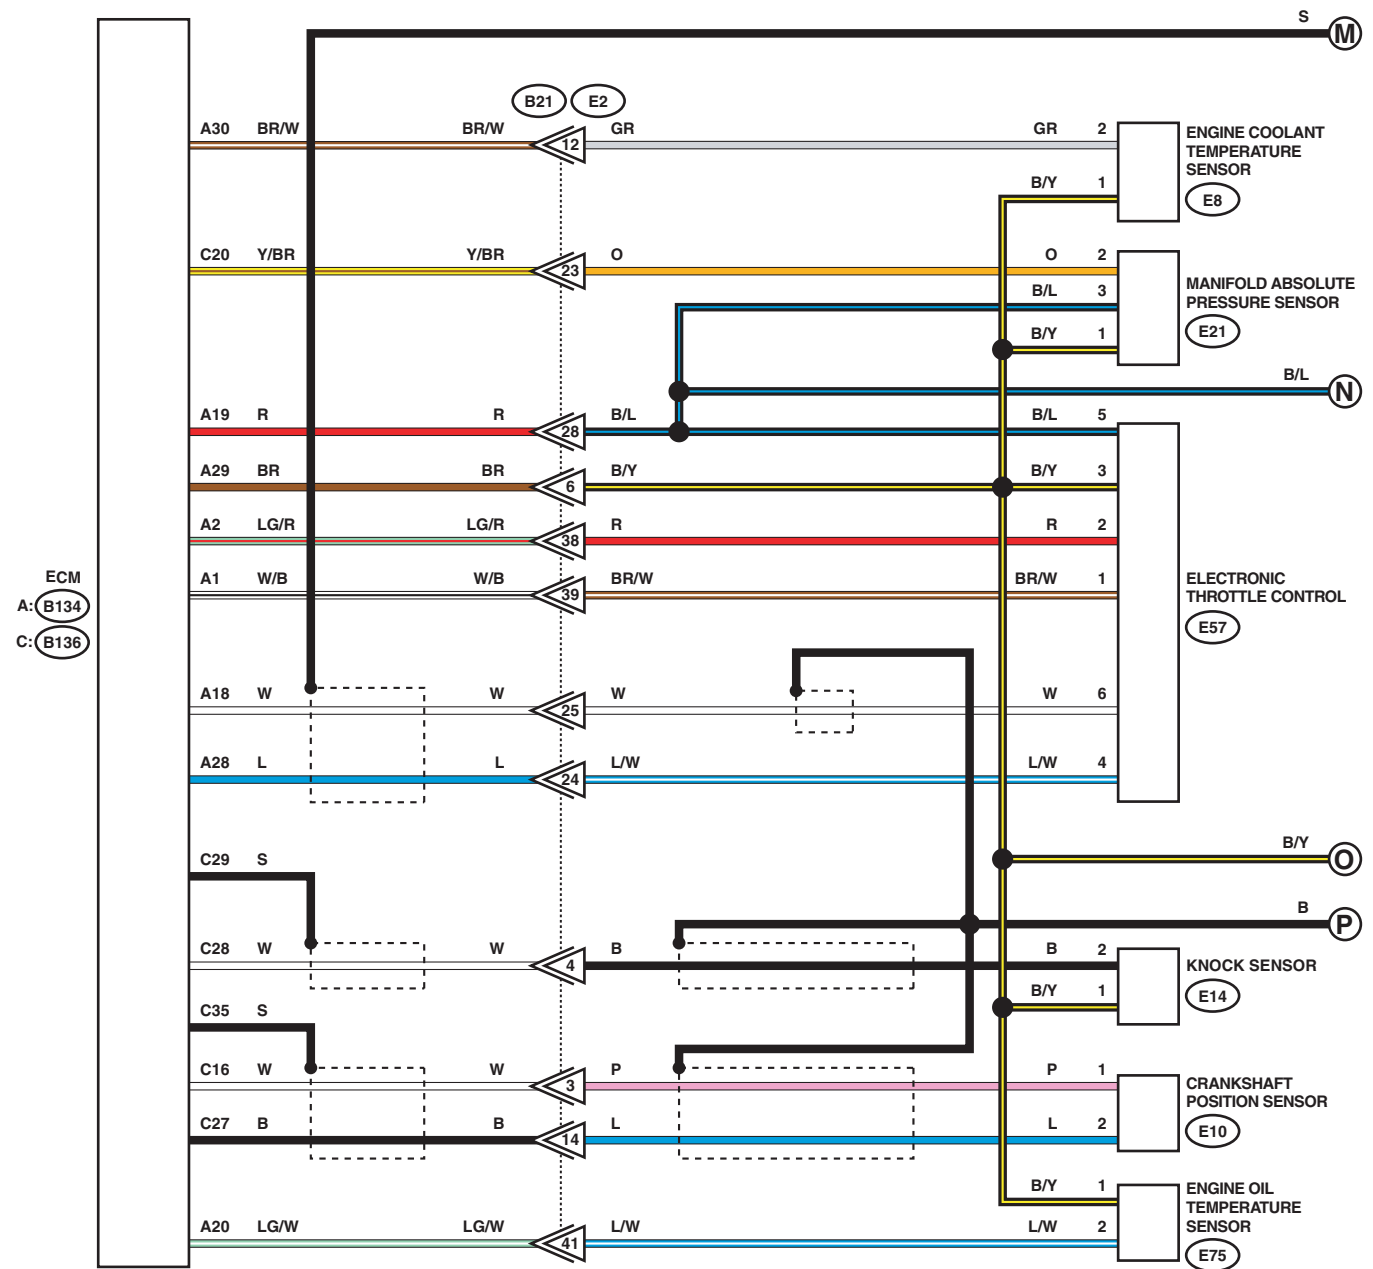

WI-45747

Engine Electrical System

WIRING SYSTEM

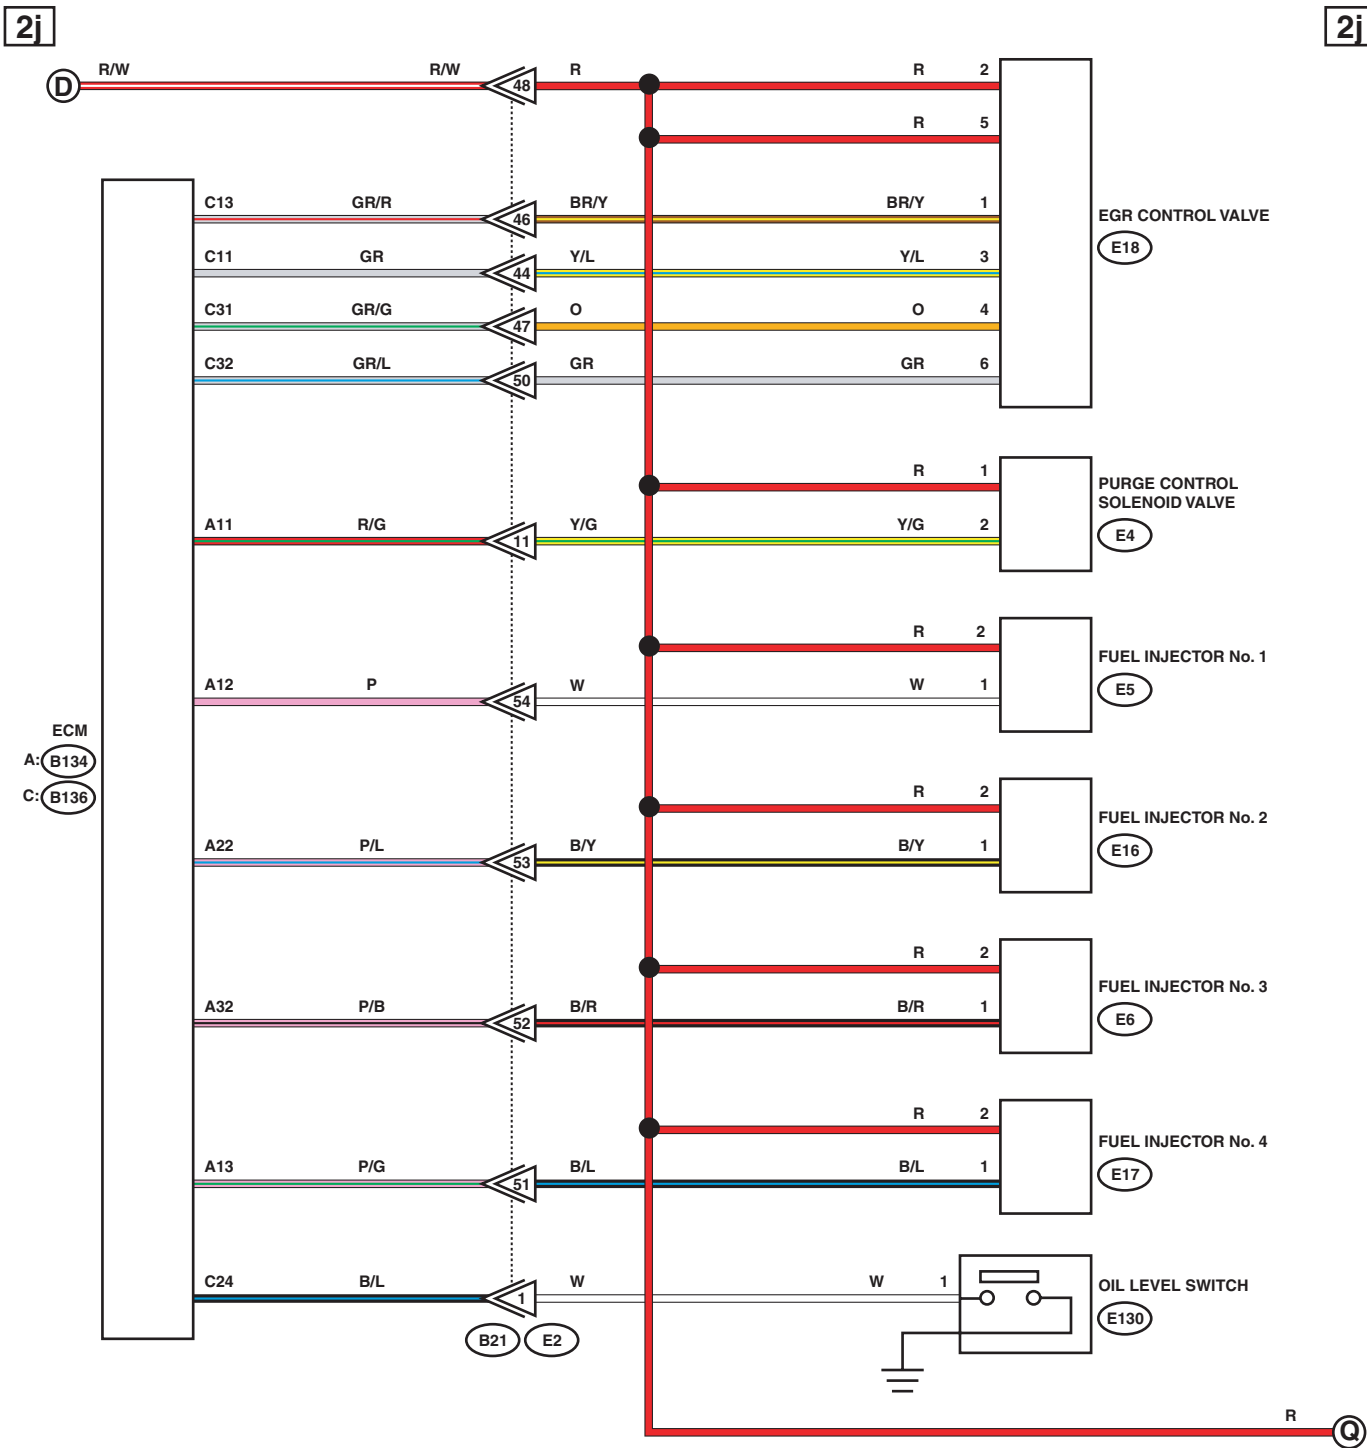


Engine Electrical System

WIRING SYSTEM

2k


2k

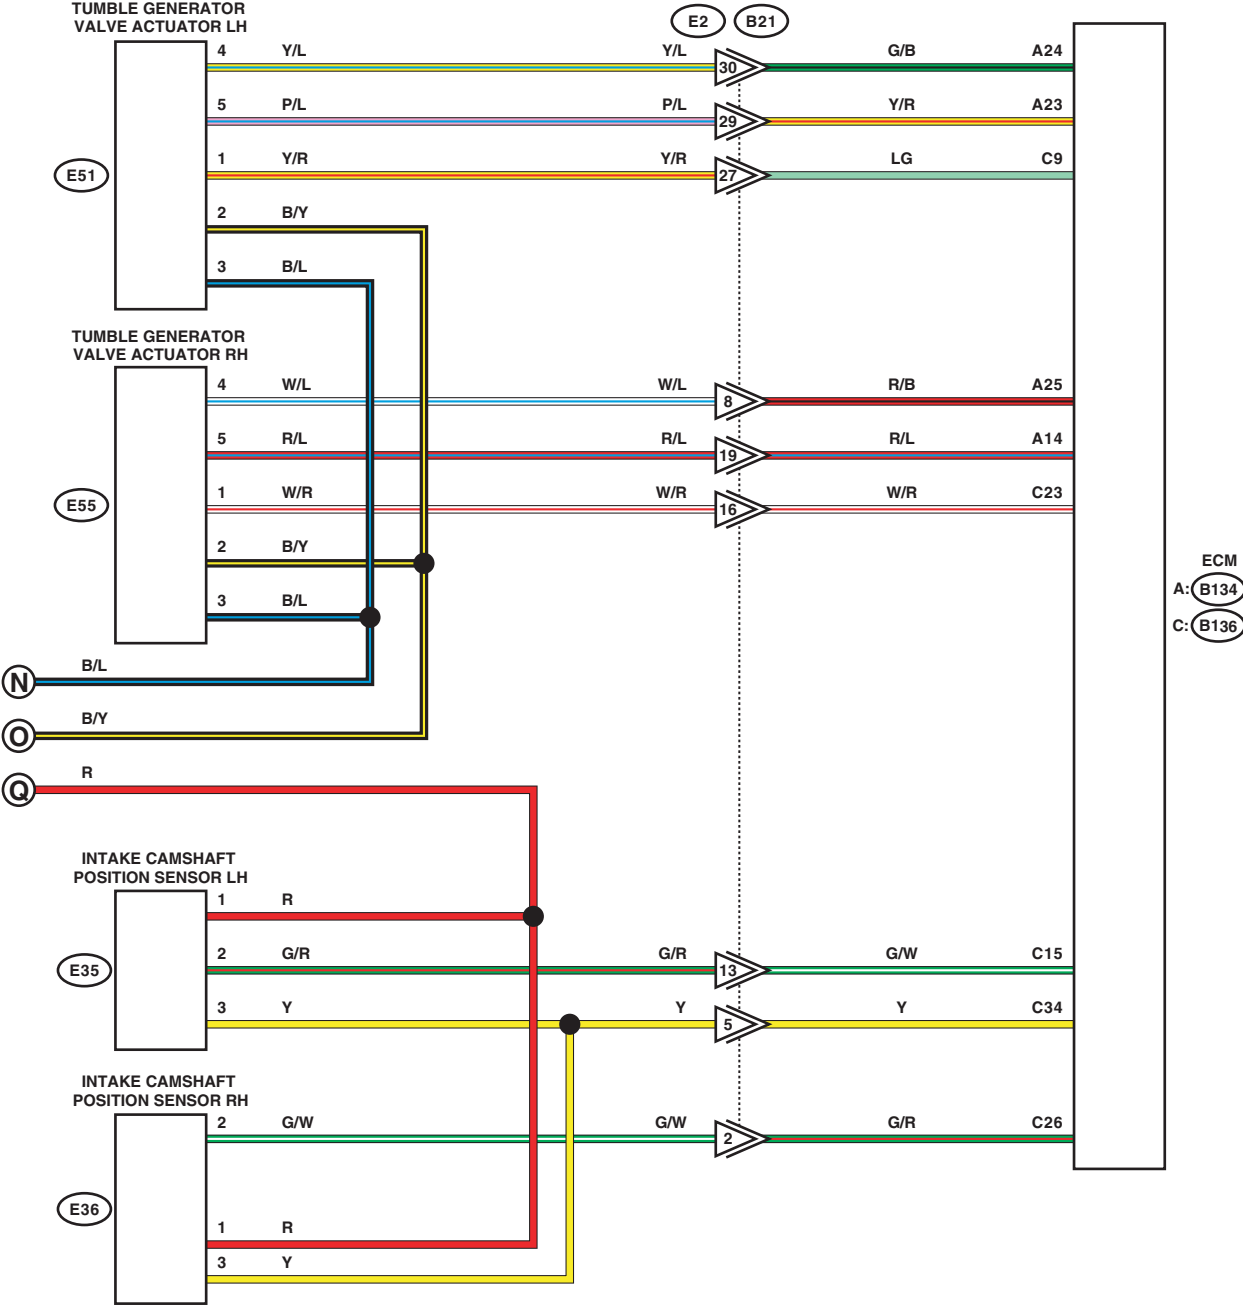

WI-40768

21


21

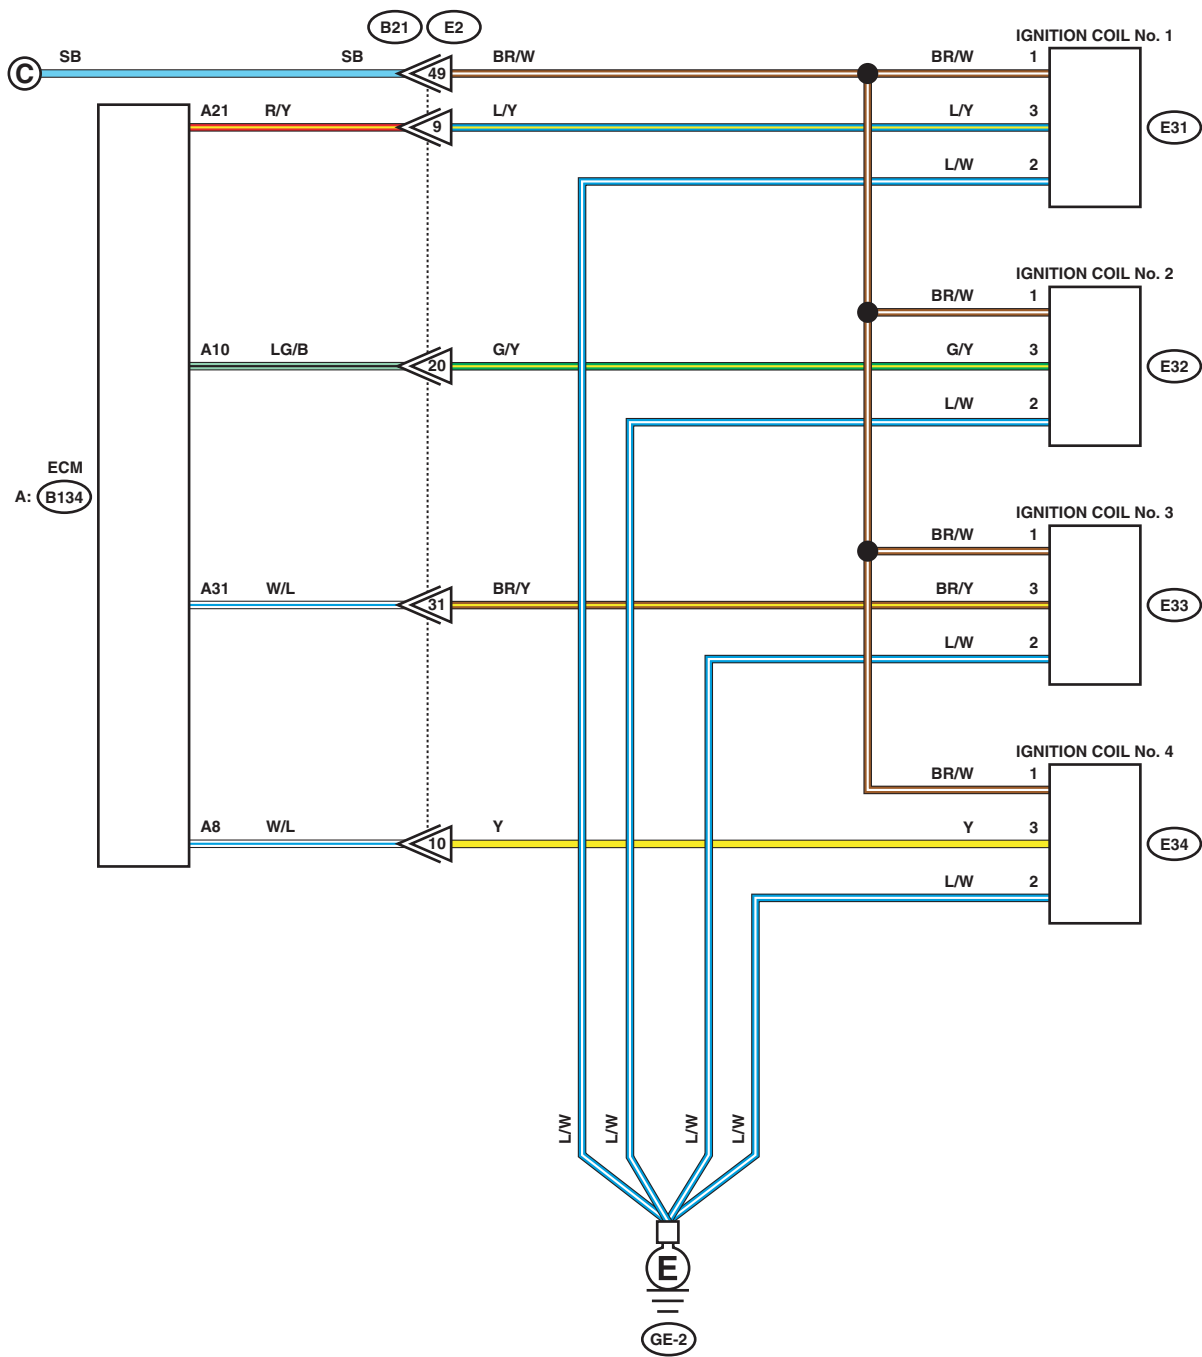

WI-40769

Engine Electrical System

WIRING SYSTEM

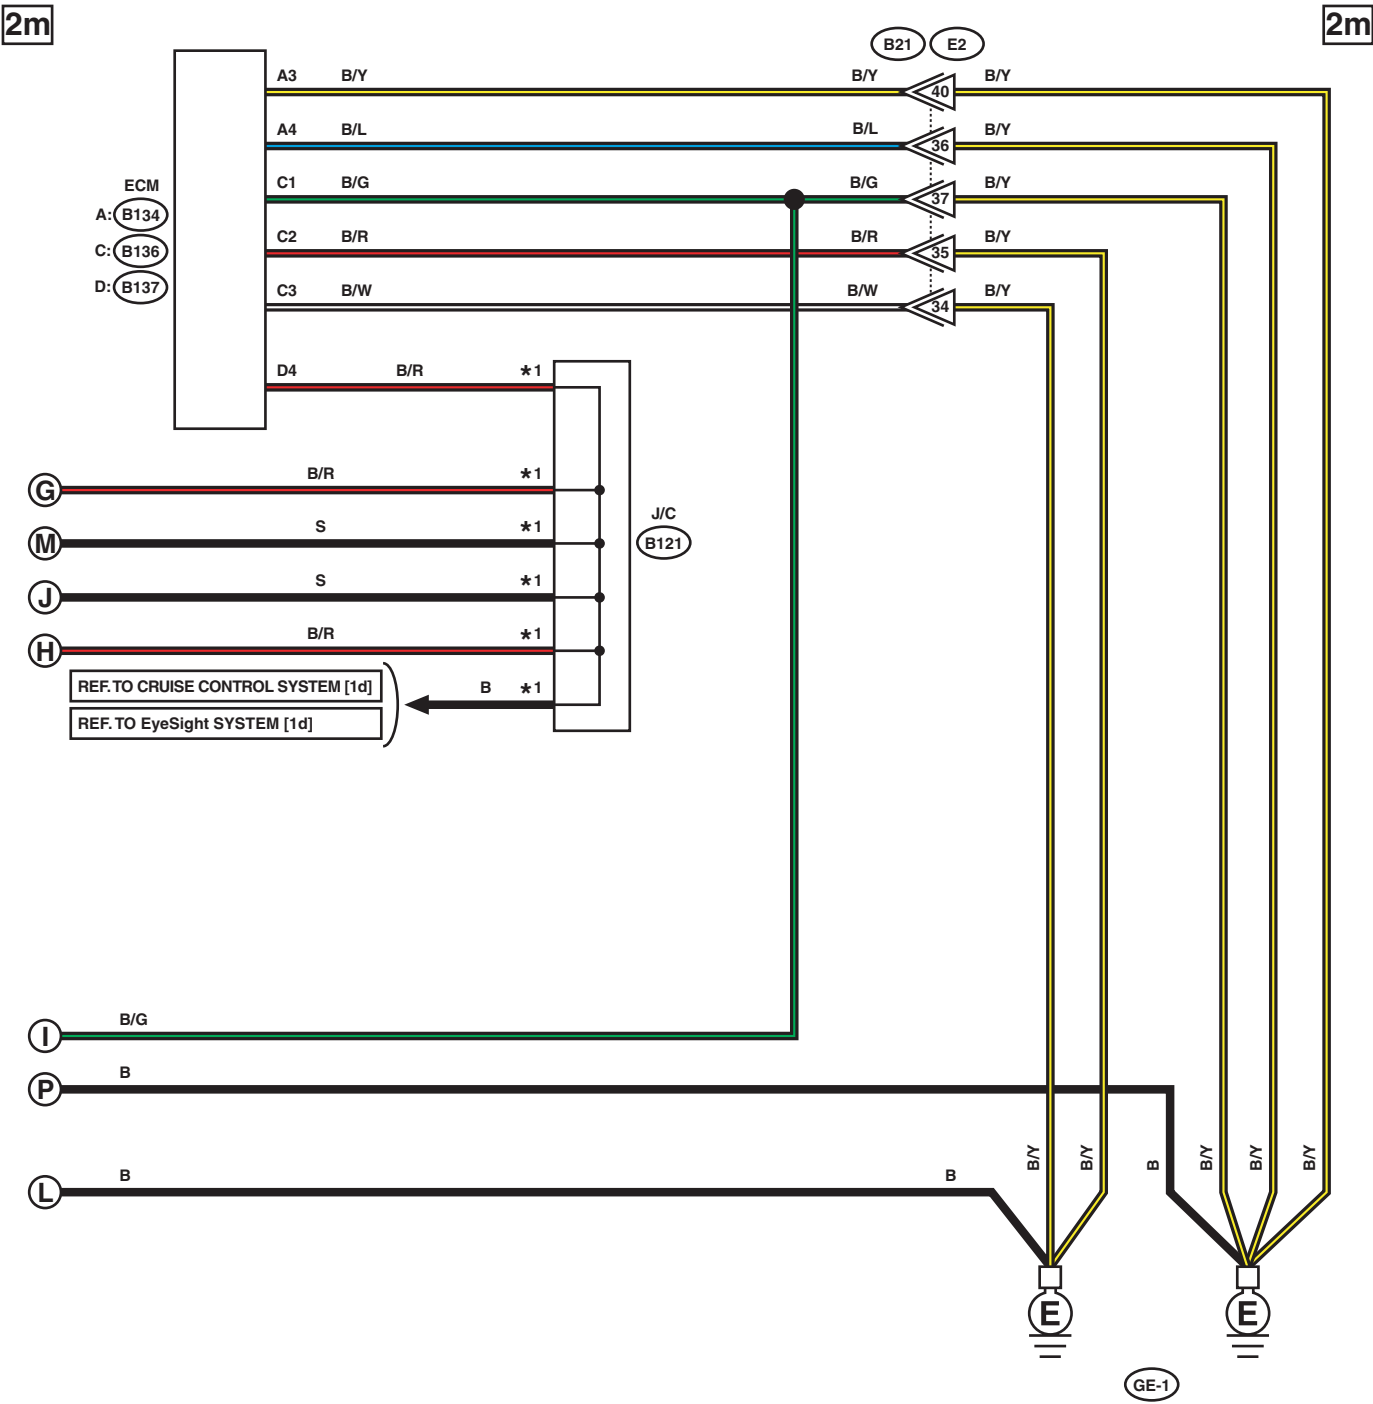


*1 : TERMINAL No. OPTIONAL ARRANGEMENT

WI-45749

2n

2n

LIST OF CONNECTORS




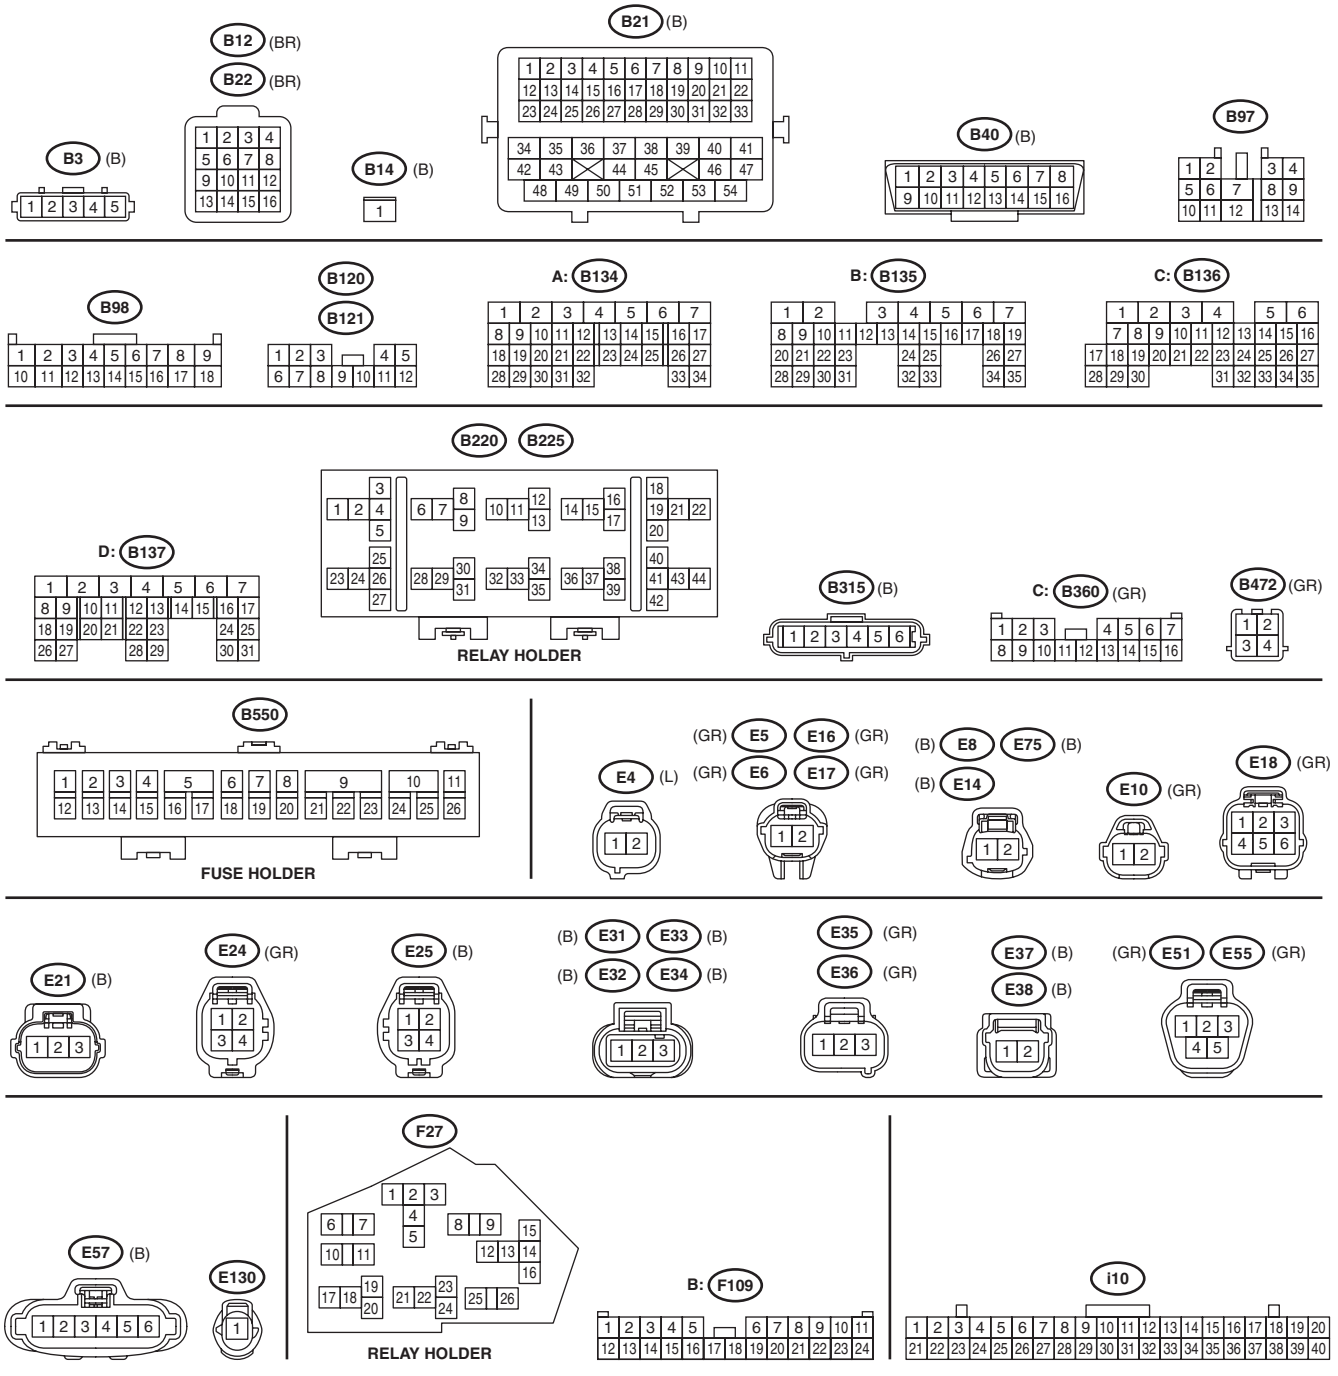


WI-40771

2o

2o


LIST OF CONNECTORS

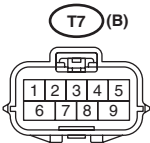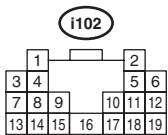


Engine Electrical System

WIRING SYSTEM

3. TURBO MODEL (WITHOUT PUSH BUTTON START)

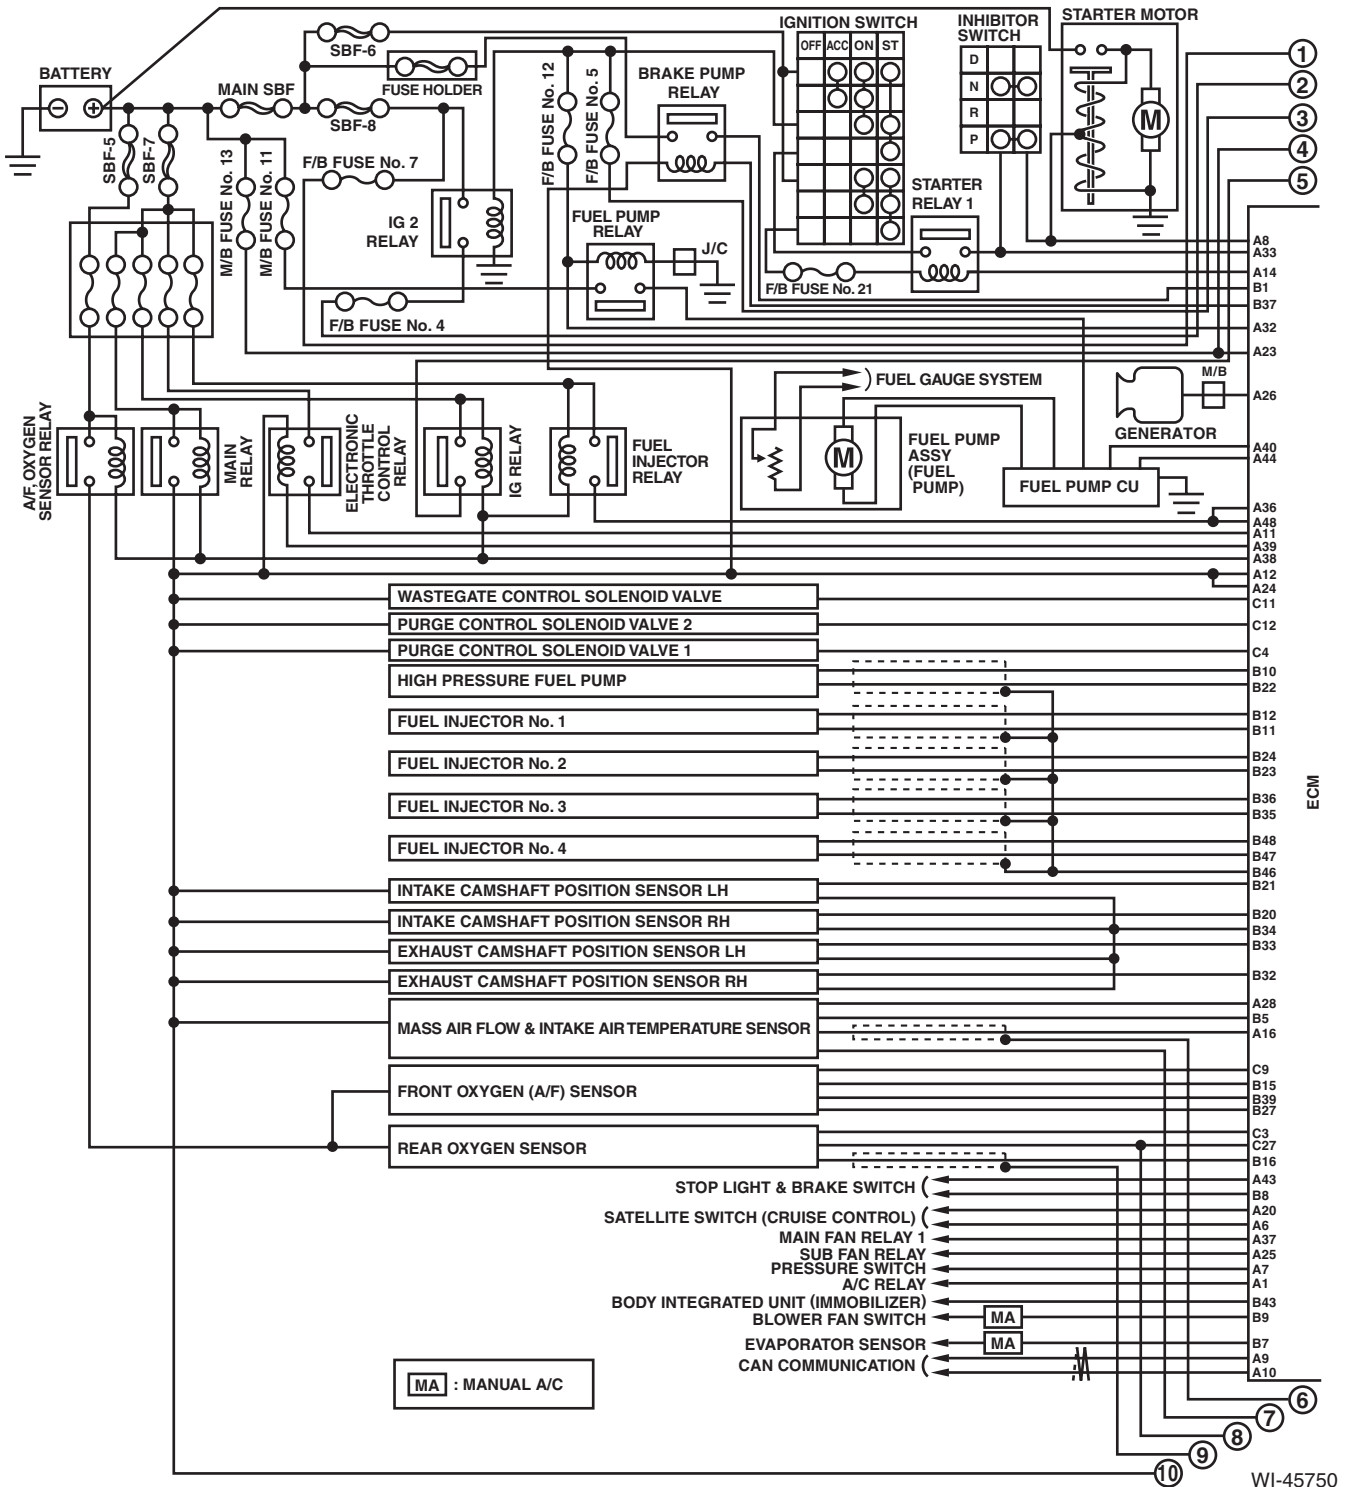


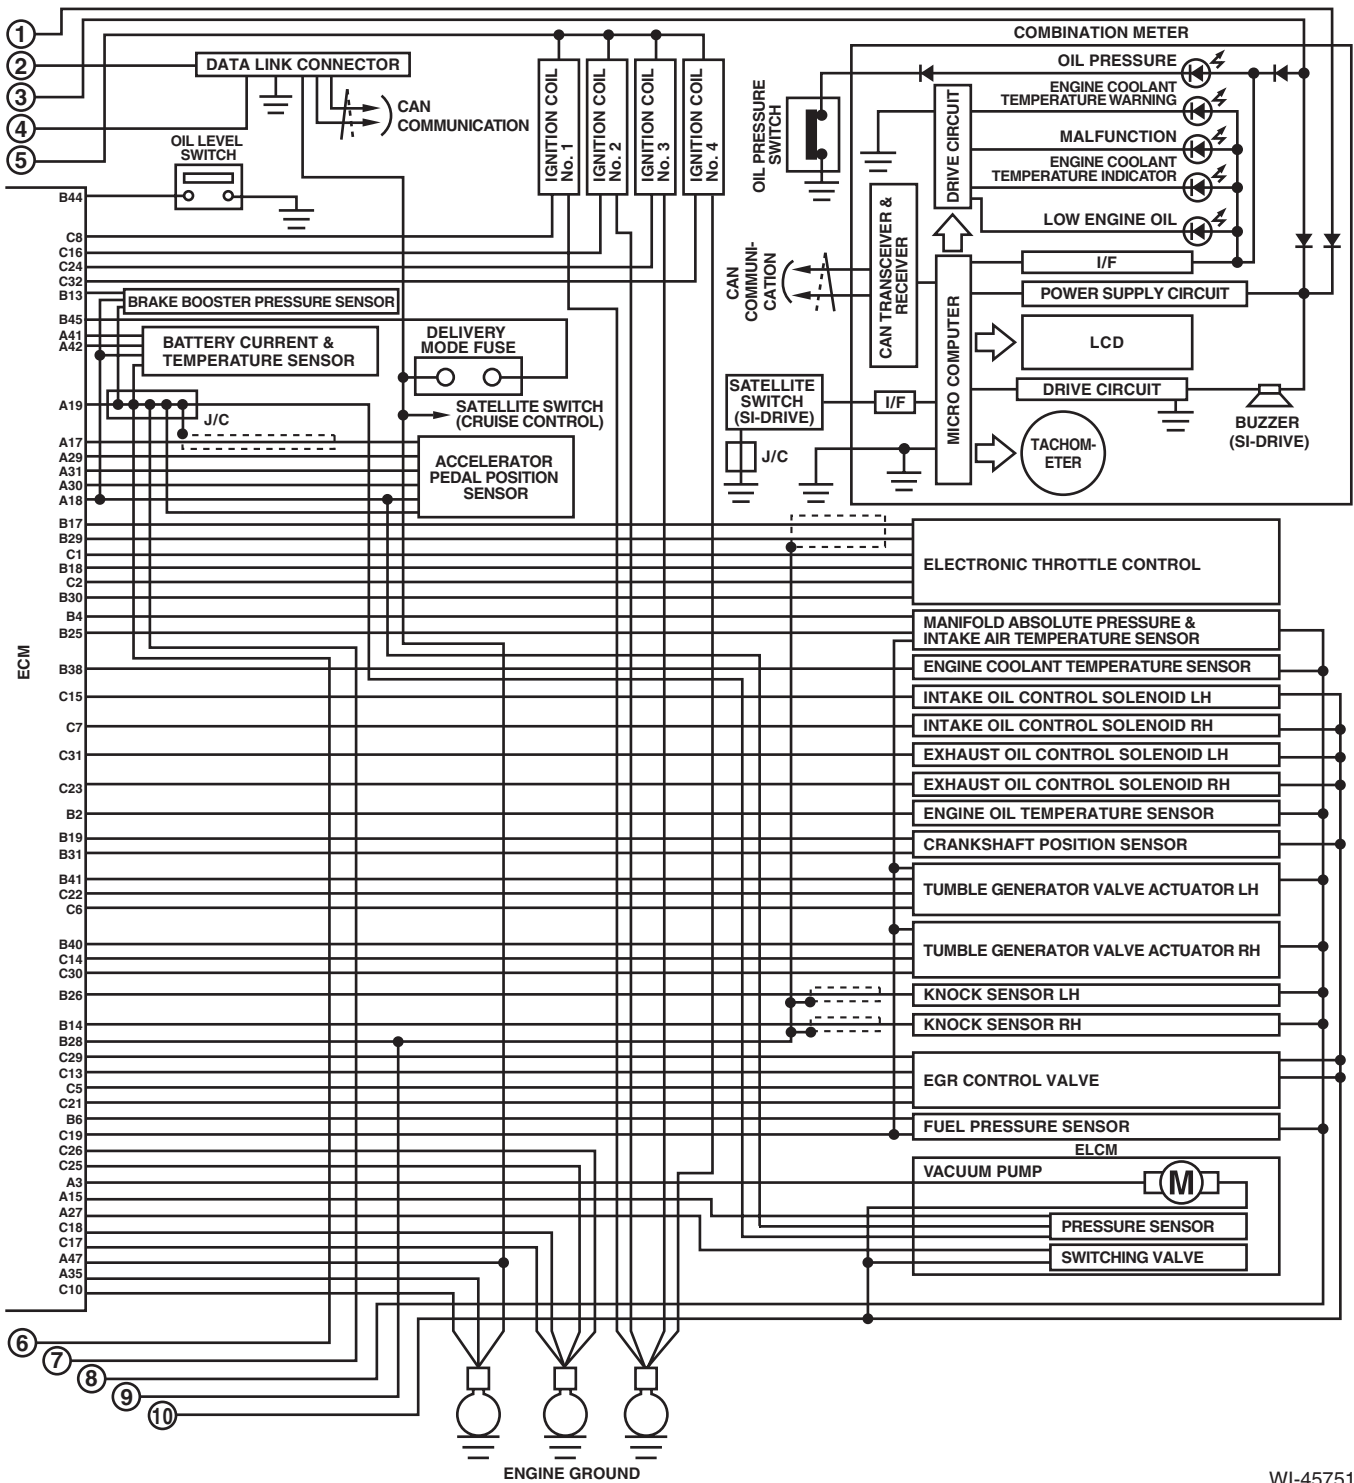

WI-45751

Engine Electrical System


WIRING SYSTEM

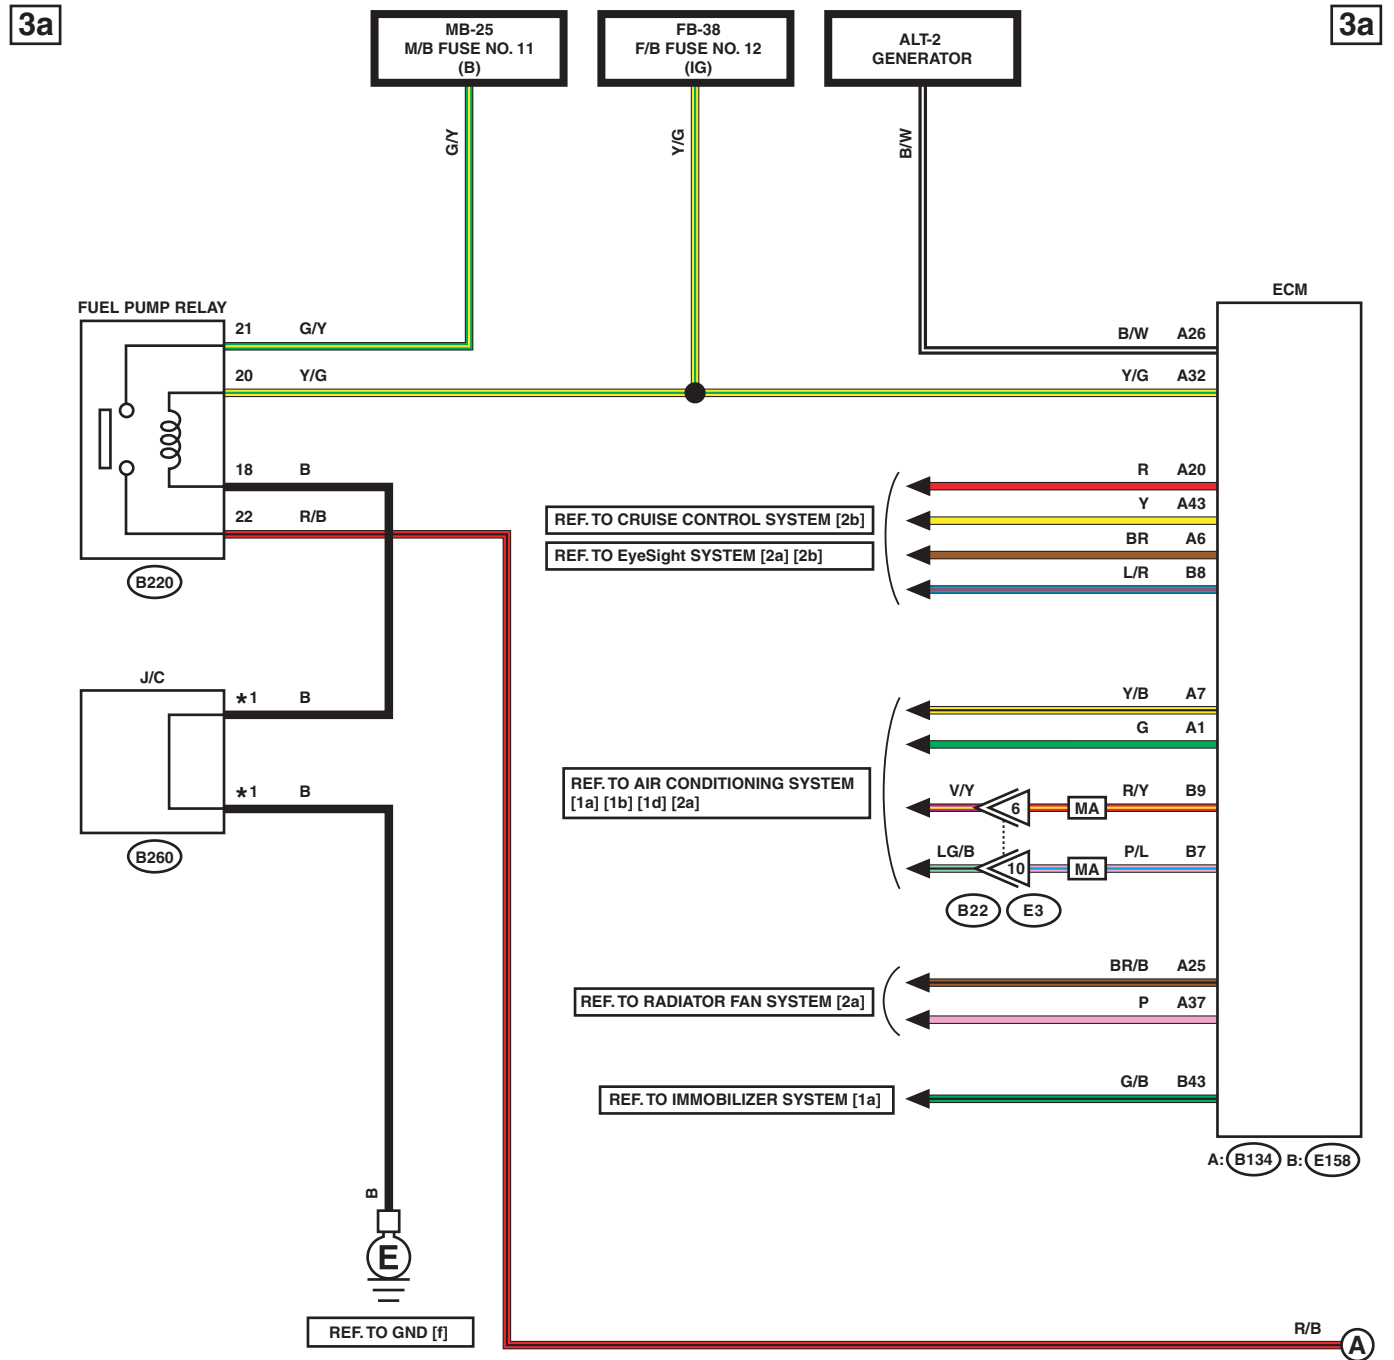

WI-45752

3b

3b

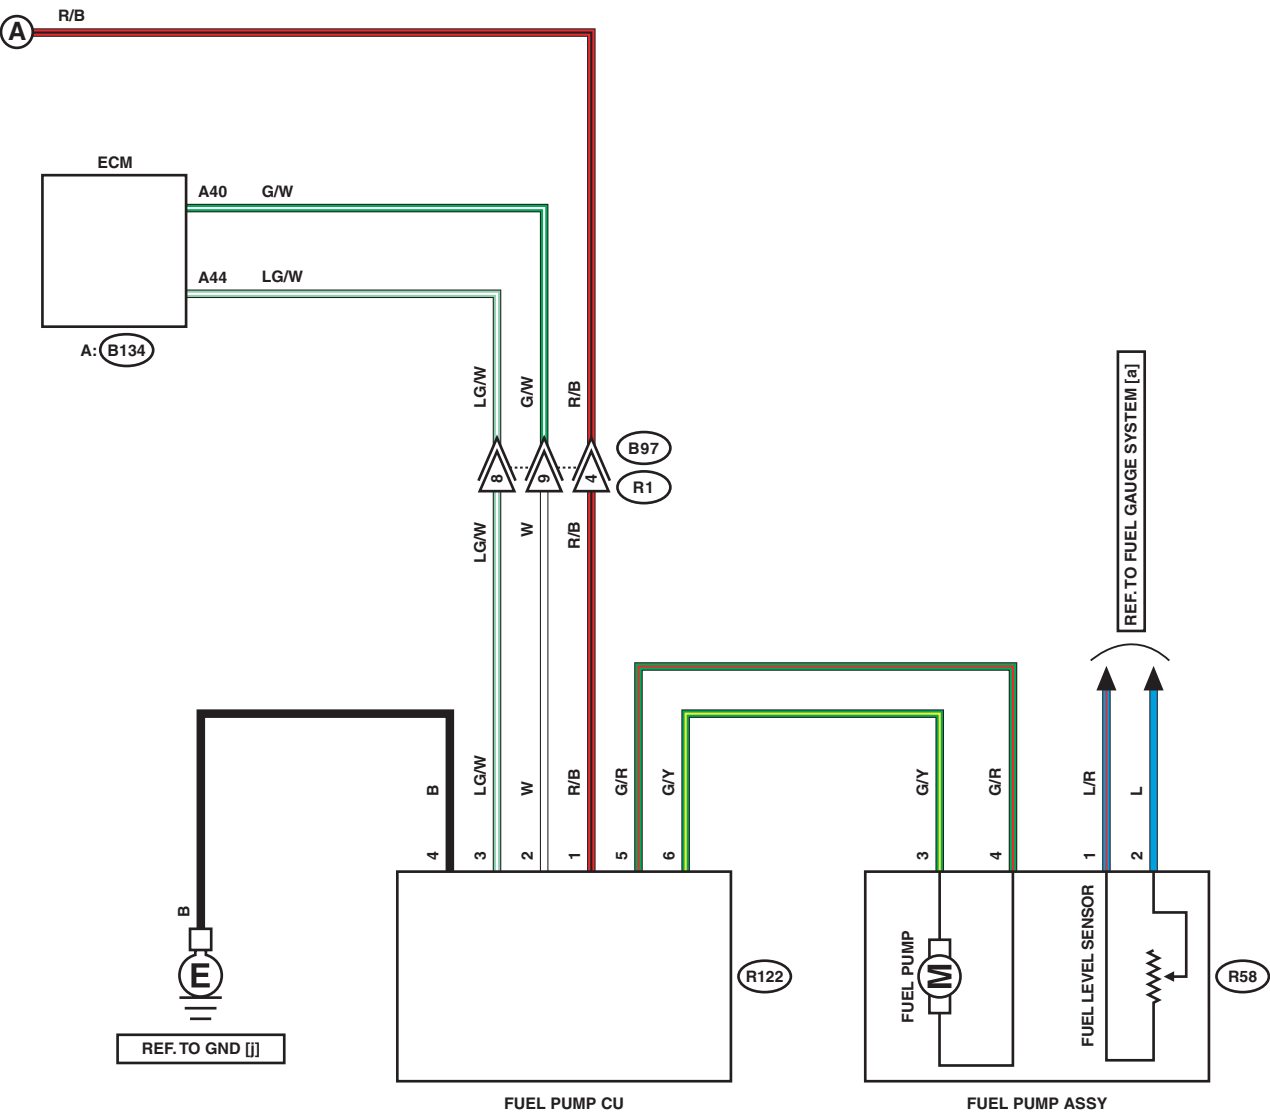

WI-45753

Engine Electrical System


WIRING SYSTEM

3c

FB-36
F/B FUSE NO. 5
(IG)

FB-17
F/B FUSE NO. 7
(B)

3c

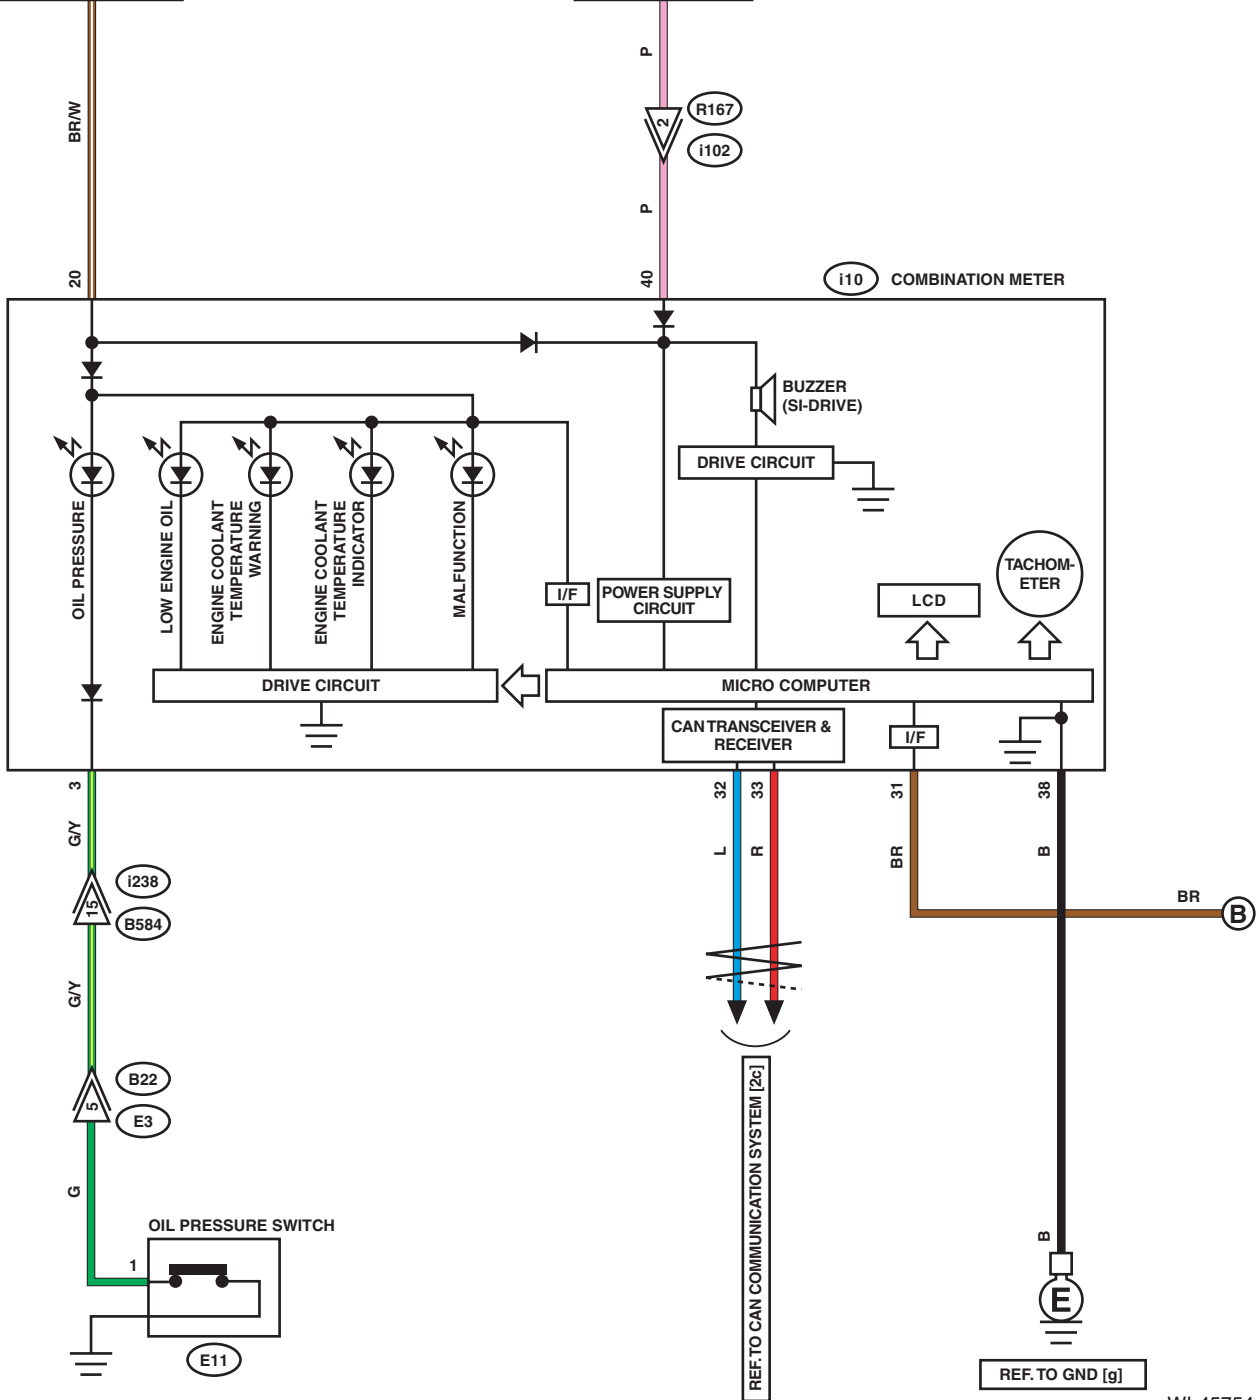

WI-45754


WIRING SYSTEM

3d

**WI-201**

Engine Electrical System


WIRING SYSTEM

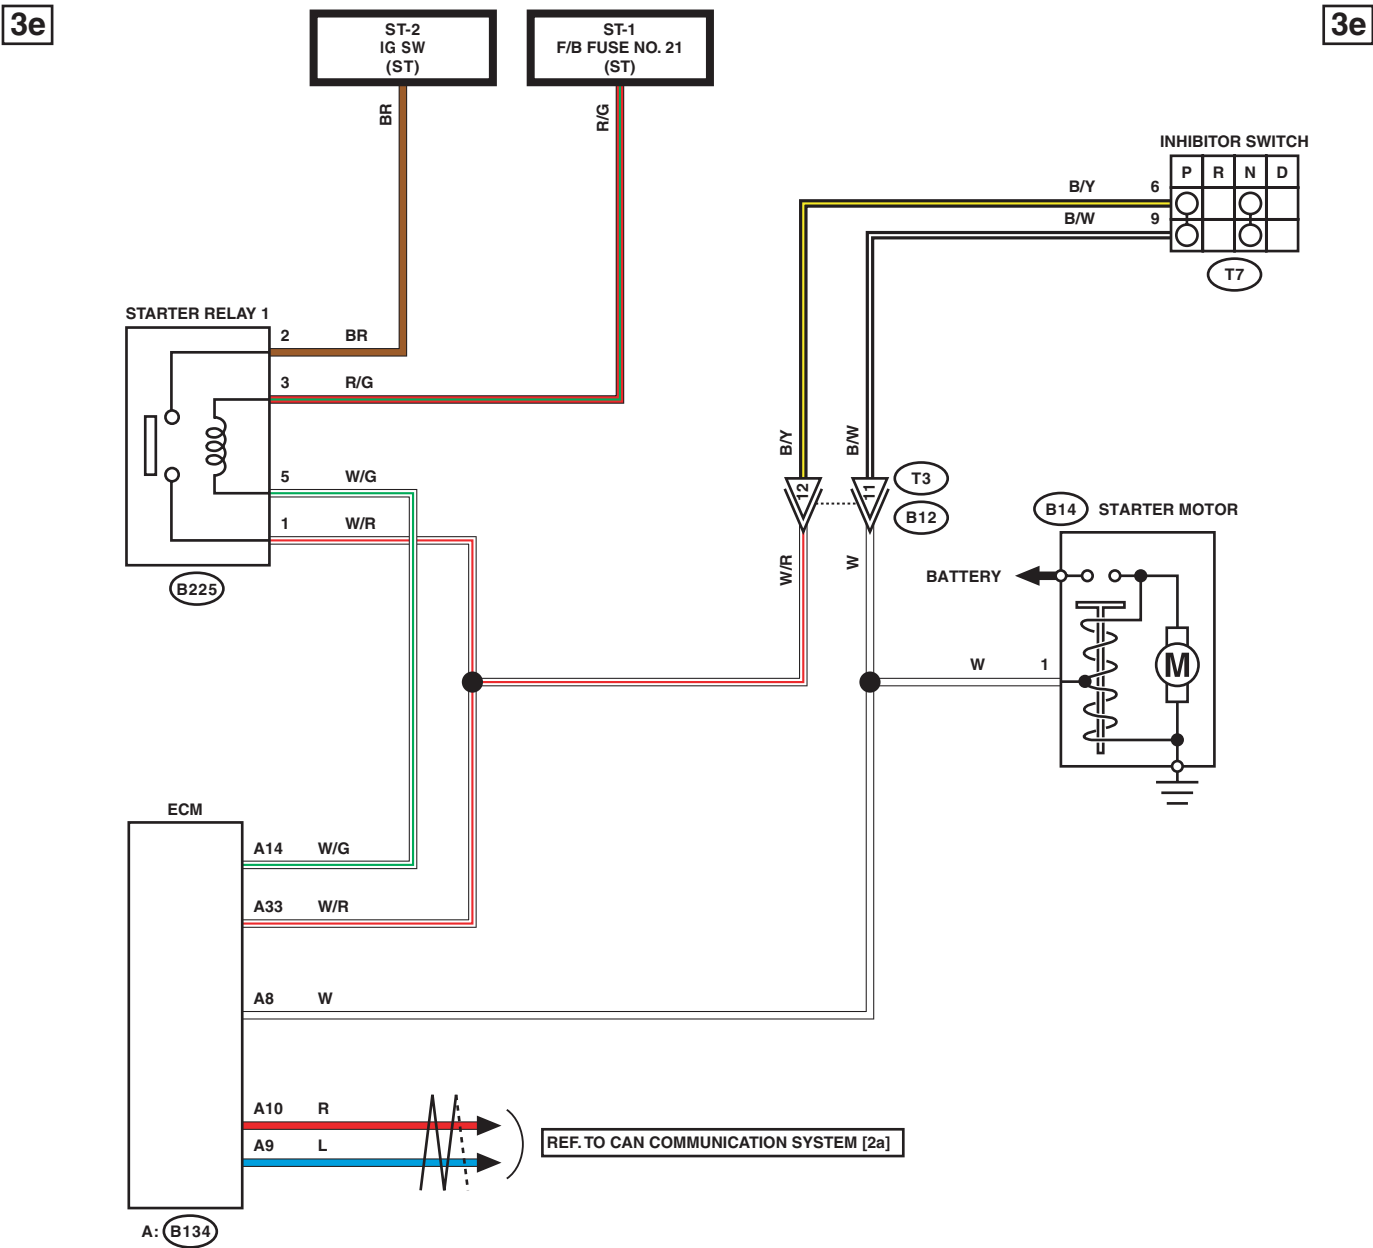

WI-40779


Engine Electrical System

WIRING SYSTEM

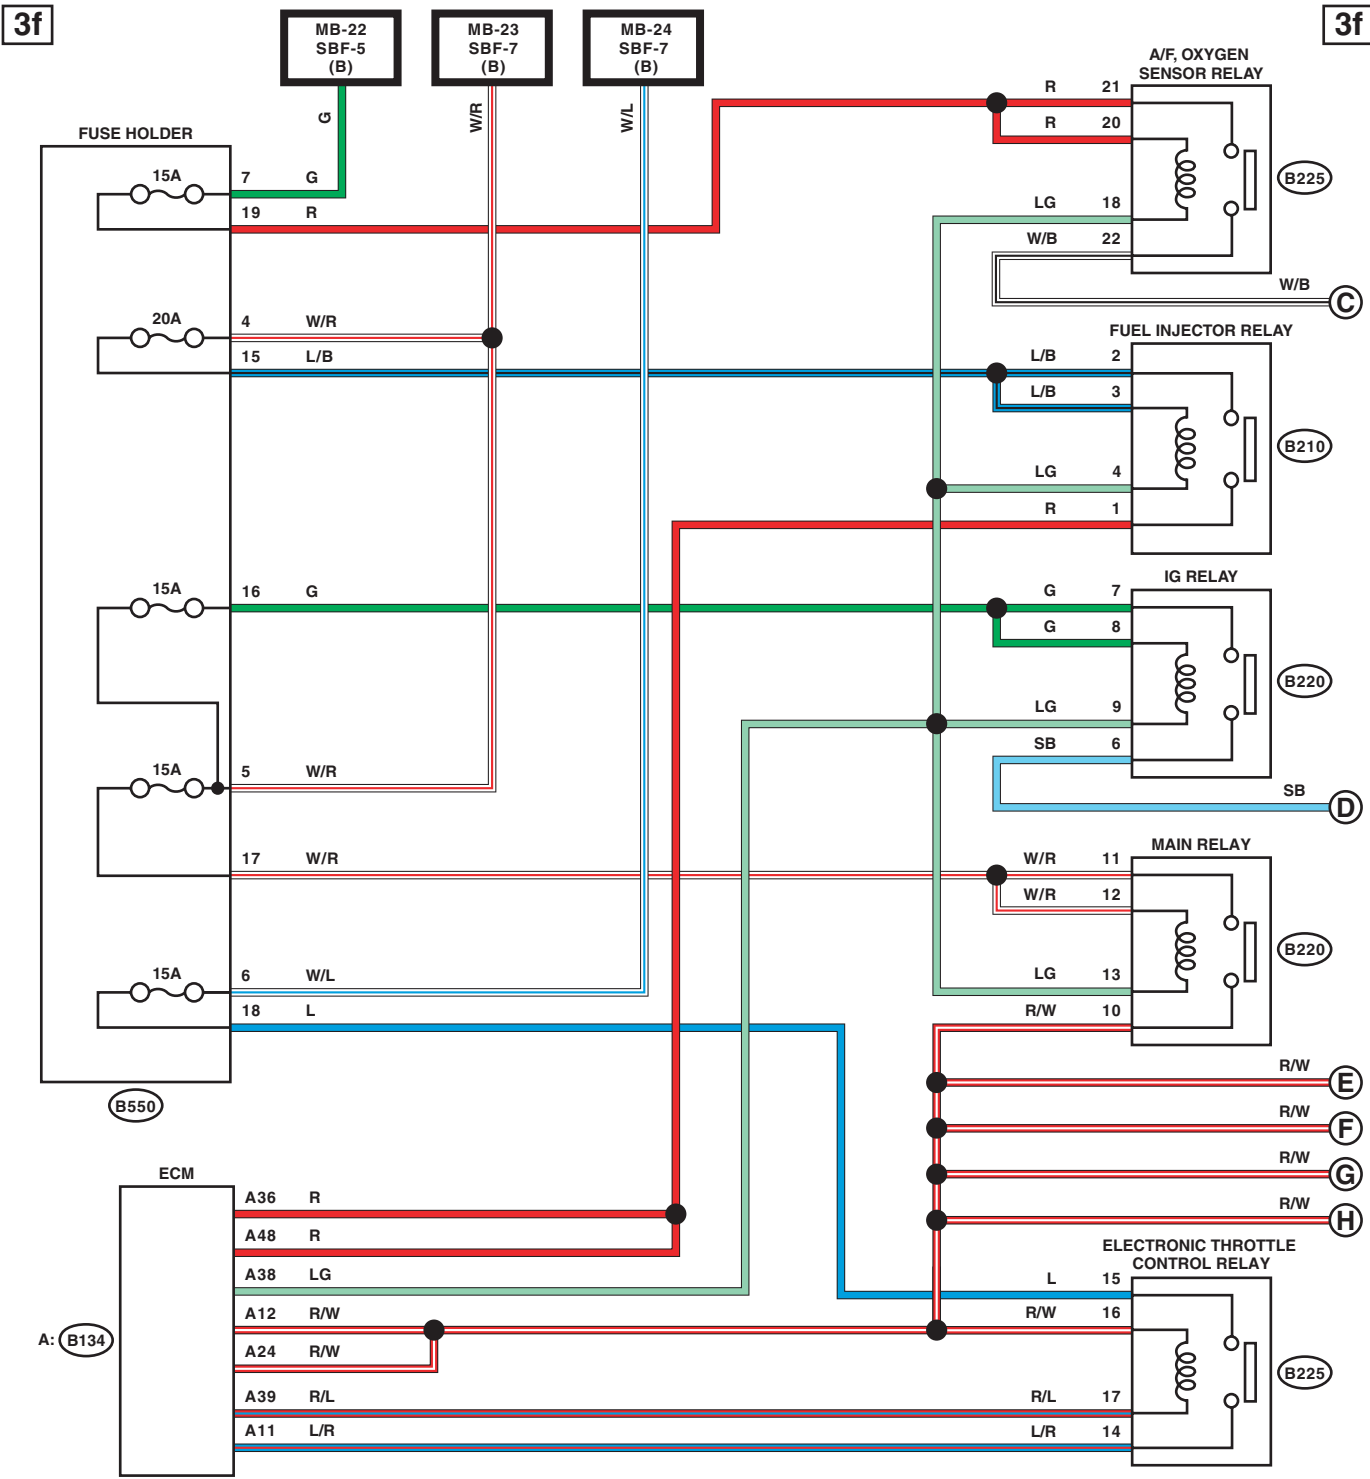

Engine Electrical System

WIRING SYSTEM

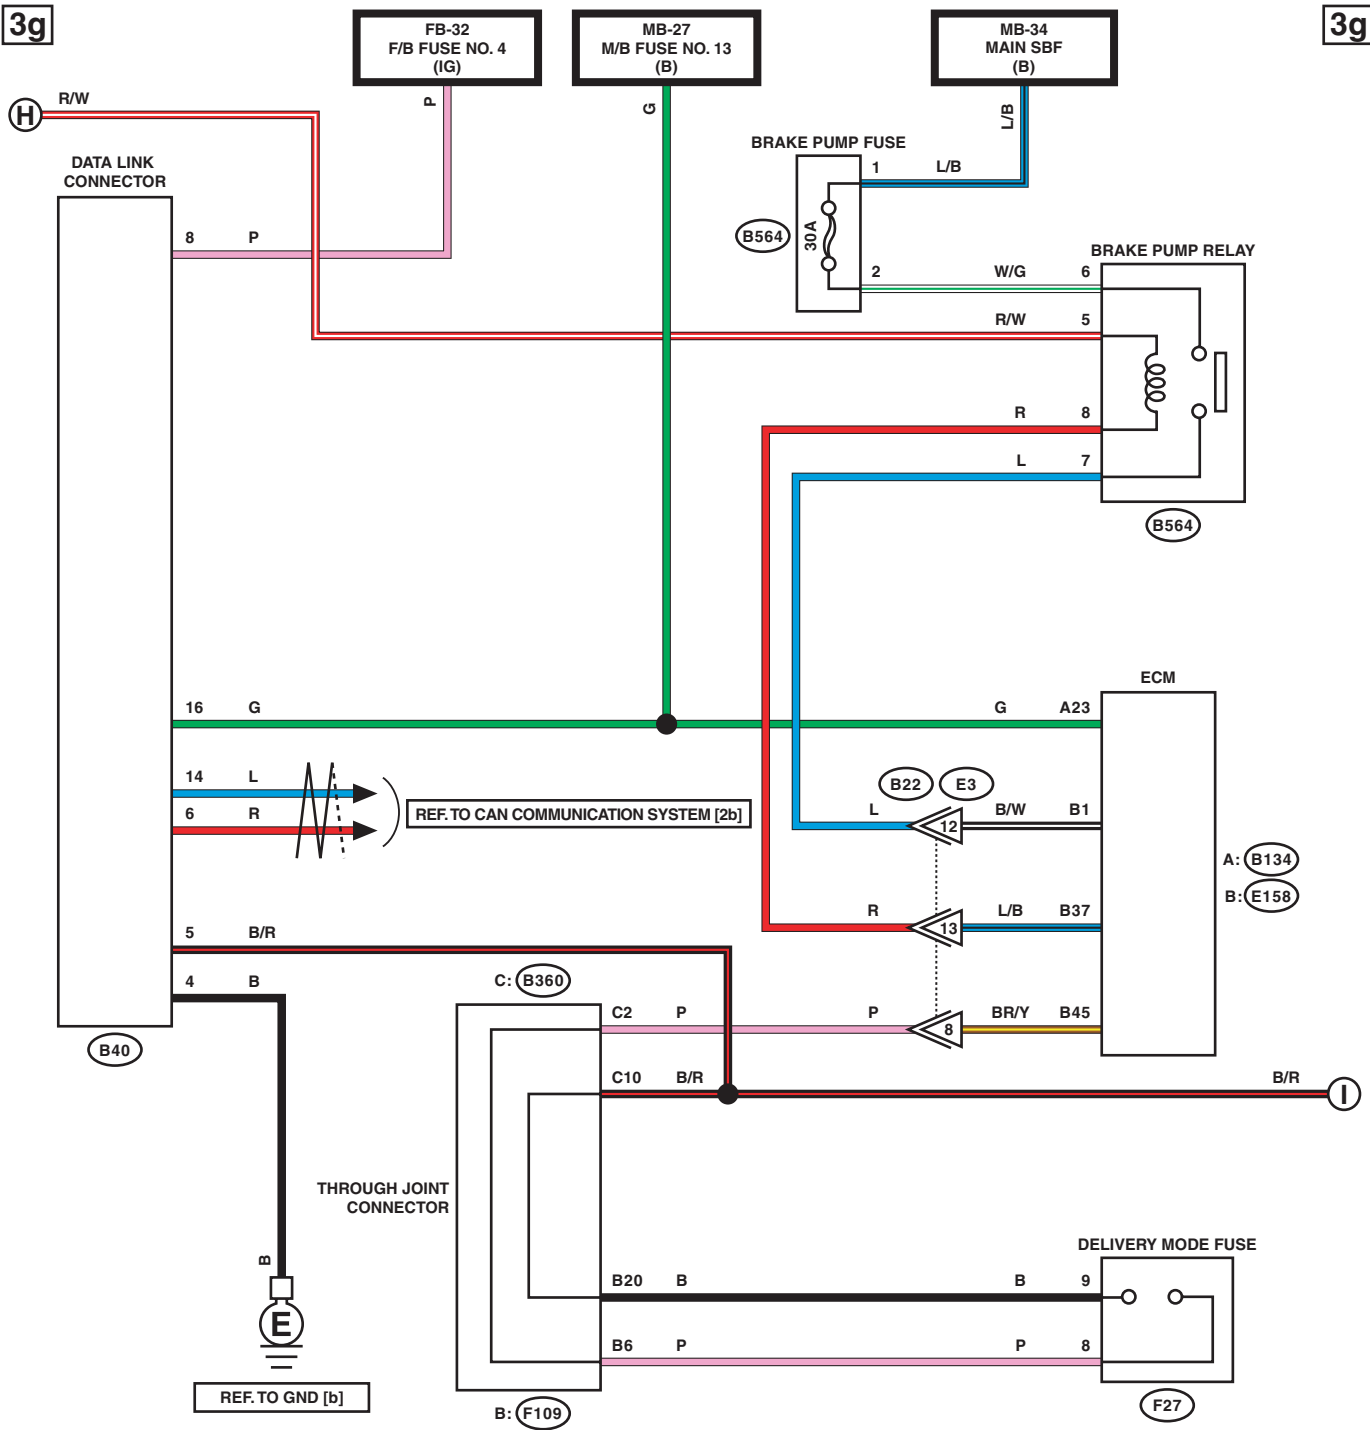


WI-45757

Engine Electrical System

WIRING SYSTEM

3h

3h

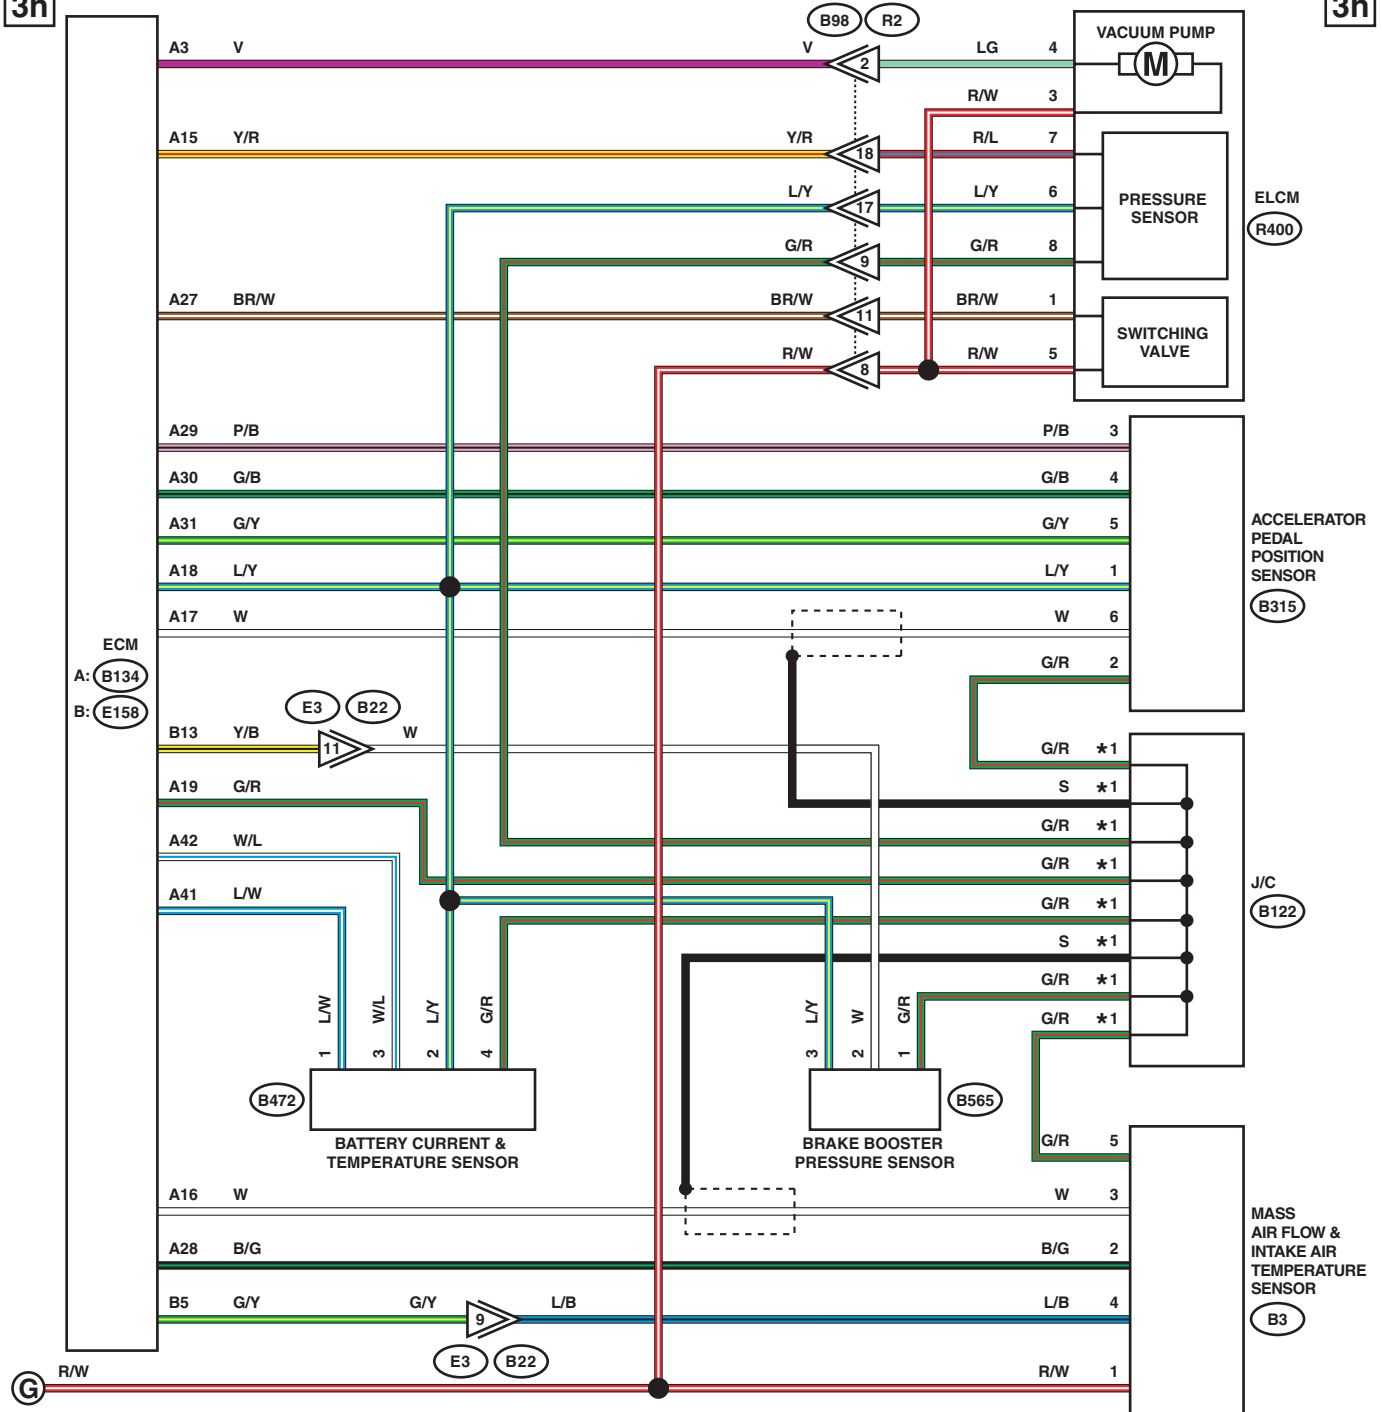

*1 : TERMINAL No. OPTIONAL ARRANGEMENT


WI-45758

Engine Electrical System

WIRING SYSTEM

3i


3i

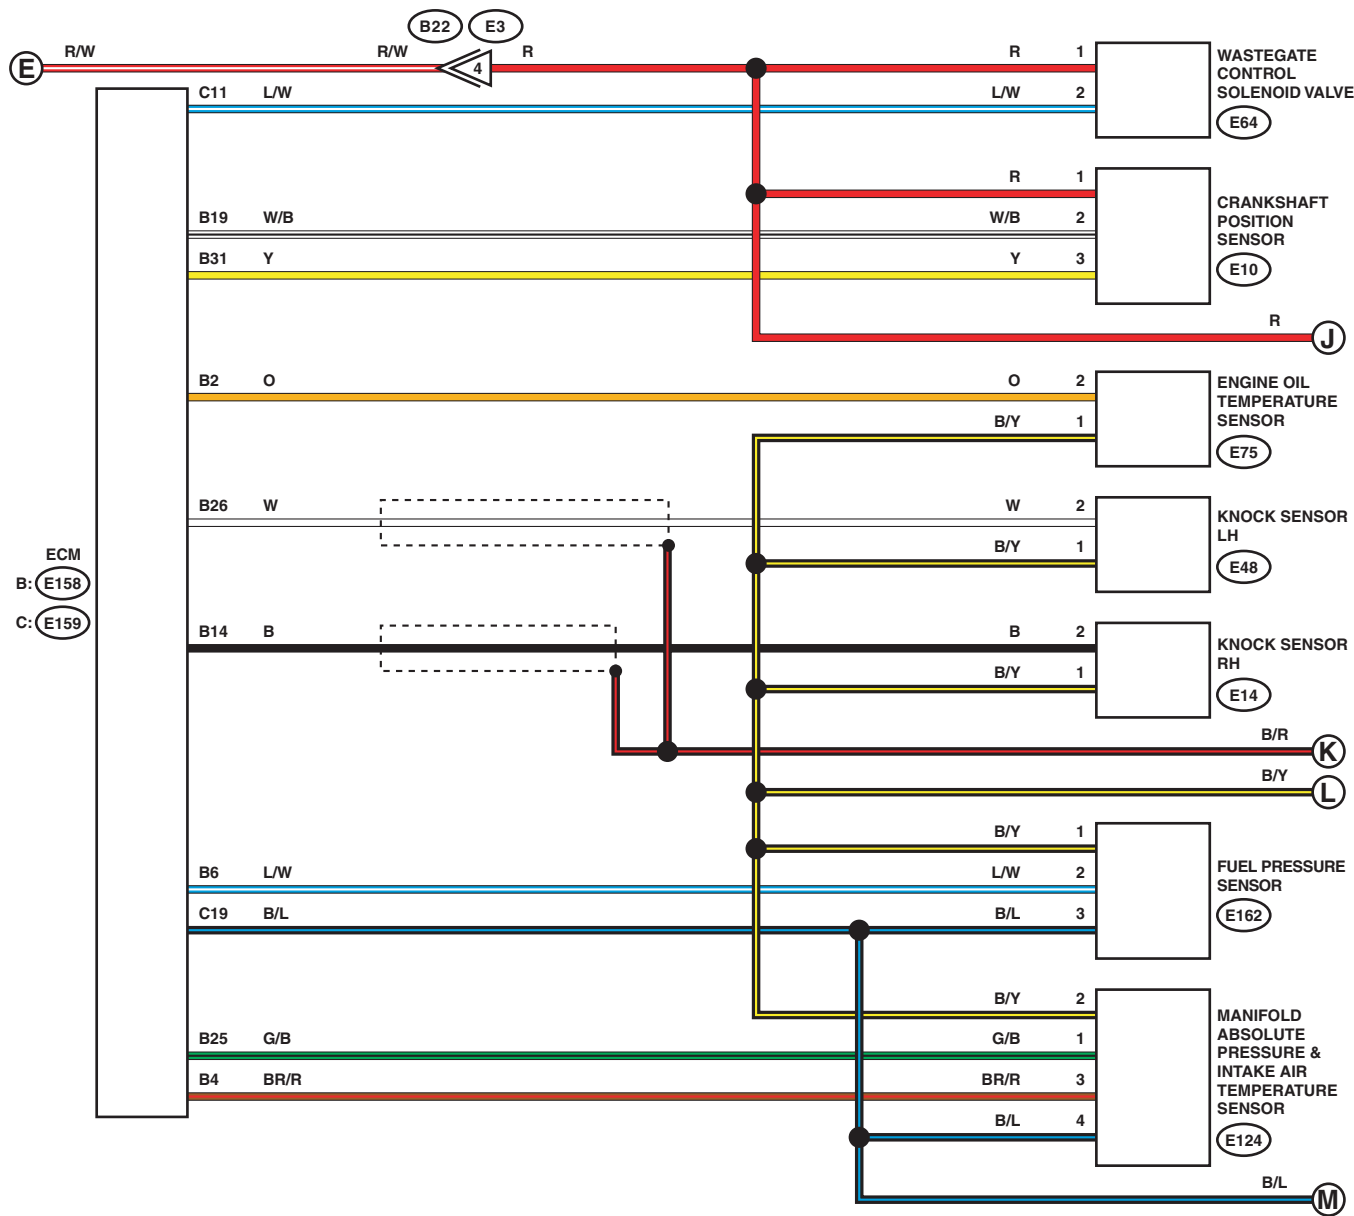

WI-40783

3j


3j

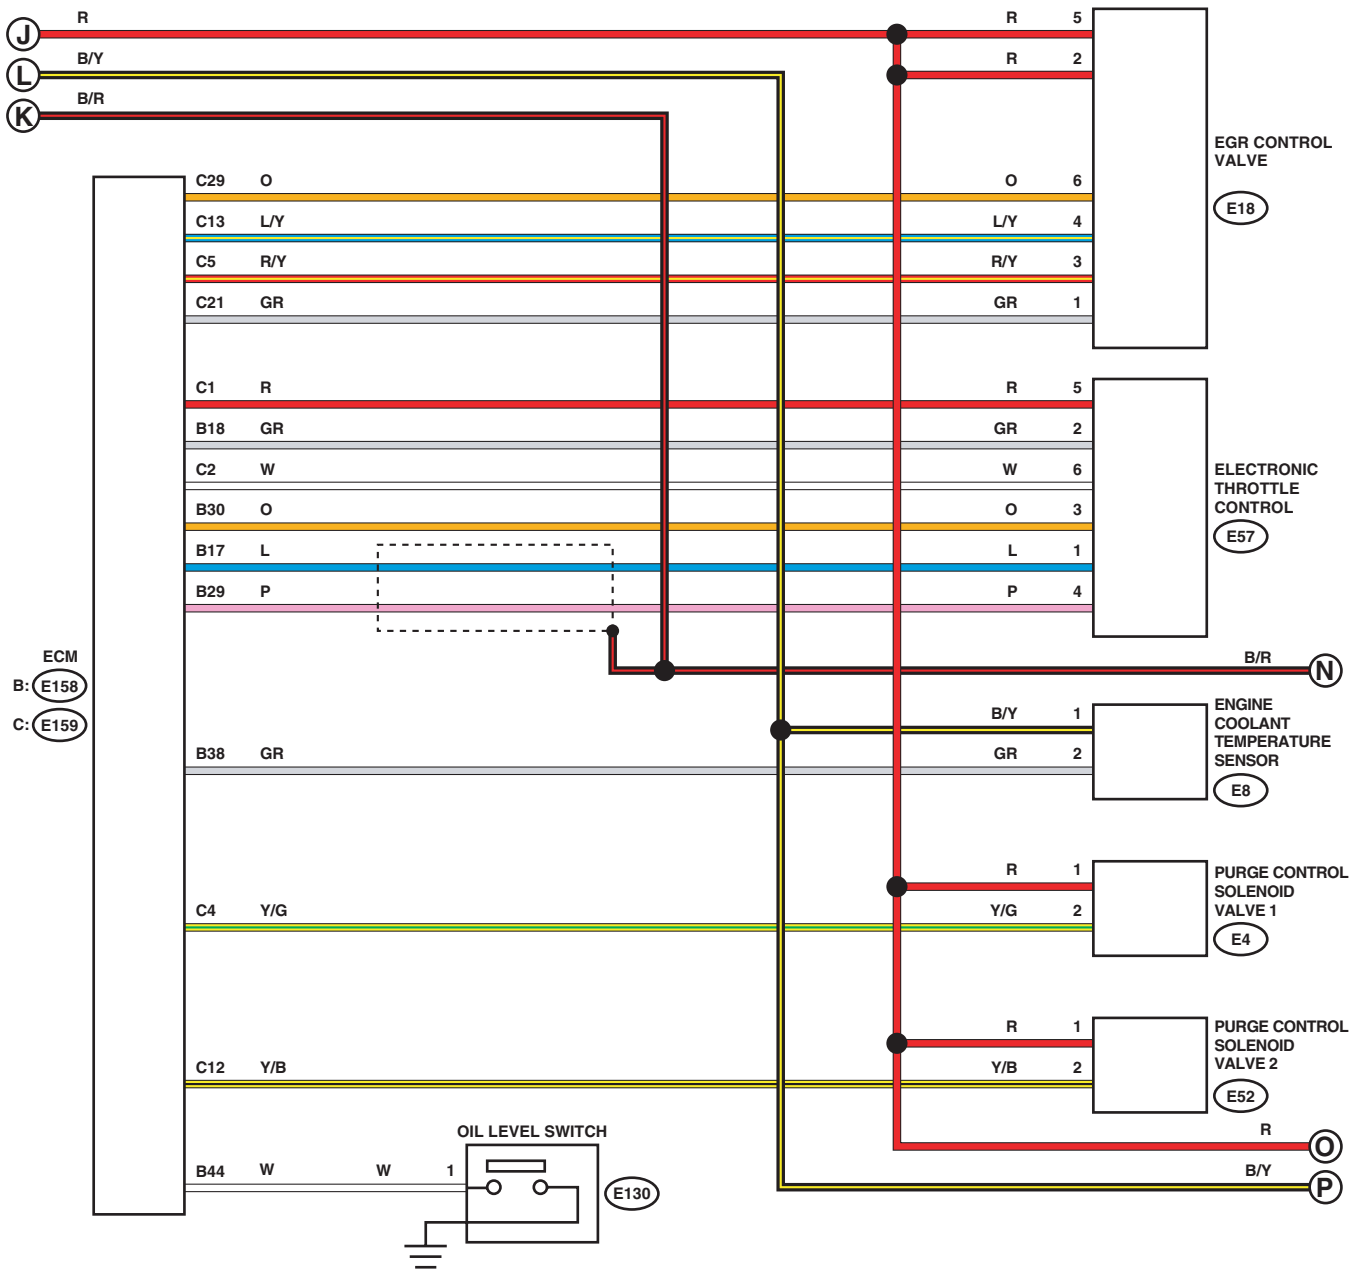

WI-40784

Engine Electrical System


WIRING SYSTEM

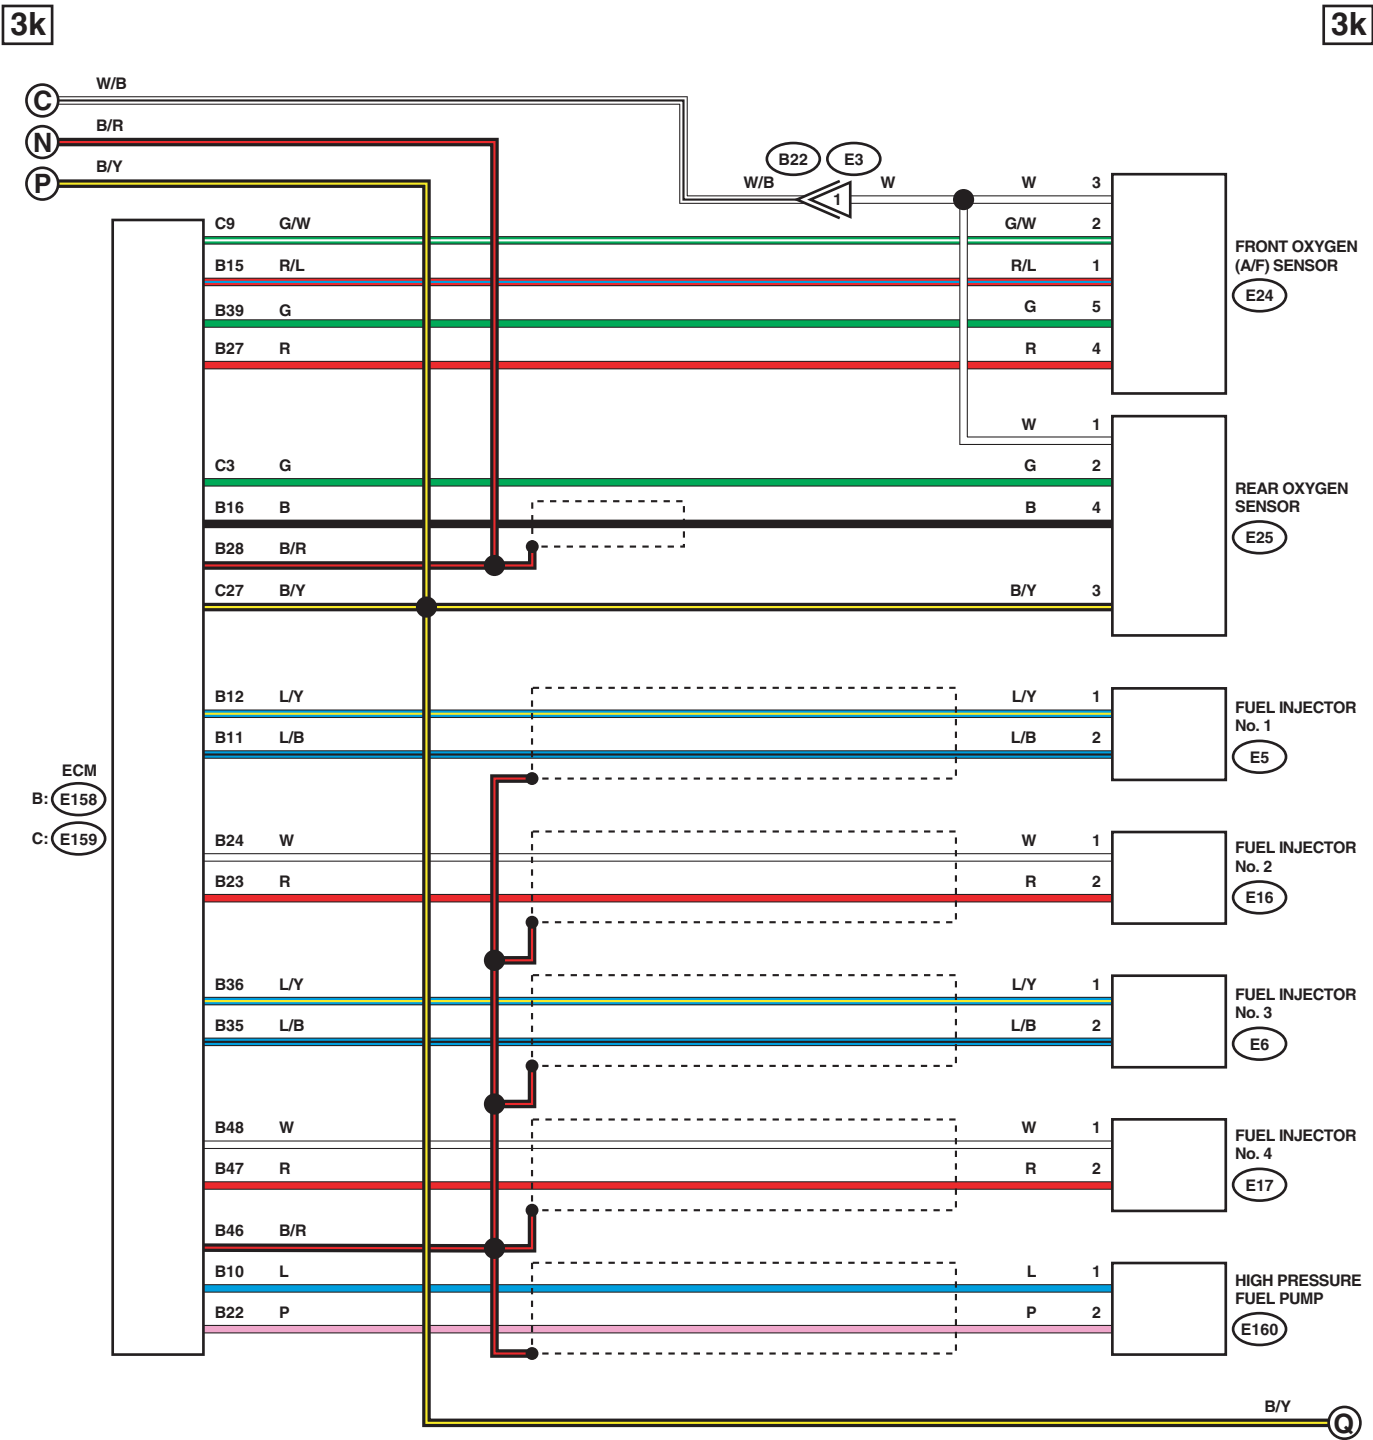

WI-40785

3I

3I

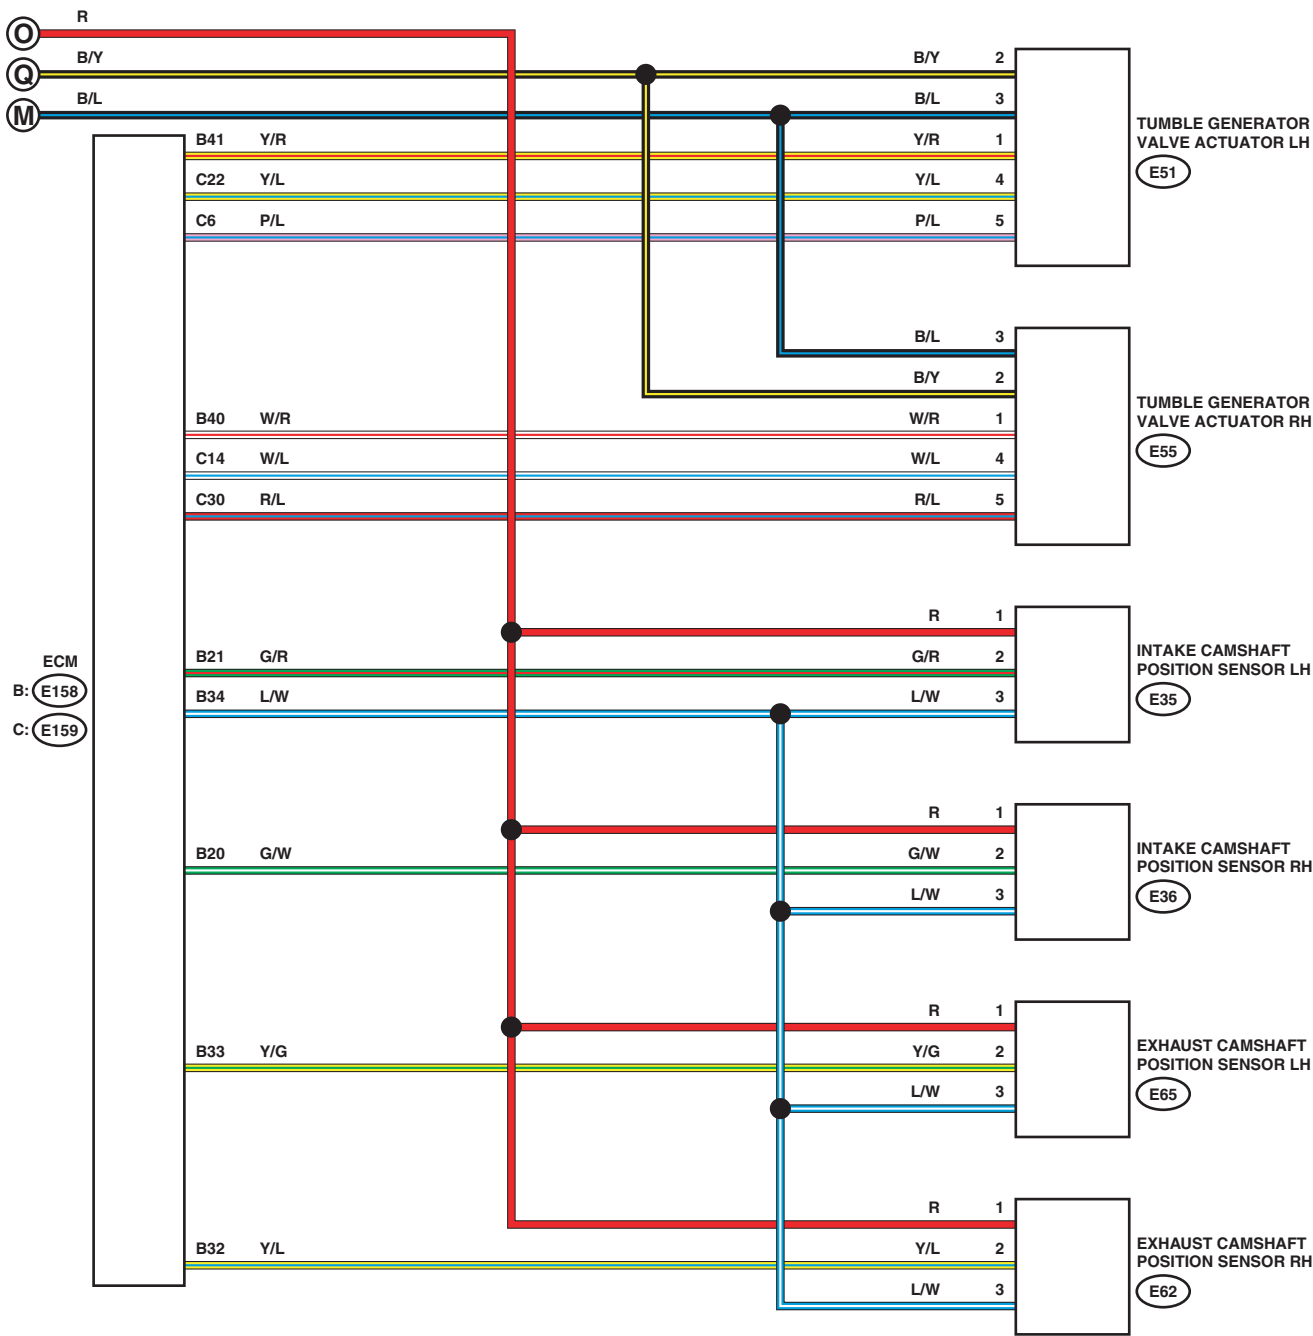


WI-40786

Engine Electrical System

WIRING SYSTEM

3m

3m

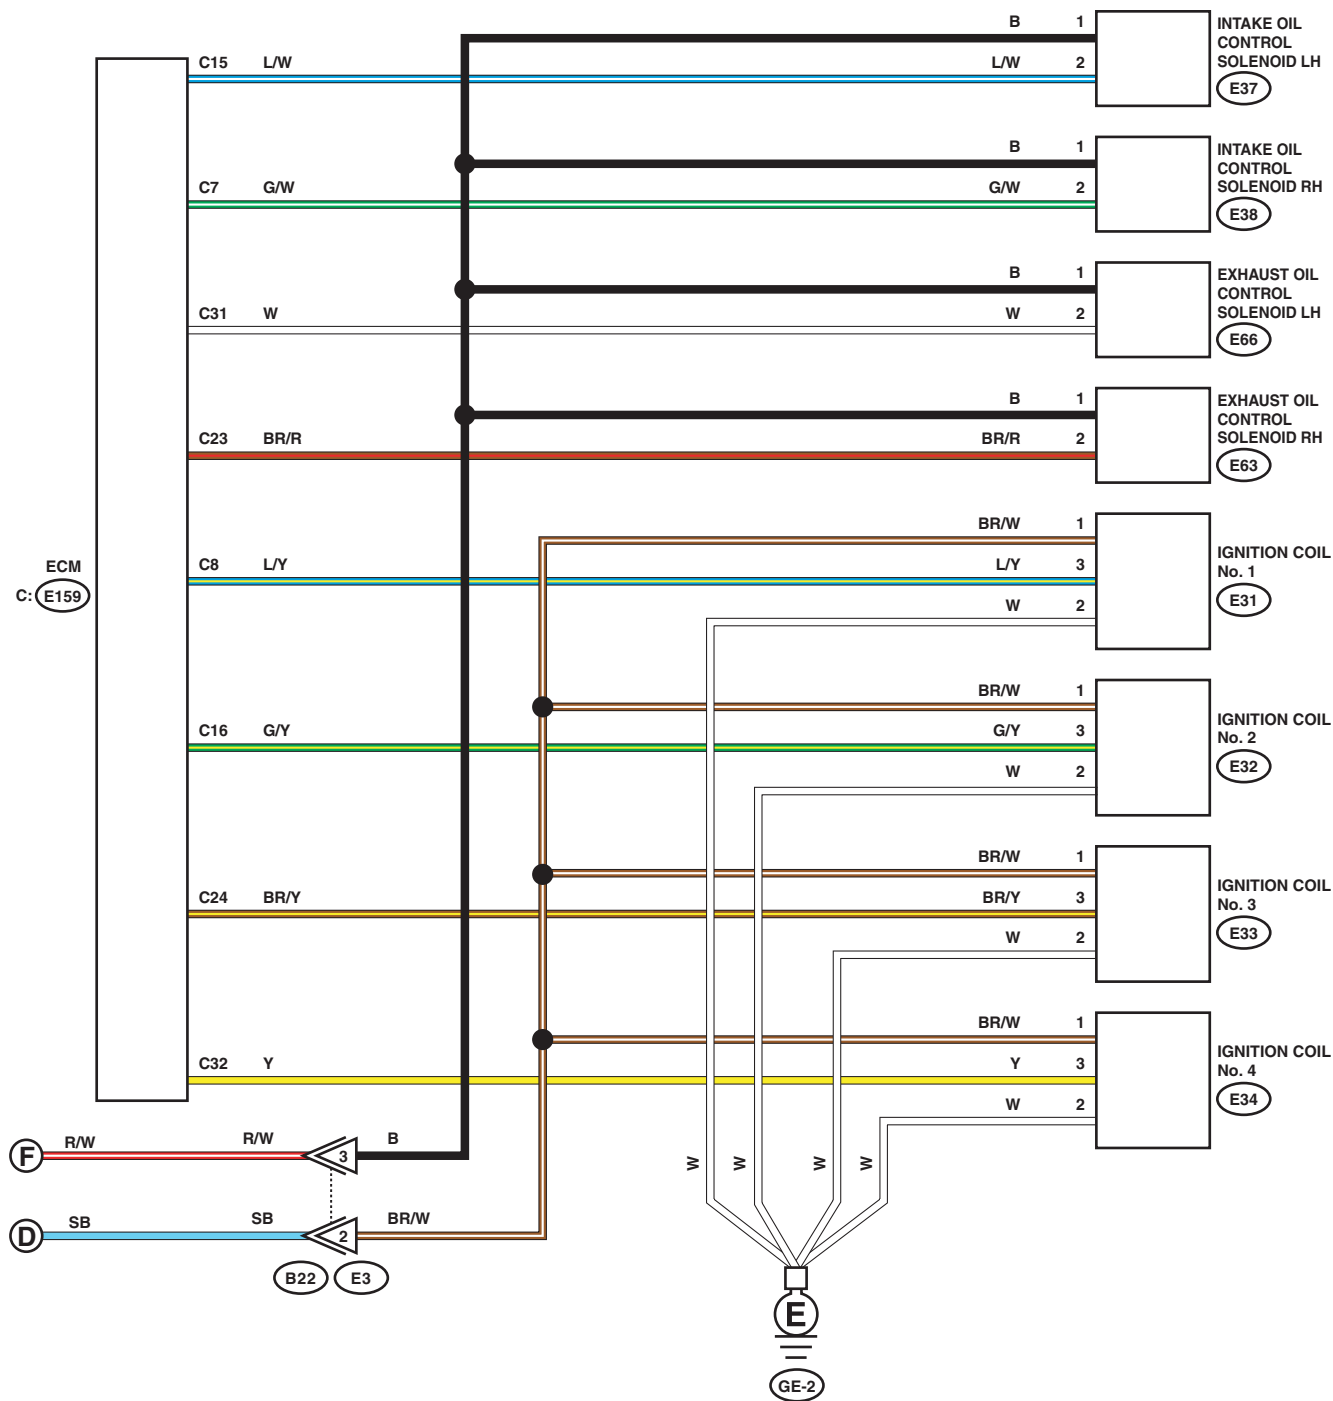

WI-40787

WIRING SYSTEM

3n




Engine Electrical System

WIRING SYSTEM

30

30

LIST OF CONNECTORS

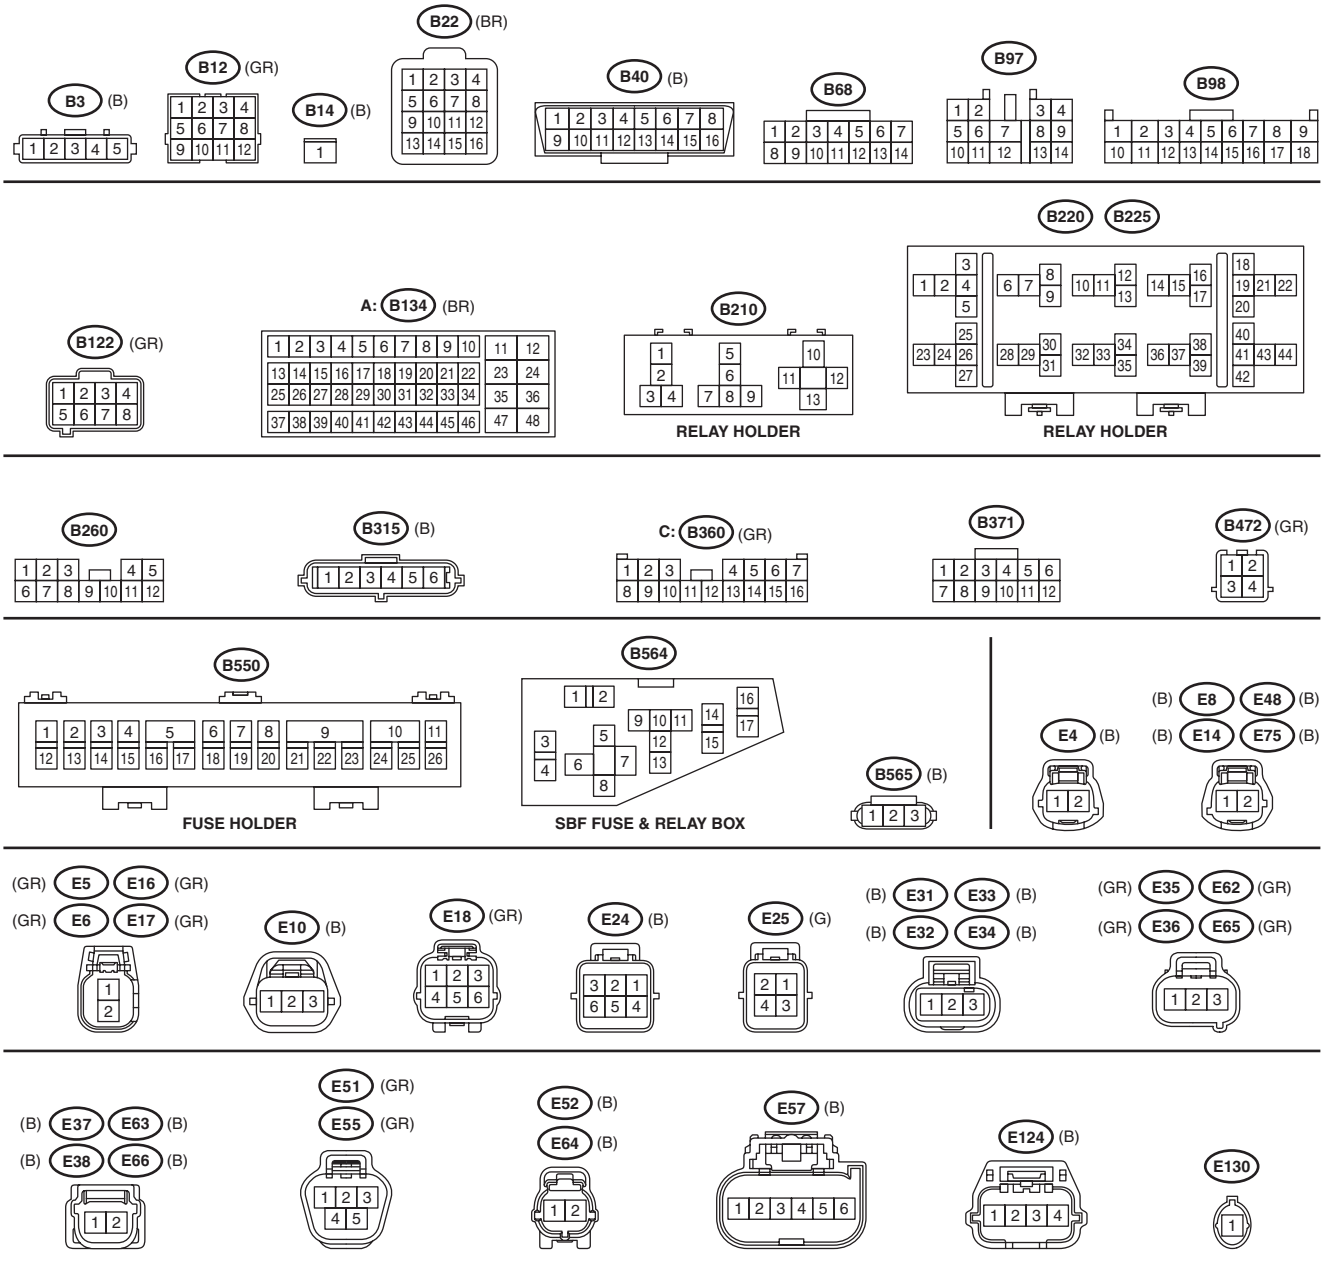


WI-45759

3p


3p

LIST OF CONNECTORS

B: E158 (B)

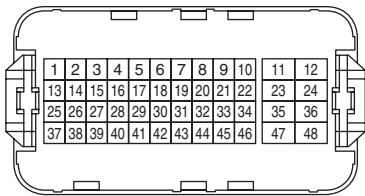

C: E159 (GR)

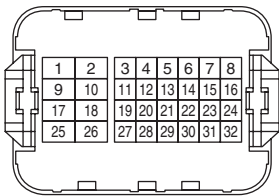


E160 (B)



E162 (B)




F27

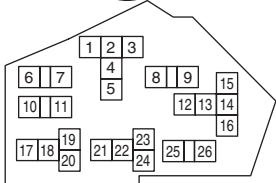


RELAY HOLDER


B: F109




i10




i102



i230




i238




R58




R122



R400



ST3




T7 (B)




Engine Electrical System

WIRING SYSTEM

4. TURBO MODEL (WITH PUSH BUTTON START)

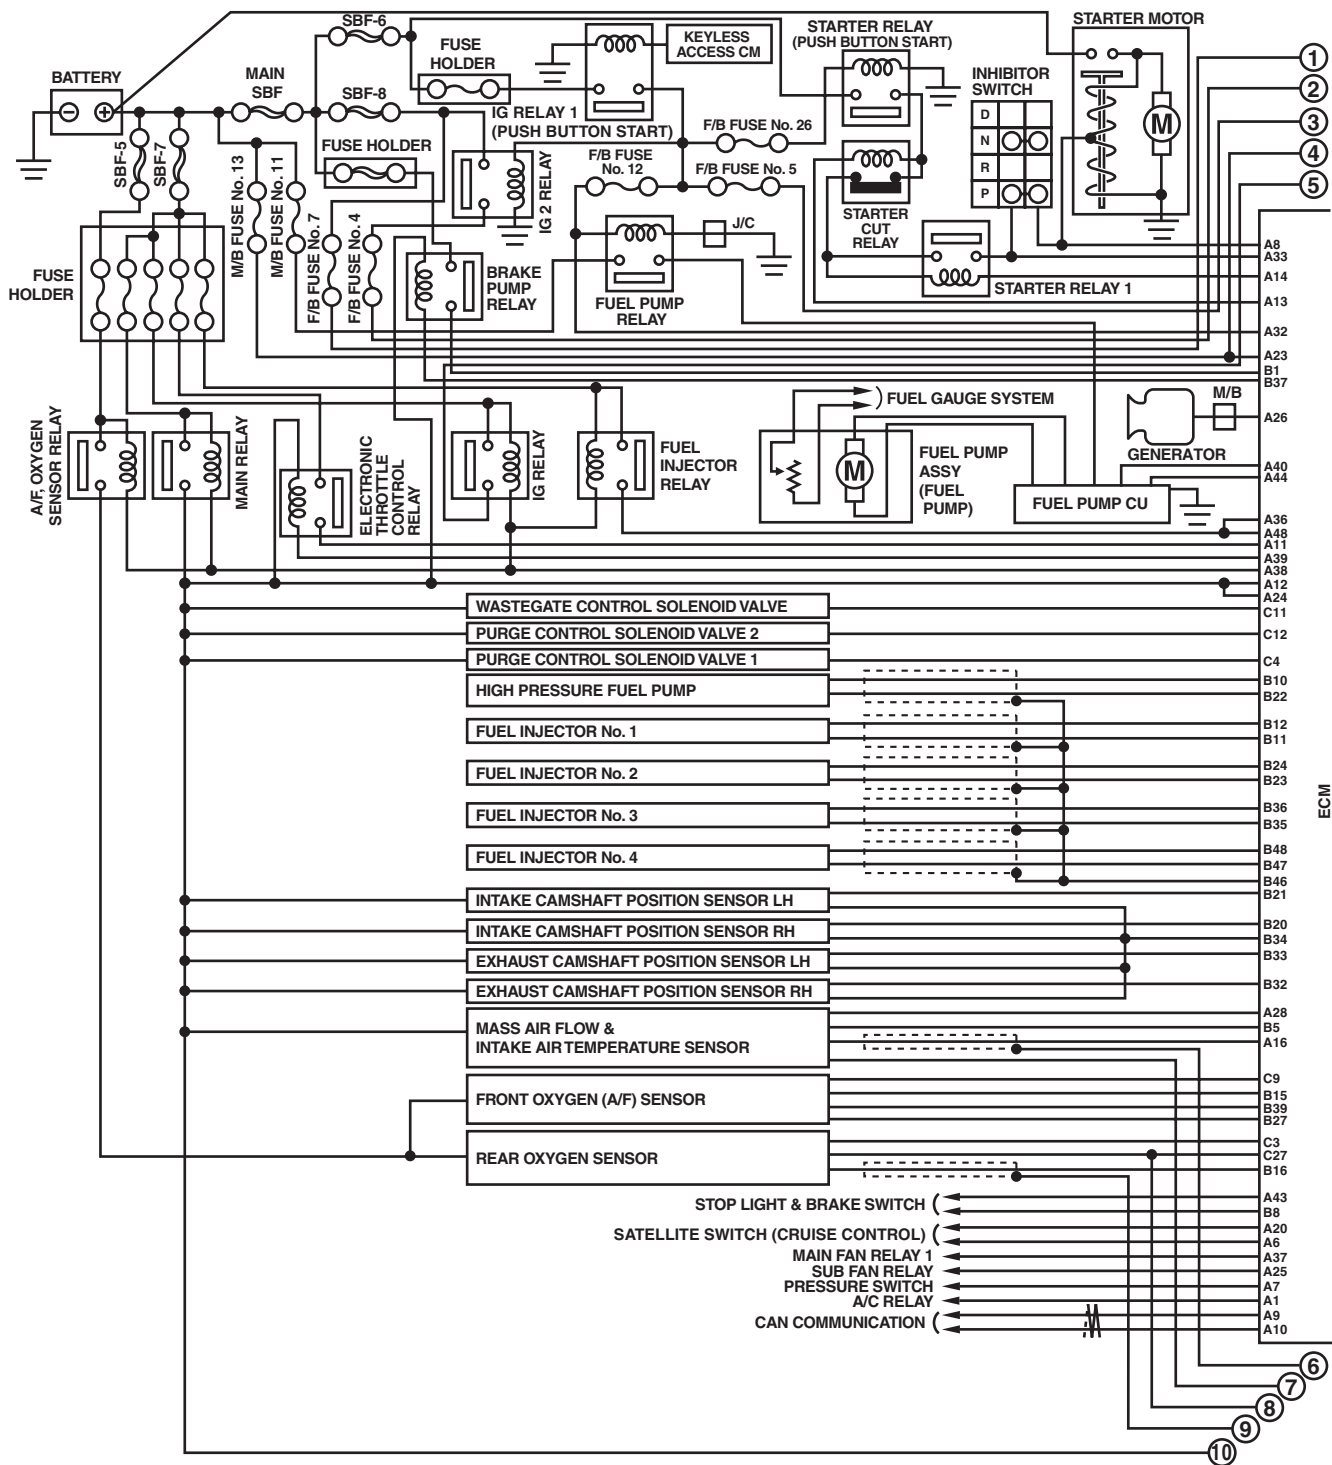


WI-45761

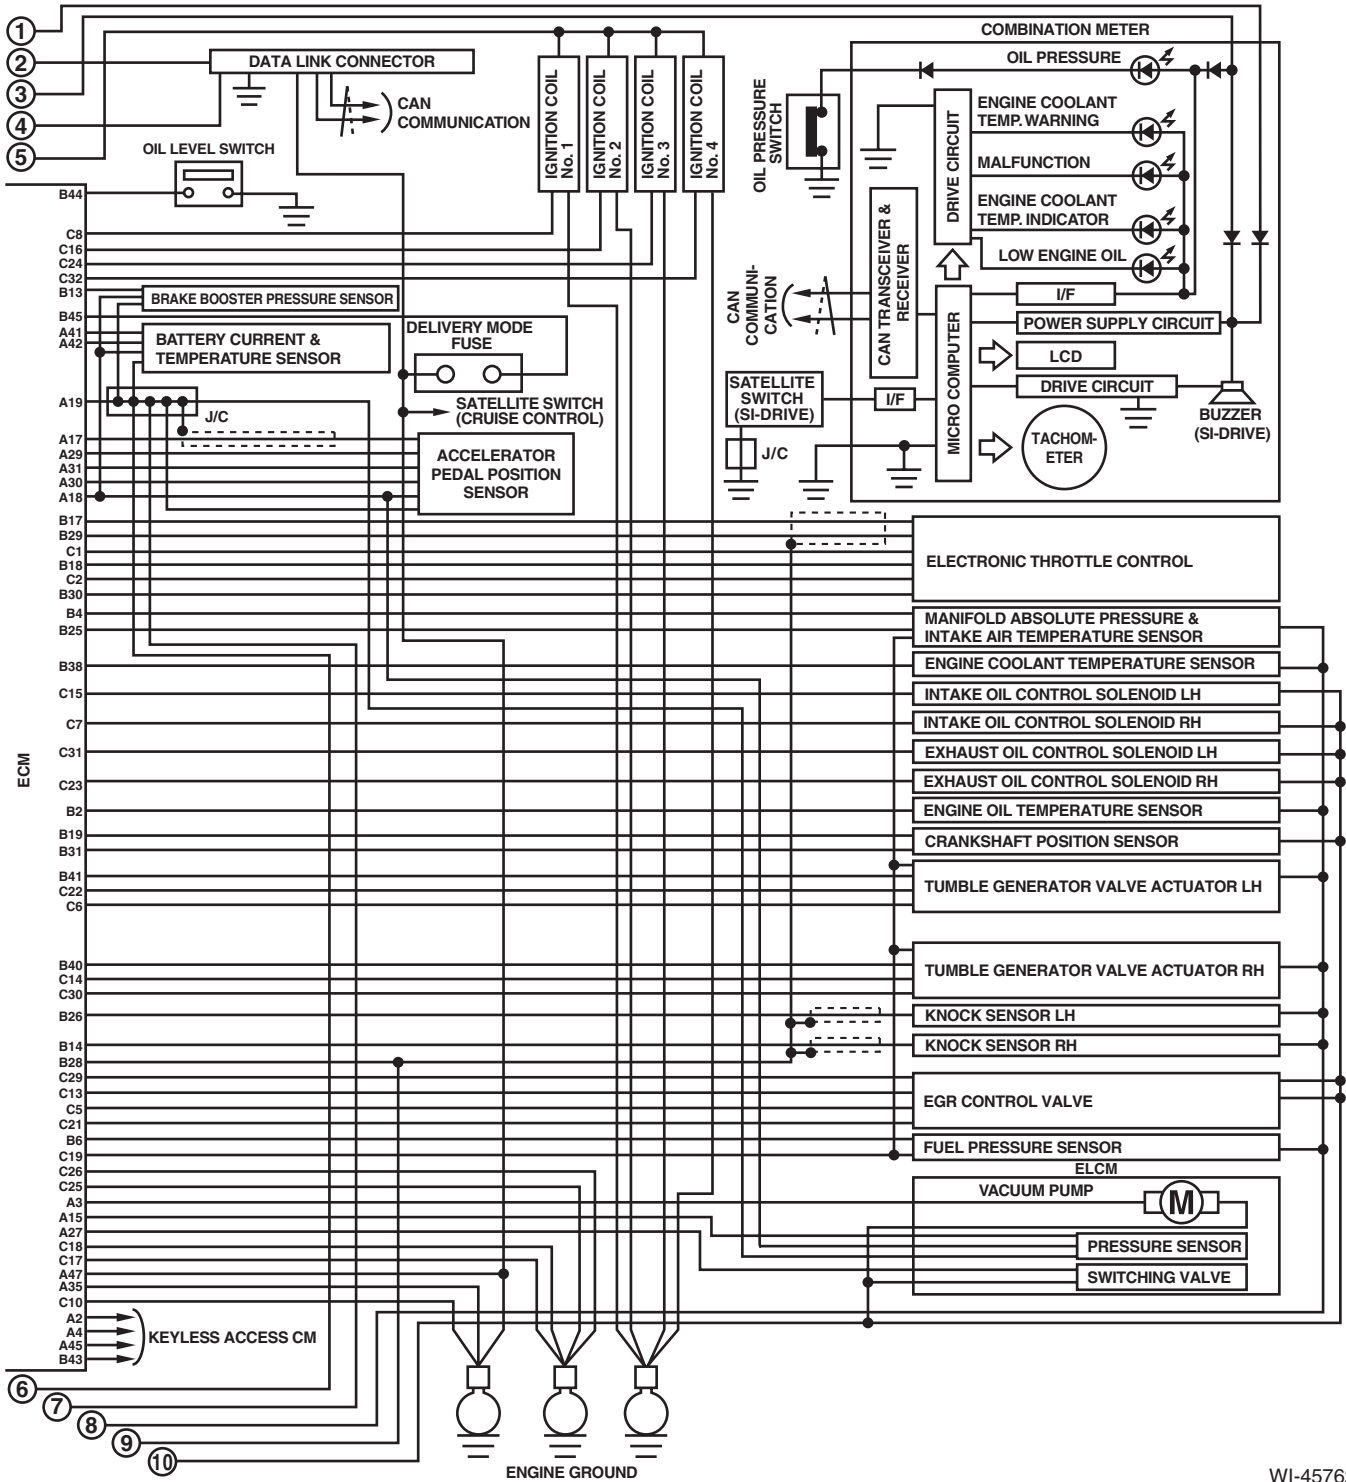

WI-45762

Engine Electrical System

WIRING SYSTEM

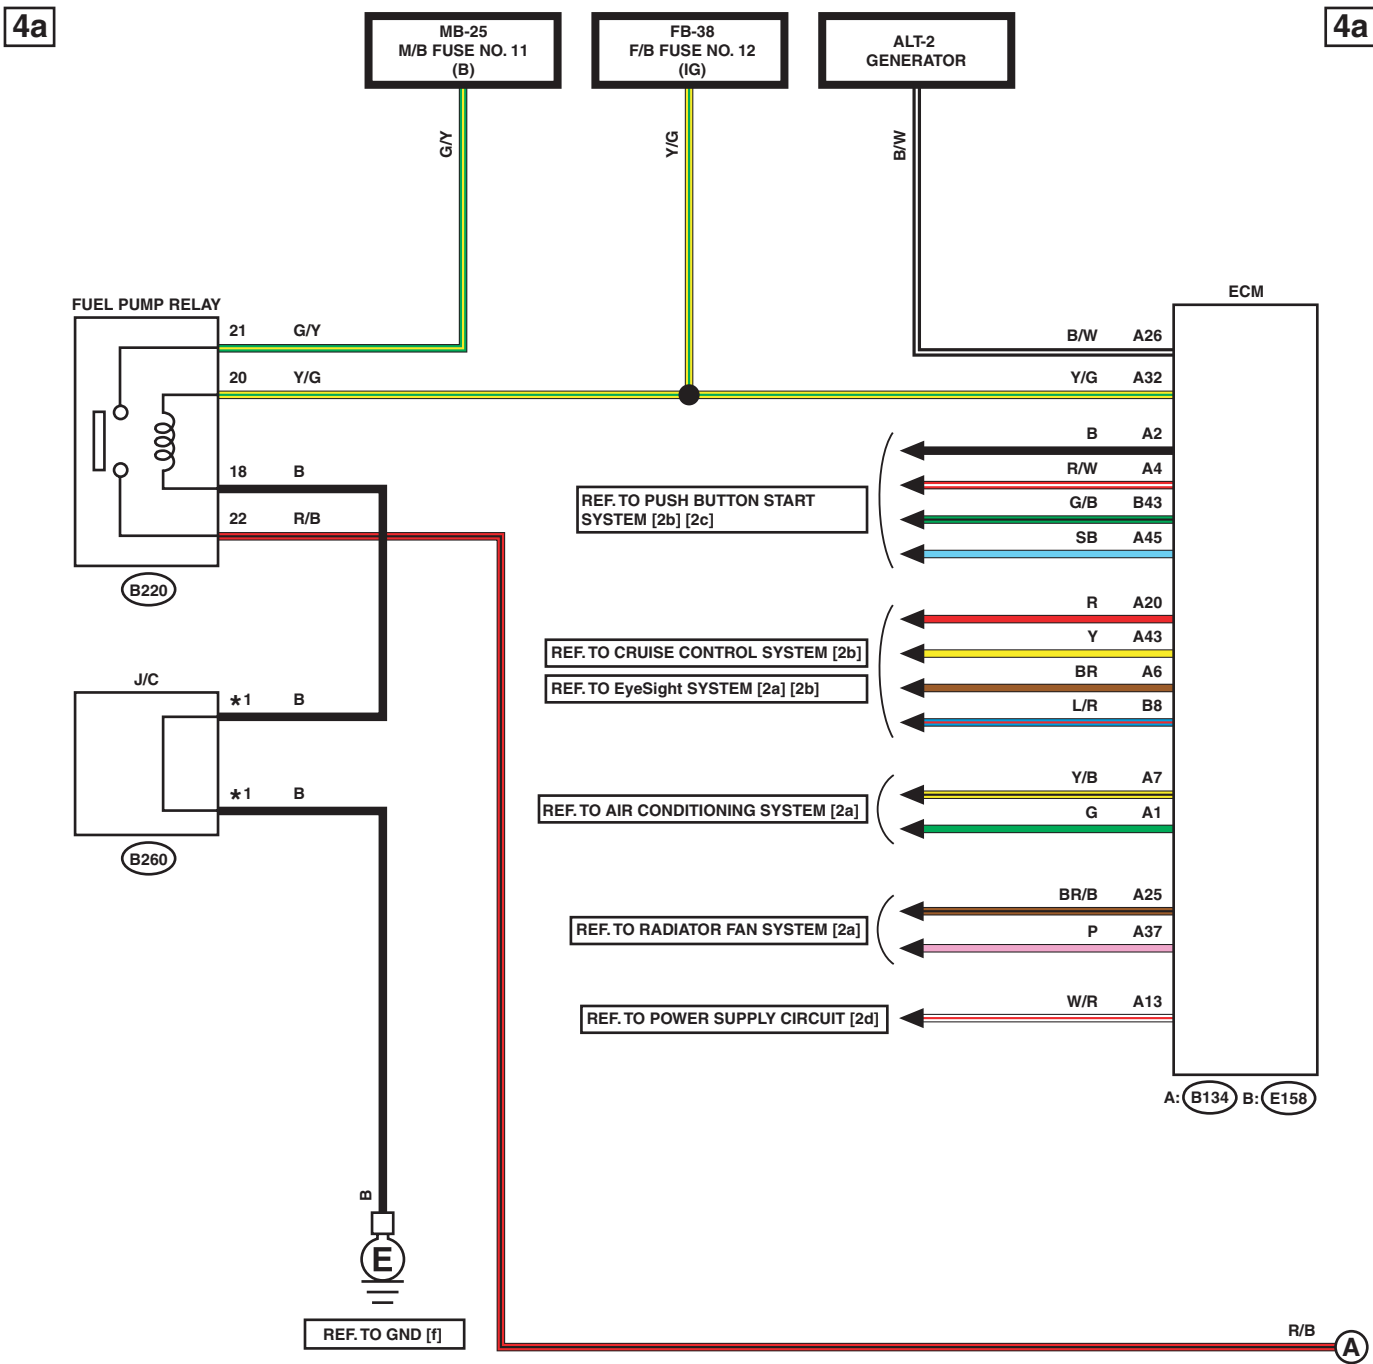


*1 : TERMINAL No. OPTIONAL ARRANGEMENT

WI-45763

4b


4b

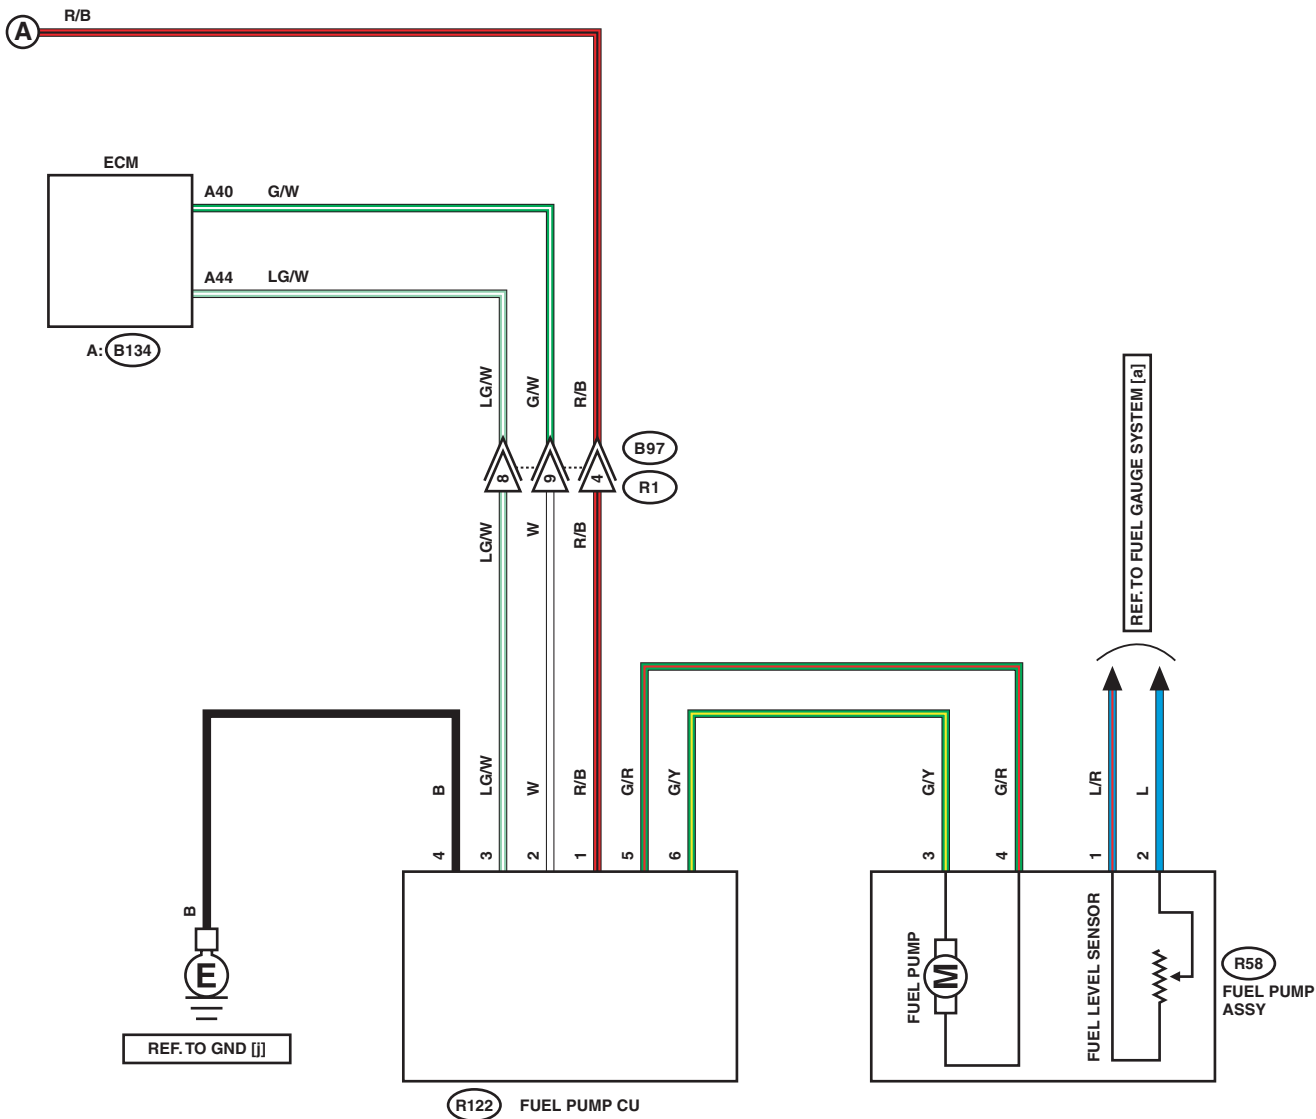

WI-45764

Engine Electrical System

WIRING SYSTEM

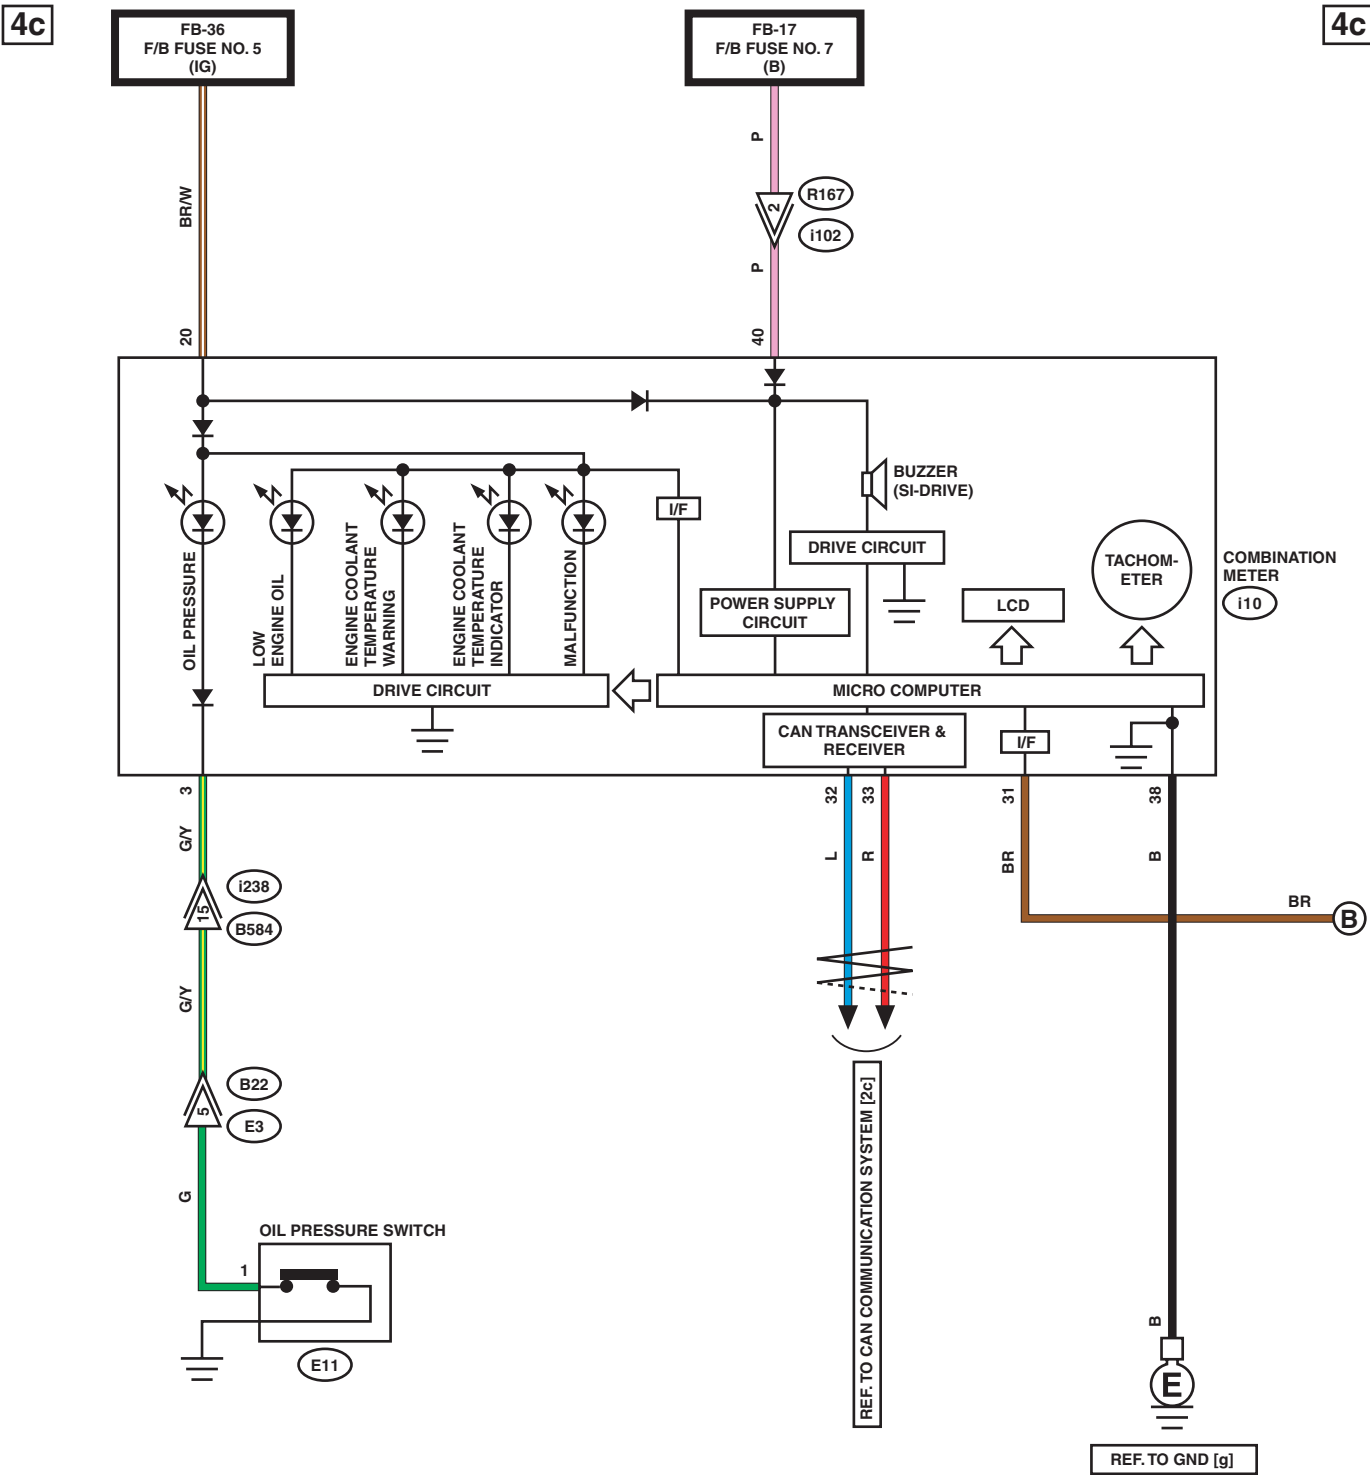

WI-45765

WIRING SYSTEM

4d


**WI-219**

Engine Electrical System

WIRING SYSTEM

4e


4e

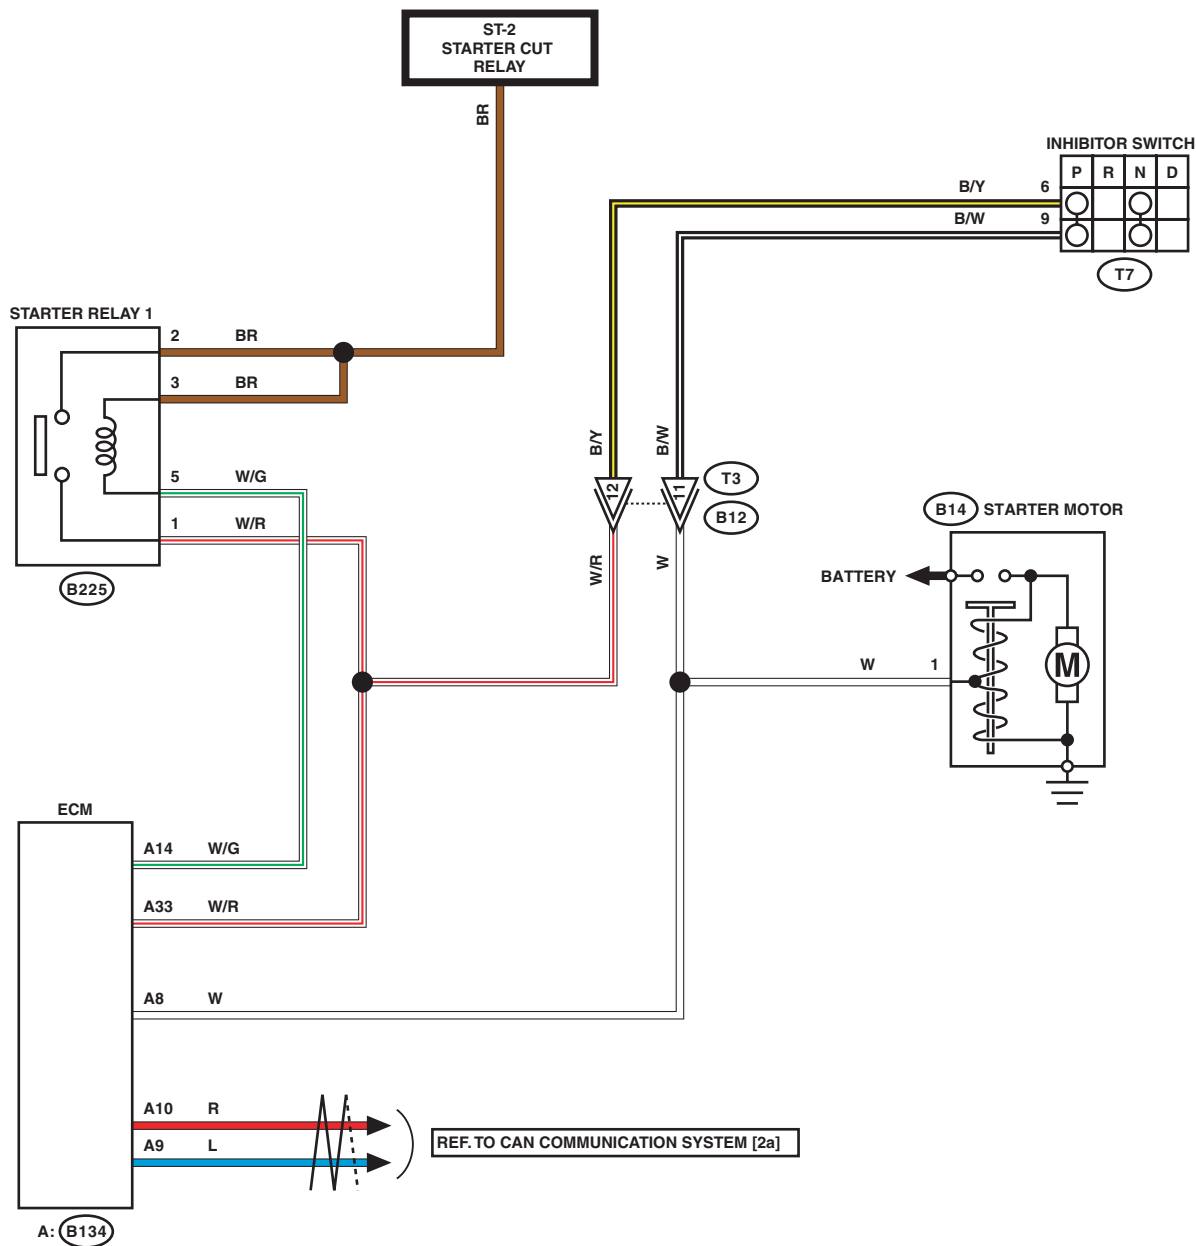

WI-40797


Engine Electrical System

WIRING SYSTEM

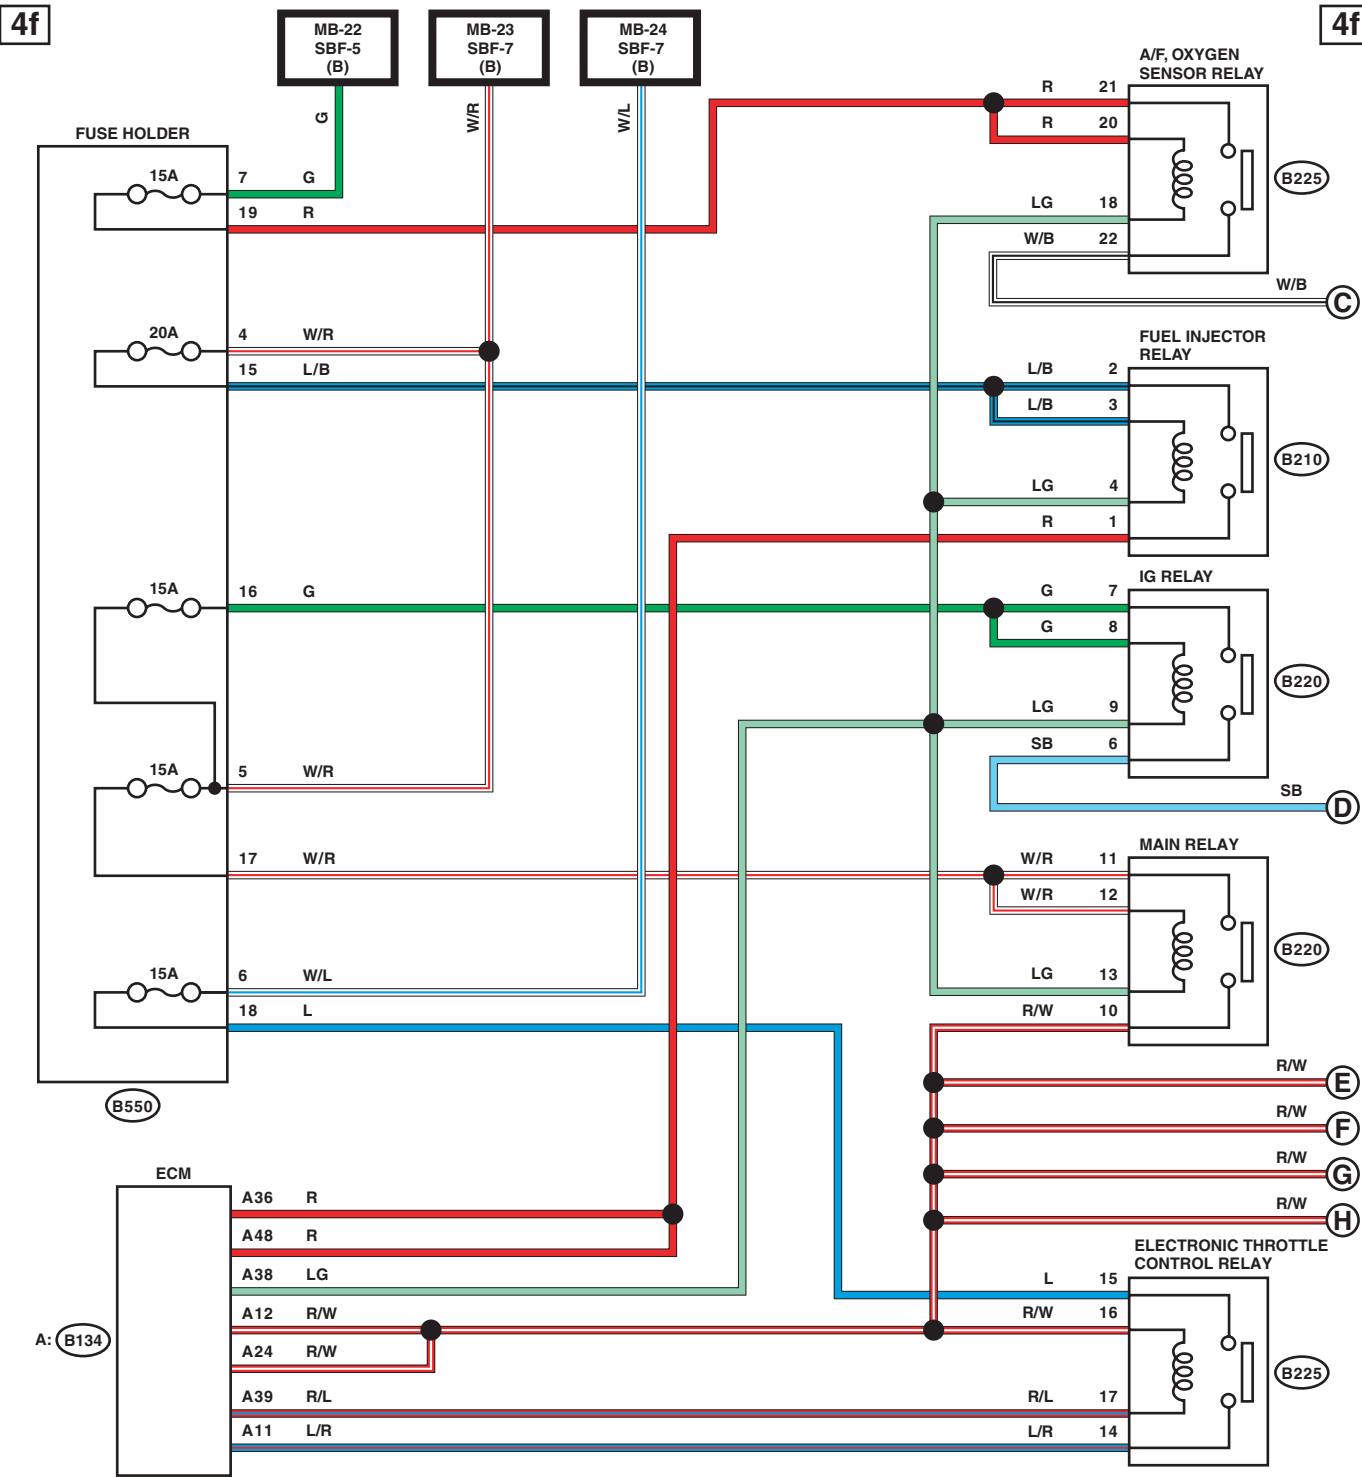

Engine Electrical System

WIRING SYSTEM

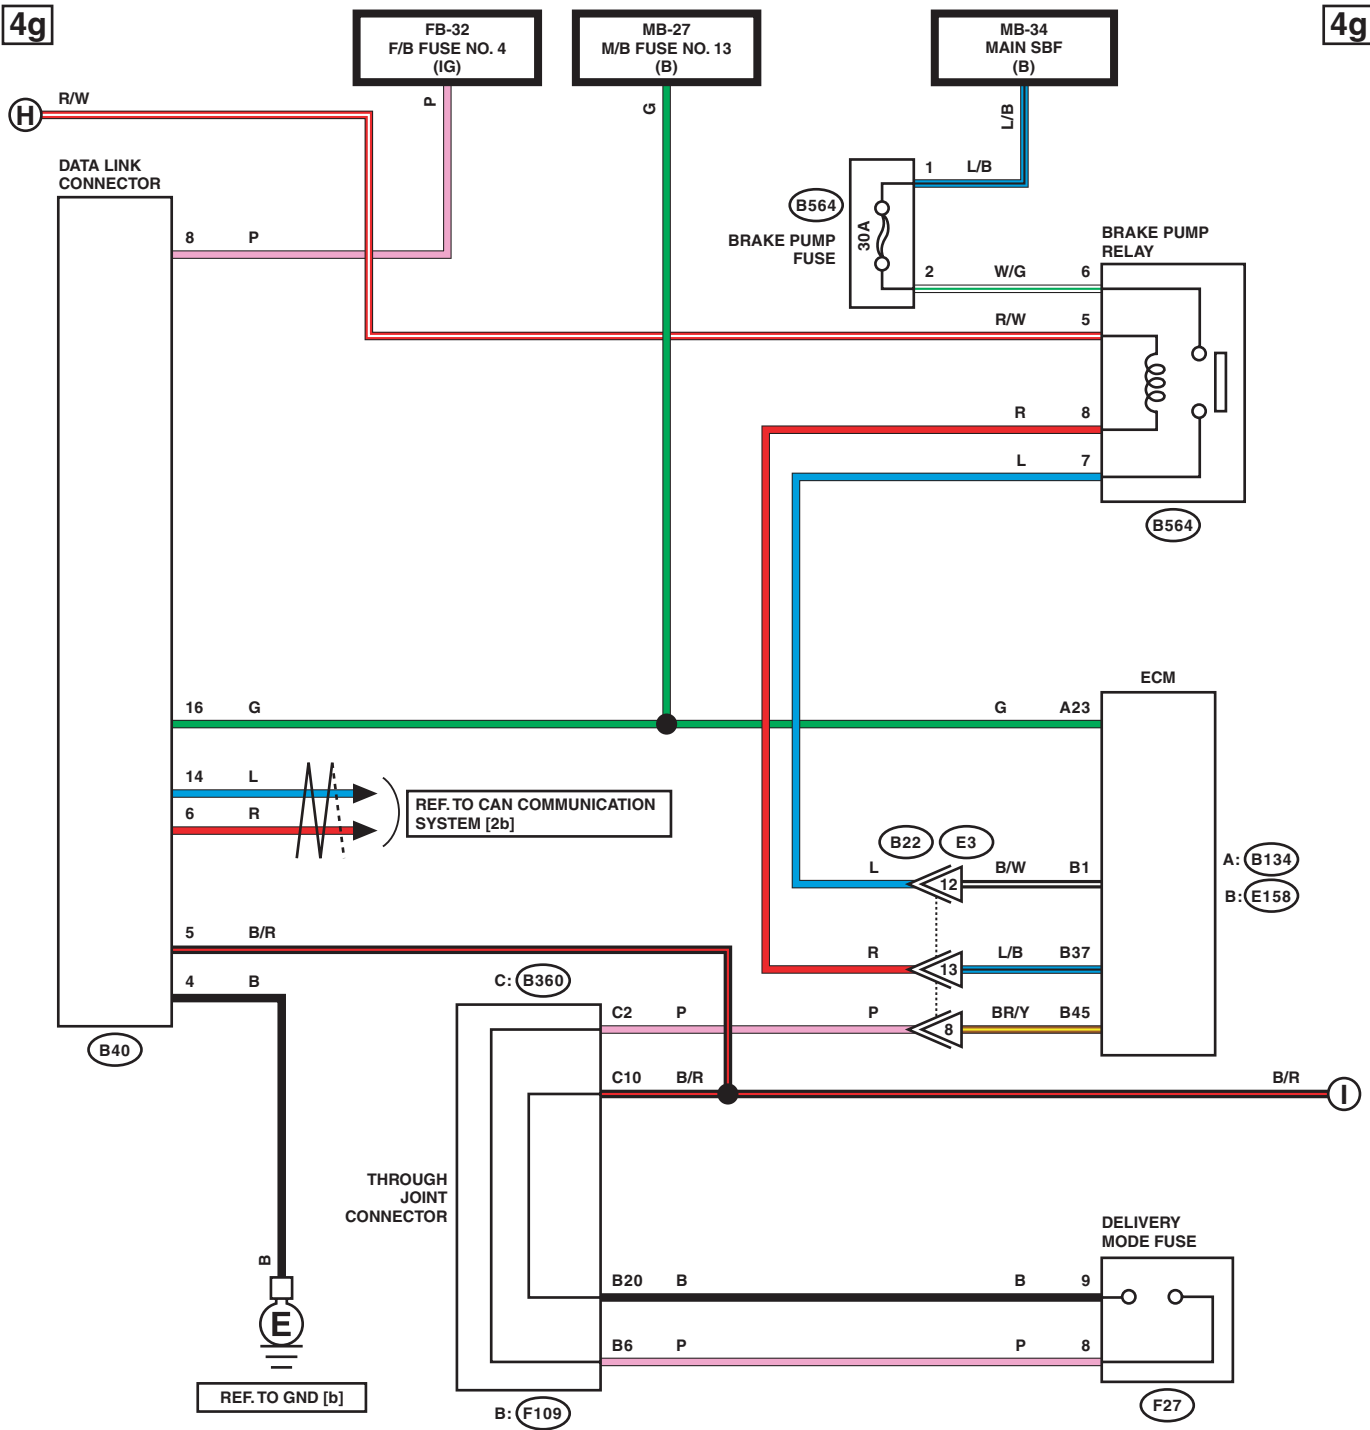


WI-45768

Engine Electrical System

WIRING SYSTEM

4h

4h

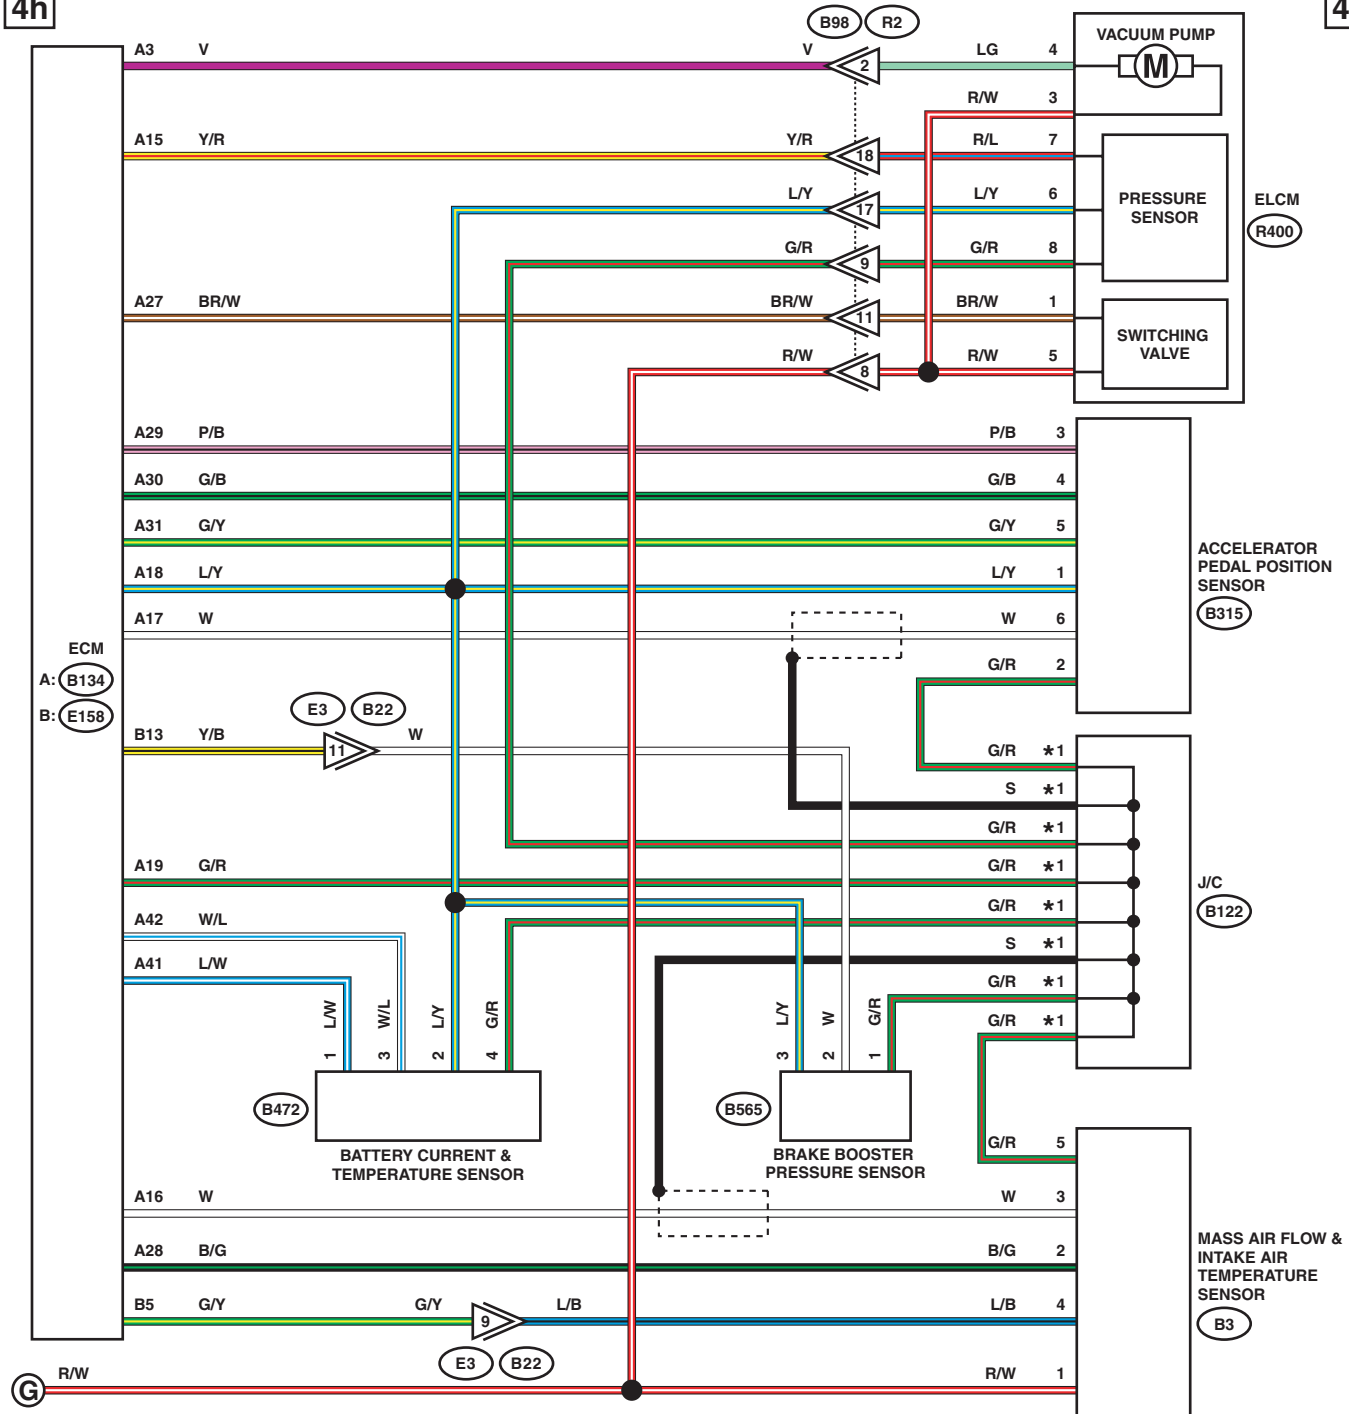

*1 : TERMINAL No. OPTIONAL ARRANGEMENT


WI-45769

Engine Electrical System

WIRING SYSTEM

4i


4i

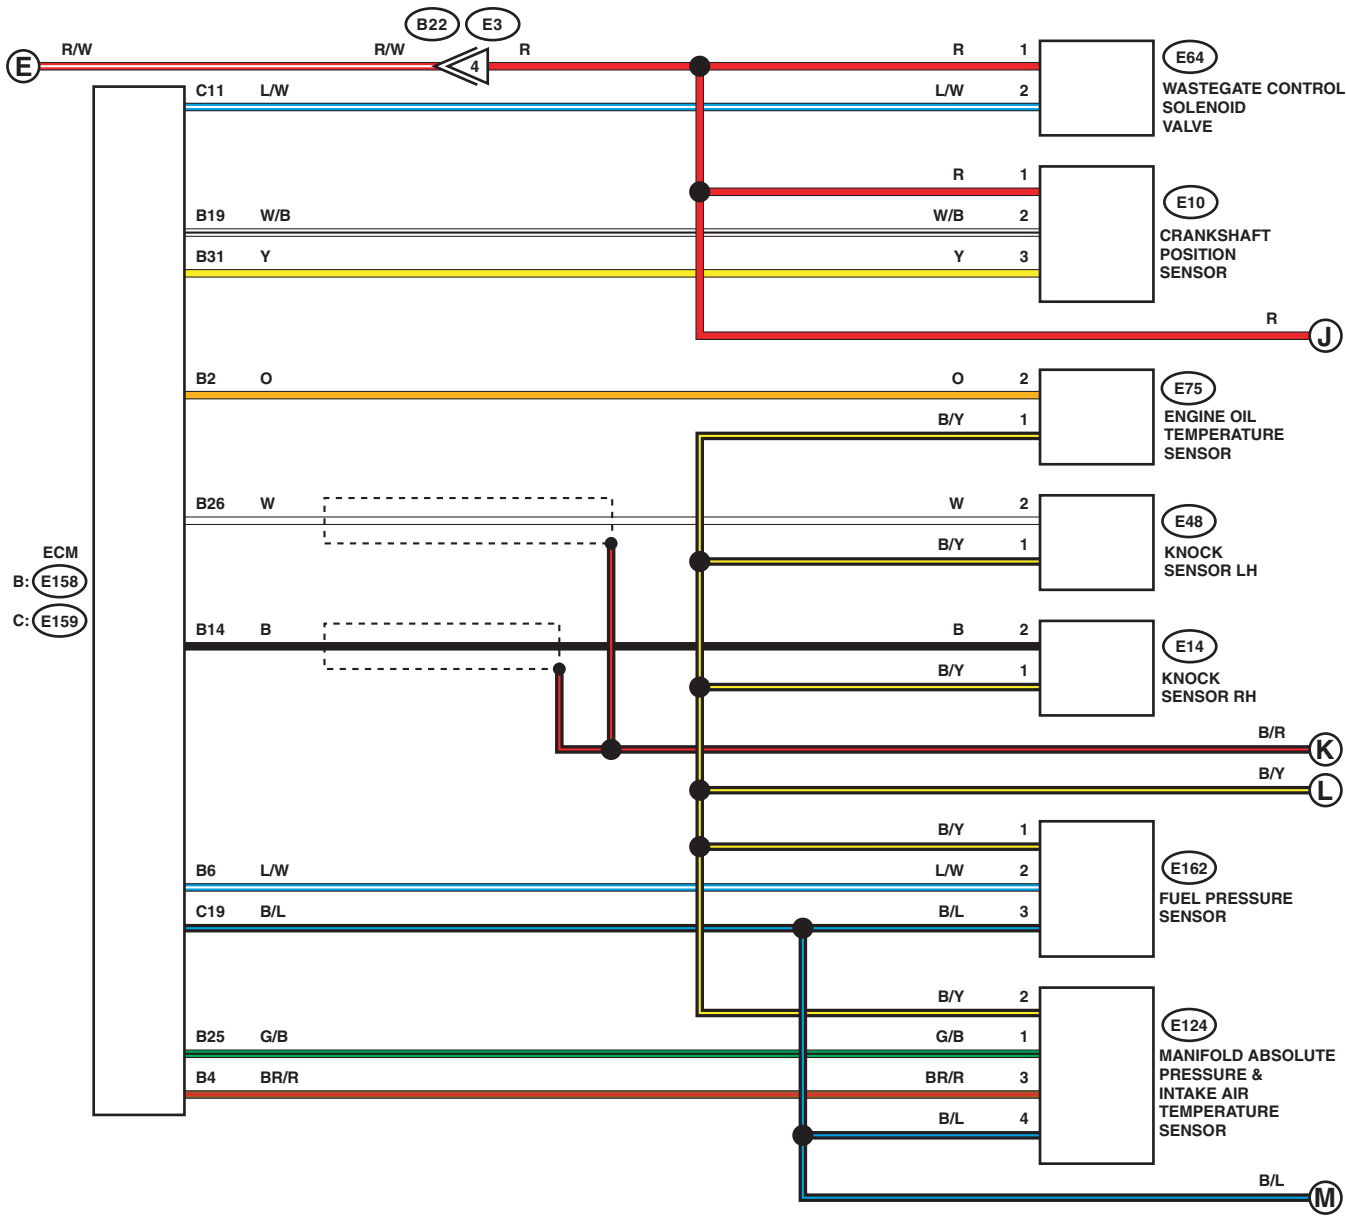

WI-40801

4j


4j

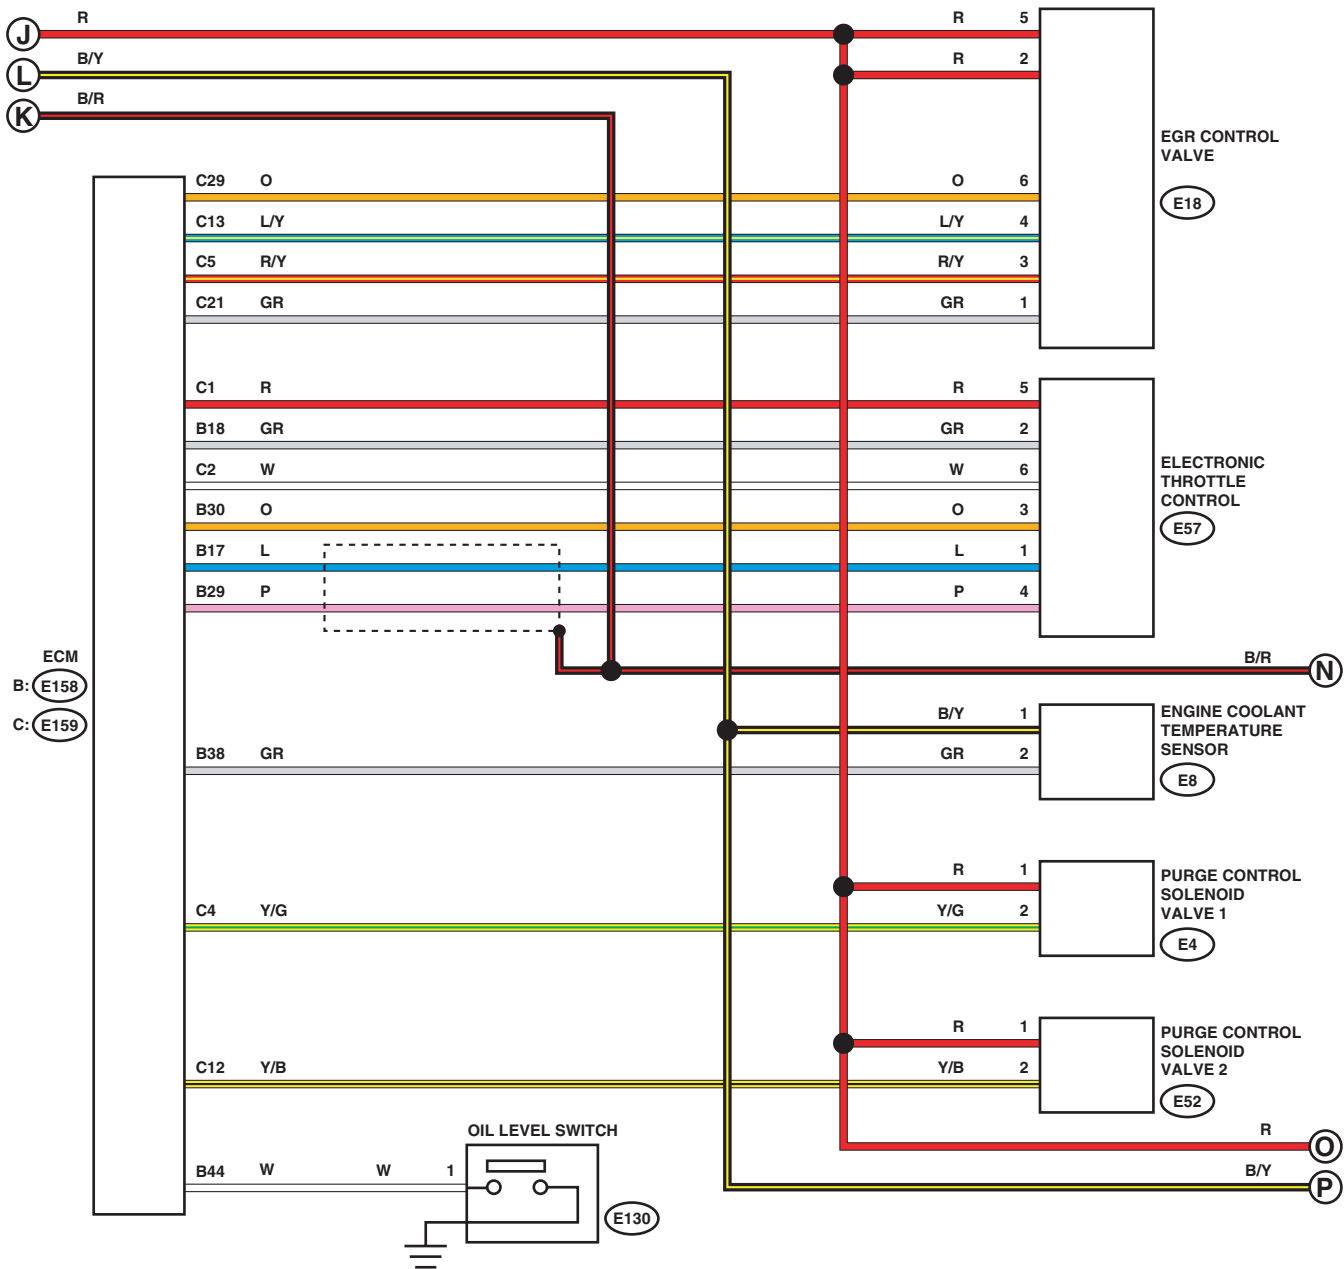

WI-40802

Engine Electrical System

WIRING SYSTEM

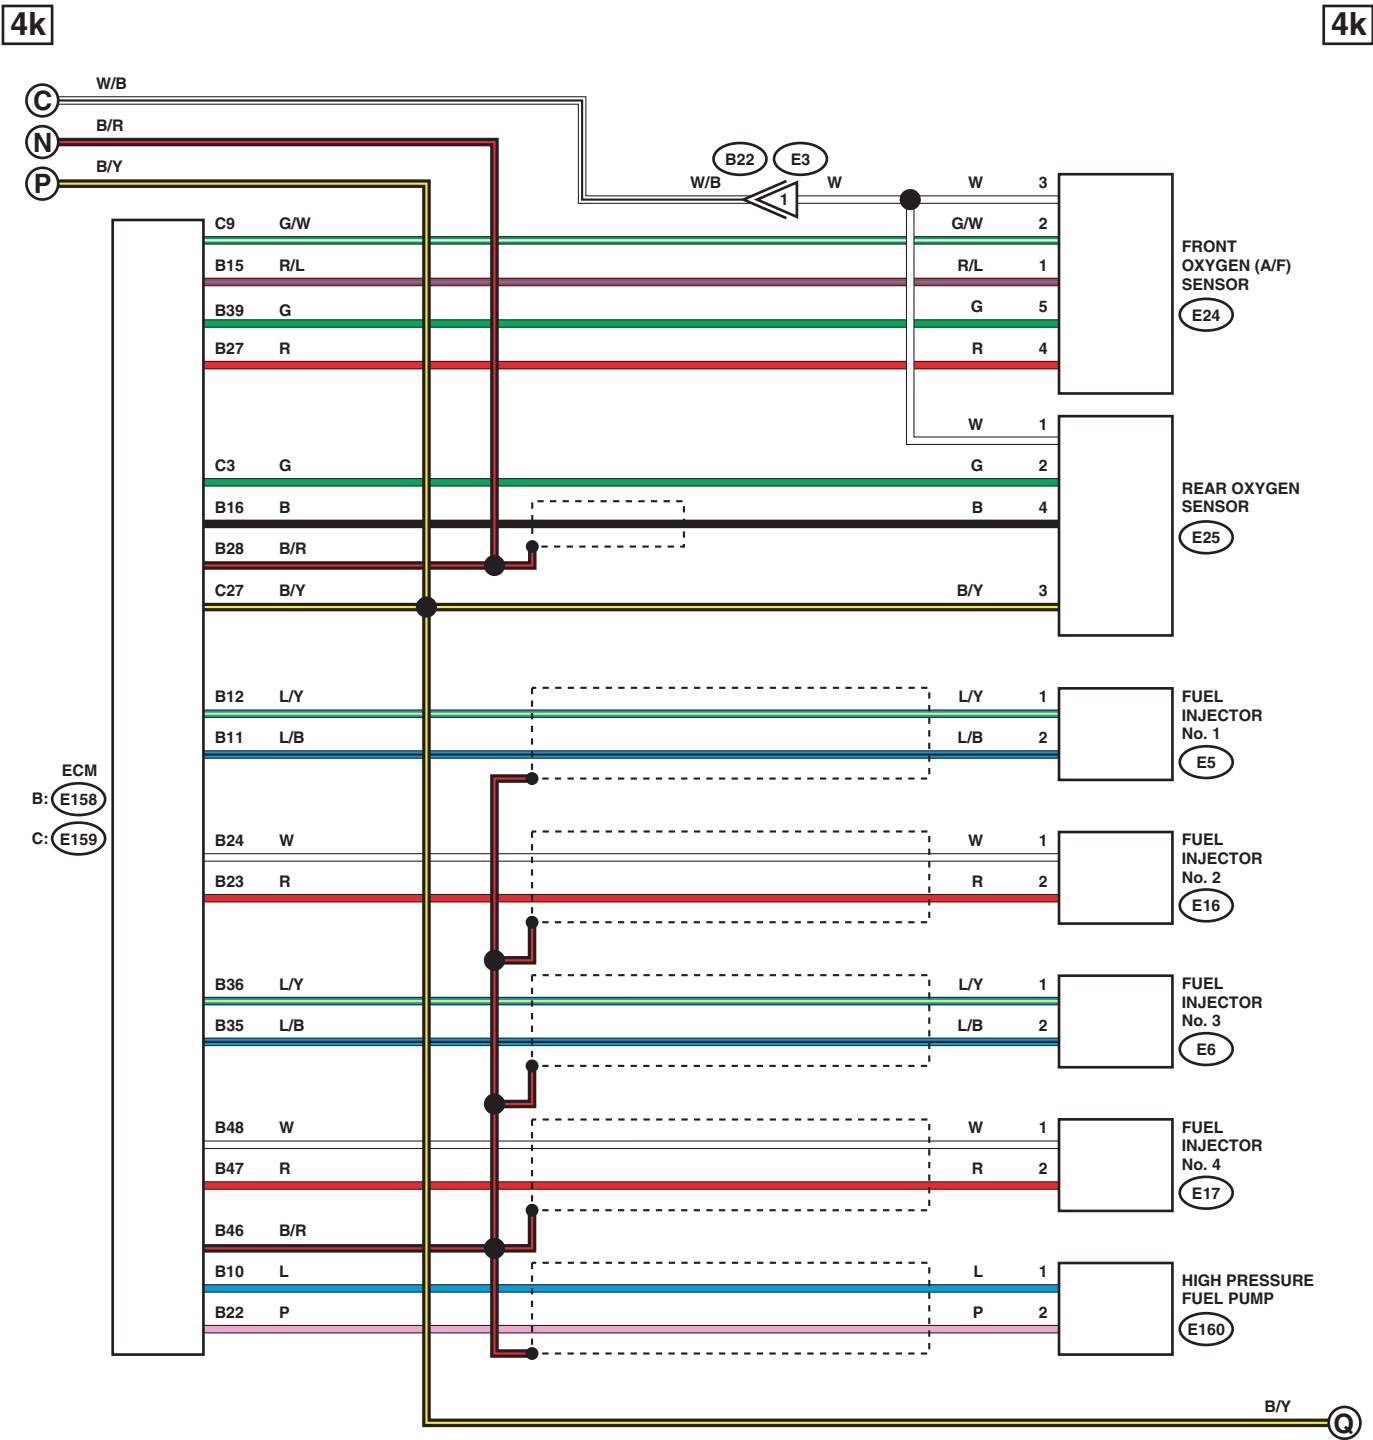

WI-40803

WIRING SYSTEM

41




Engine Electrical System

WIRING SYSTEM

4m

4m

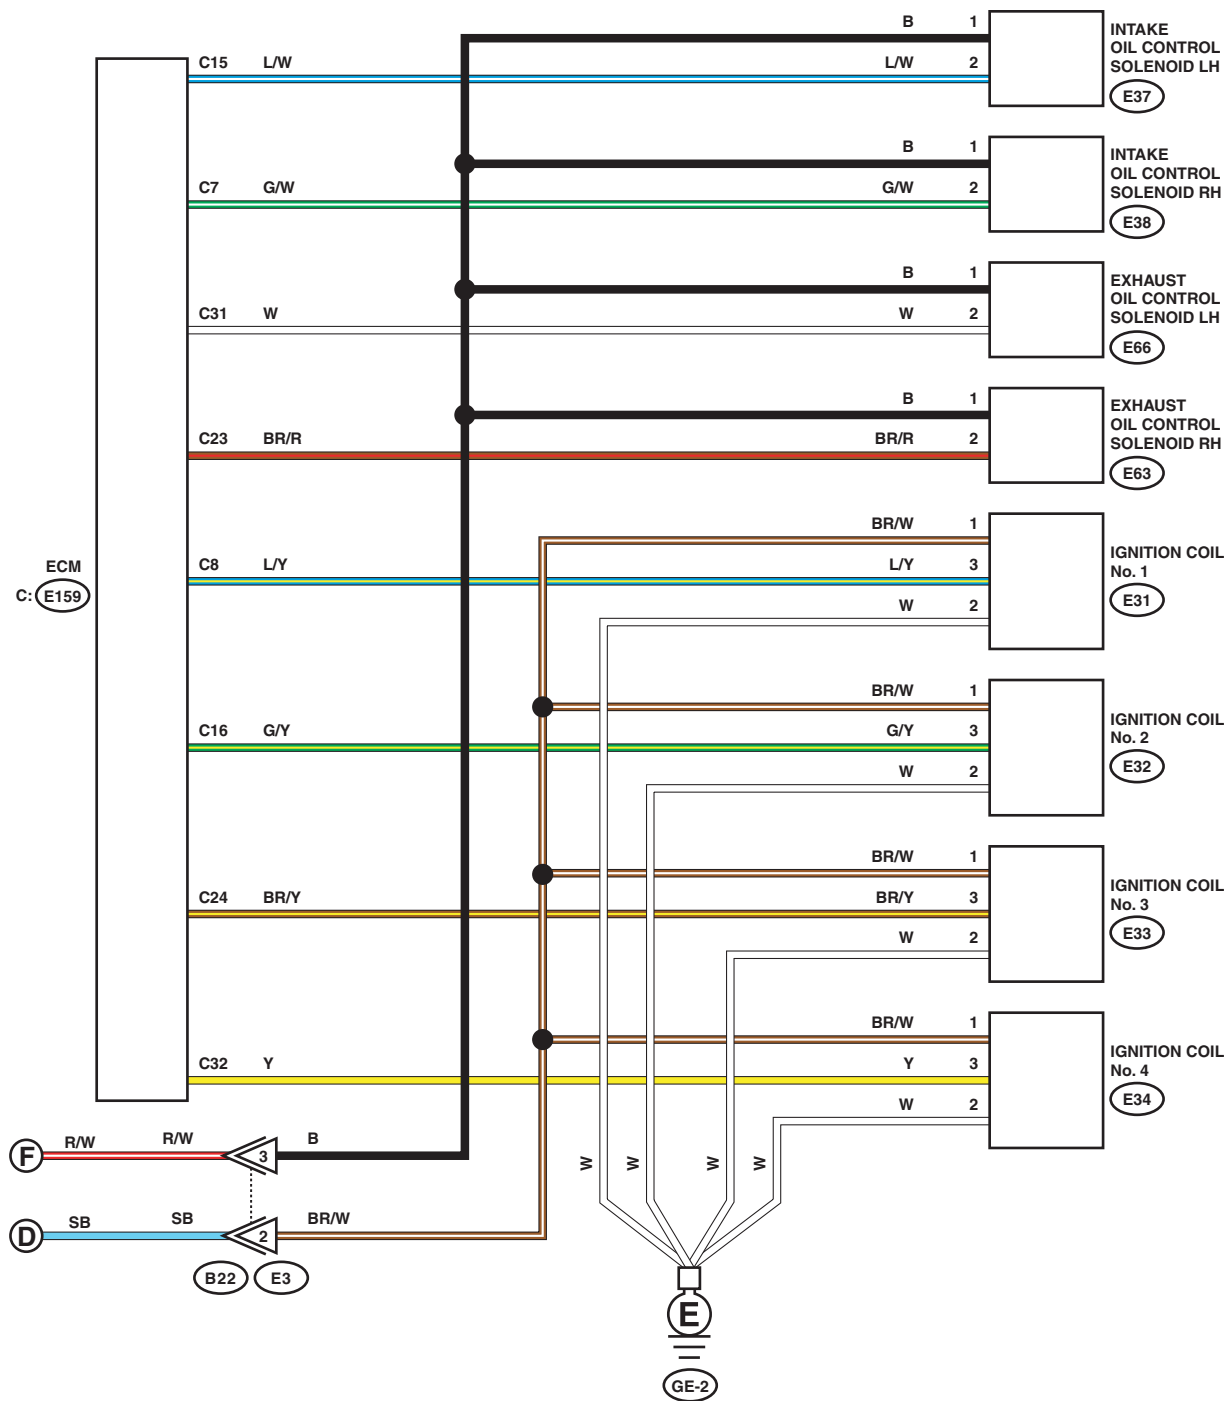

WI-40805

WIRING SYSTEM

4n




Engine Electrical System

WIRING SYSTEM

4o

4o

LIST OF CONNECTORS

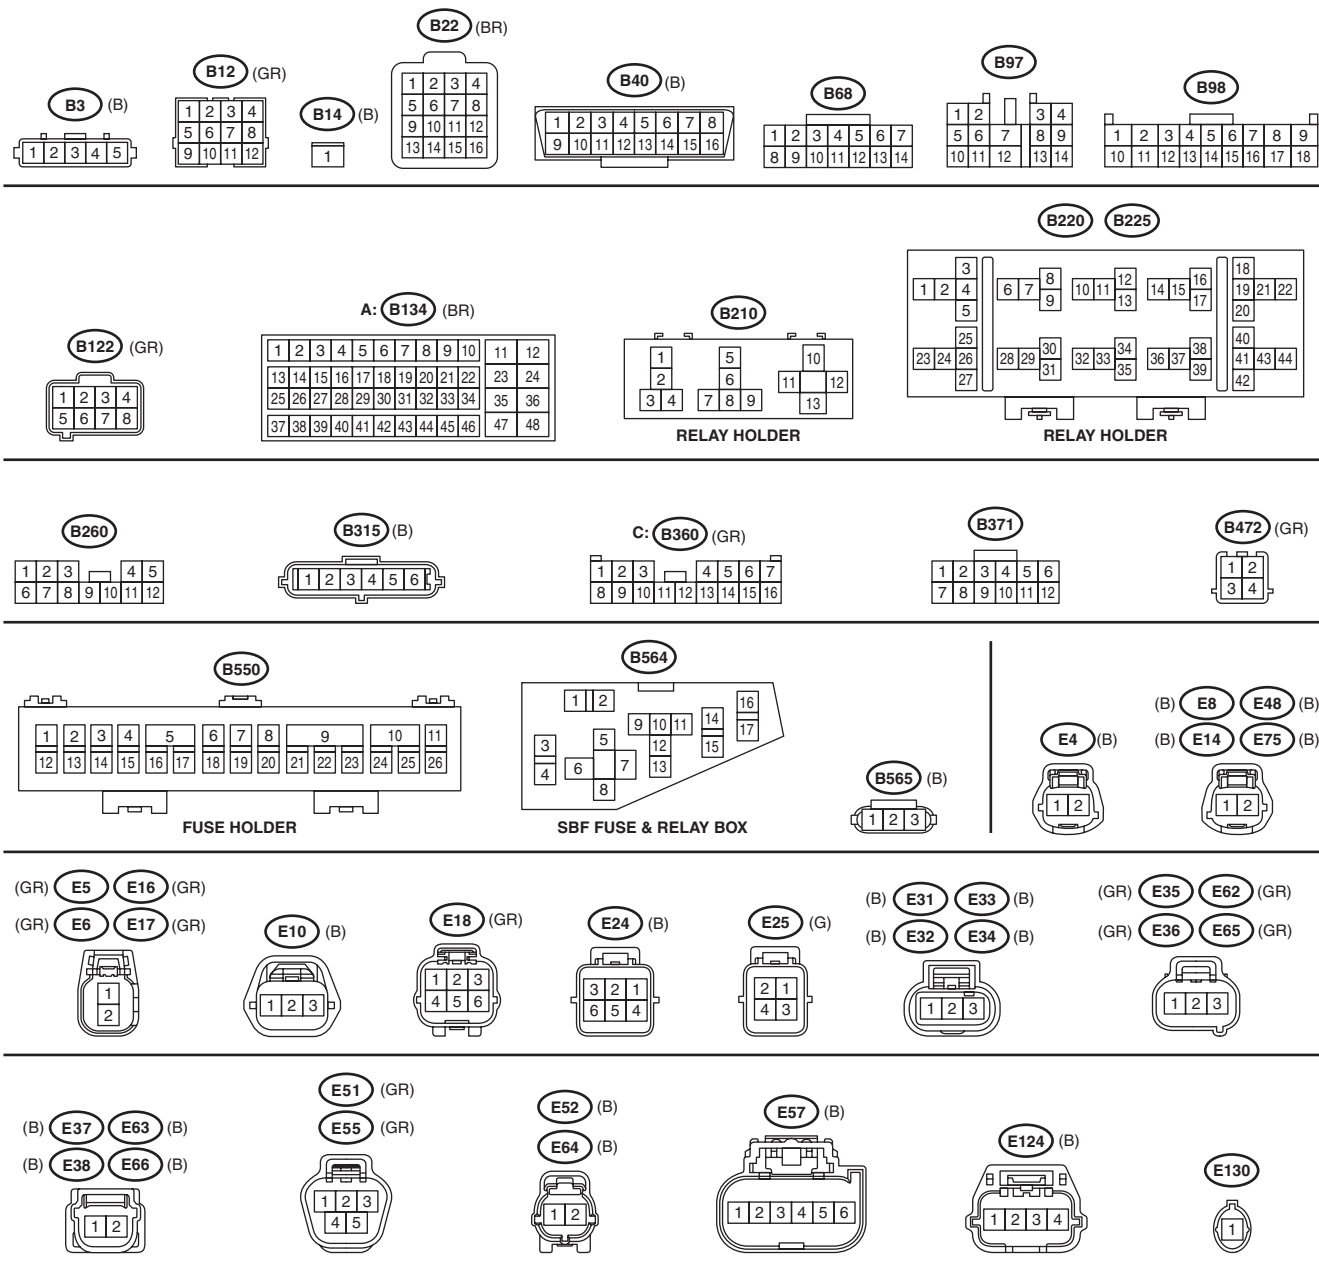


WI-45770

4p


4p

LIST OF CONNECTORS

B: E158 (B)

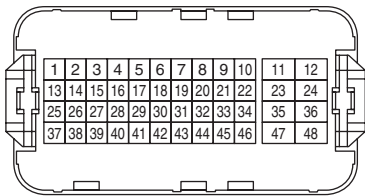

C: E159 (GR)

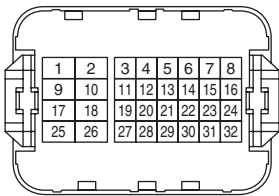


E160 (B)



E162 (B)




F27

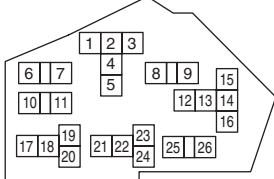


RELAY HOLDER


B: F109




i10




i102



i230




i238




R58




R122



R400



ST3



T7 (B)

