


**3. Rear Seat Belt** S801304**A: REMOVAL** S801304A18**WARNING:**


Replace rear seat belt worn by occupants of a vehicle that has been in a serious accident. The entire assembly should be replaced even if damage is not obvious.

**1. SEDAN AND COUPE** S801304A1807

- 1) Remove rear cushion from body.
- 2) Remove rear backrest from body.
- 3) Remove screw from lower side of rear quarter trim, and lift-up lower side of rear quarter trim.
- 4) Remove trim panel rear bracket upper.
- 5) Remove rear quarter trim.
- 6) Remove outer anchor bolts.

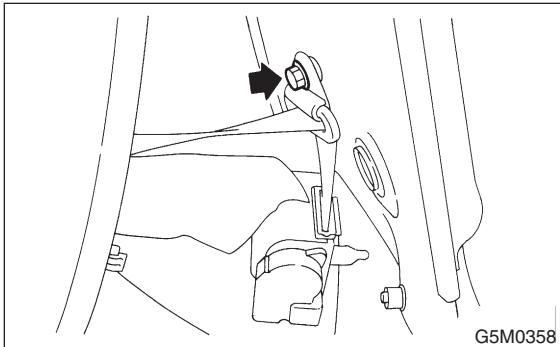


- 7) Remove rear bolt from ELR.

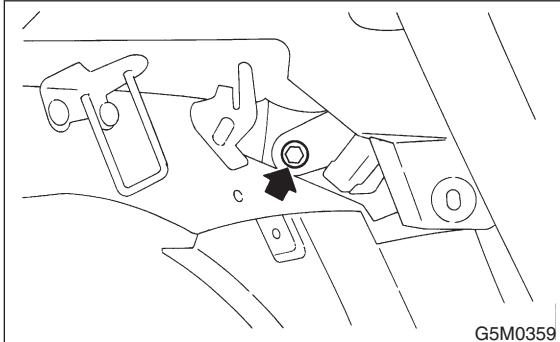

- 8) Remove belt from outlet in rear quarter along slit.


- 9) Remove inner bolts which secure outer seat.
- 10) Remove washer from bolt, then remove bolt, belt assembly, and anchor plate bracket.
- 11) Remove inner bolts (2 places) from center seat.

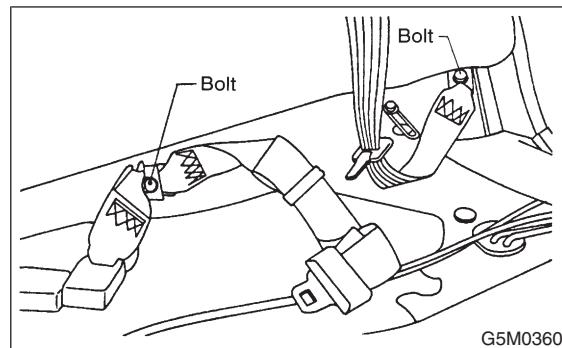

- 12) Remove washer from bolt, and remove bolt, belt assembly and anchor plate bracket.

**2. WAGON** S801304A1808


- 1) Raise rear cushion.
- 2) Remove rear backrest from body.
- 3) Remove shoulder anchor cover and anchor bolt.
- 4) Remove lower portion of rear quarter trim.
- 5) Remove lap anchor cover and bolt.

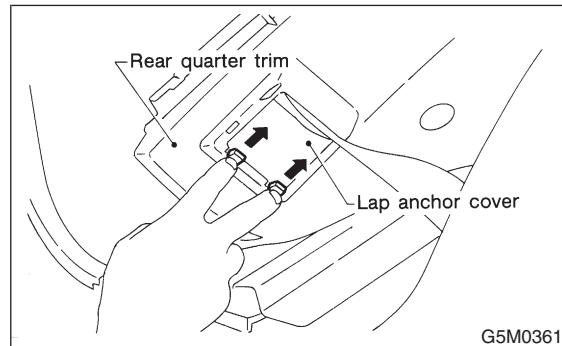

- 6) Remove 7/16-20 UNF nuts which secure ELR and remove ELR.

**CAUTION:**

Remove outer seat belt and center seat belt in similar manner used to remove those from Sedan.

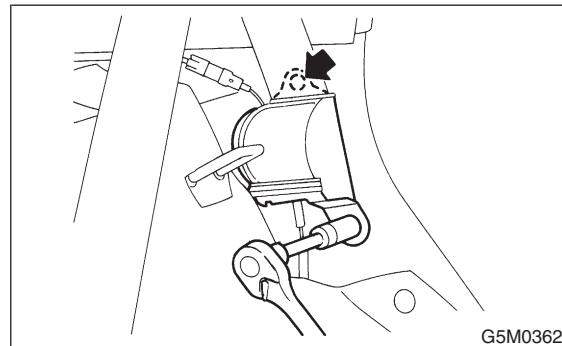

## B: INSTALLATION

S801304A11

### 1. SEDAN AND COUPE

S801304A1107

Install in the reverse order of removal.

NOTE:

Ensure that seat belt is properly reeled on and off after installation of ELR.

**CAUTION:**

- Be extremely careful not to confuse center seat anchor plate with outer seat anchor plate during installation.
- Ensure that seat belts are free from twisting after installation.
- Ensure that tongues, buckles and belts are properly placed on seat.

### 2. WAGON

S801304A1108

Install in the reverse order of removal.

NOTE:

Ensure that seat belt is properly reeled on and off after installation of ELR.

**CAUTION:**

- Be extremely careful not to confuse center seat anchor plate with outer seat anchor plate during installation.
- Ensure that seat belts are free from twisting after installation.
- Ensure that tongues, buckles and belts are properly placed on seat.

## C: INSPECTION

S801304A10

### 1. SEDAN AND COUPE

S801304A107

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

### 2. WAGON

S801304A1008

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent, or frayed. Seat belt is abnormally wound or extended.

## REAR SEAT BELT

Seat Belt System

---

**MEMO:**