


GENERAL DESCRIPTION

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. FRONT GRILLE

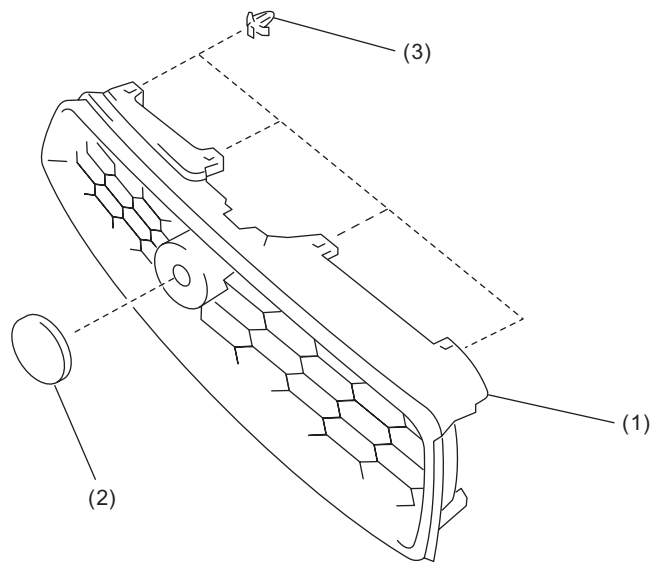


EI-00307

(1) Front grille

(2) Front grille emblem

2. UNDER COVER

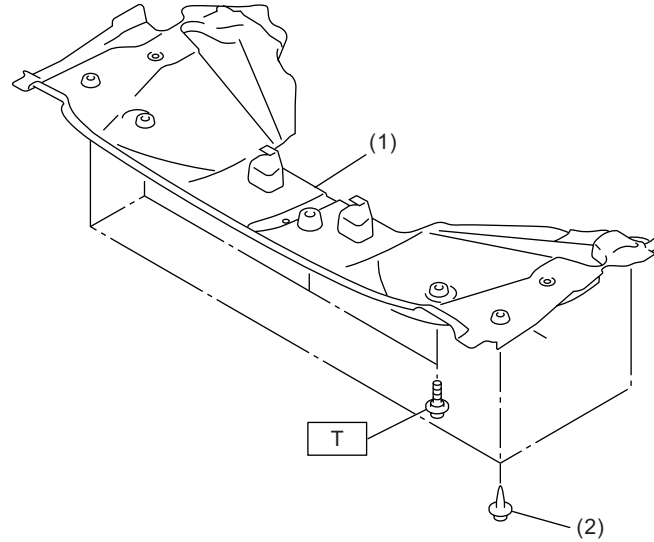

EI-00308


- (1) Under cover
- (2) Clip (side)

Tightening torque: N·m (kgf-m, ft-lb)
T: 14 (1.42, 10.3)

GENERAL DESCRIPTION

EXTERIOR/INTERIOR TRIM

3. HOOD GRILLE

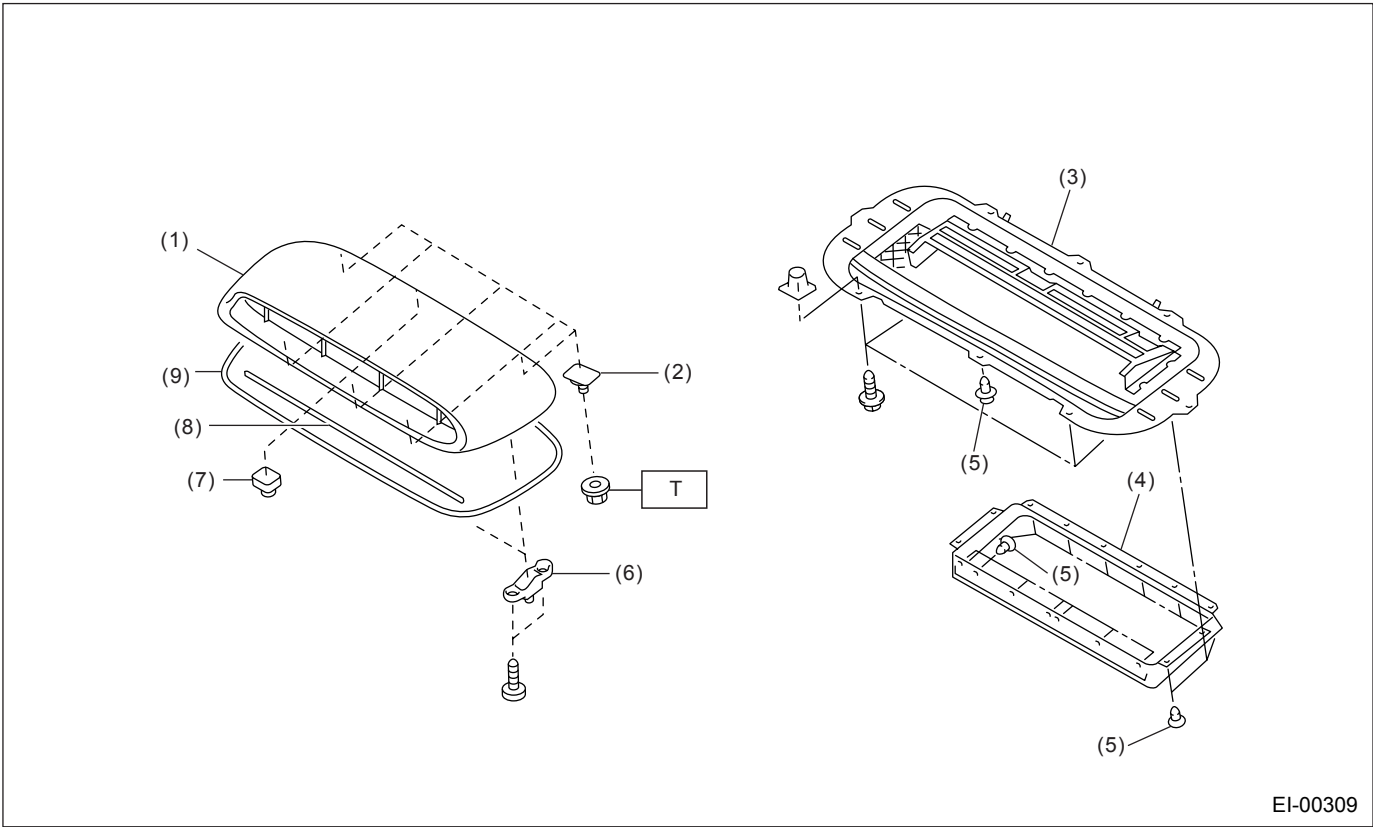


EI-00309

- (1) Hood grille
- (2) Bolt
- (3) Grille duct
- (4) Grille lower duct
- (5) Clip
- (6) Black clip

- (7) White clip
- (8) Packing
- (9) Packing

Tightening torque: N·m (kgf·m, ft·lb)
T: 4.4 (0.45, 3.25)

4. FRONT BUMPER

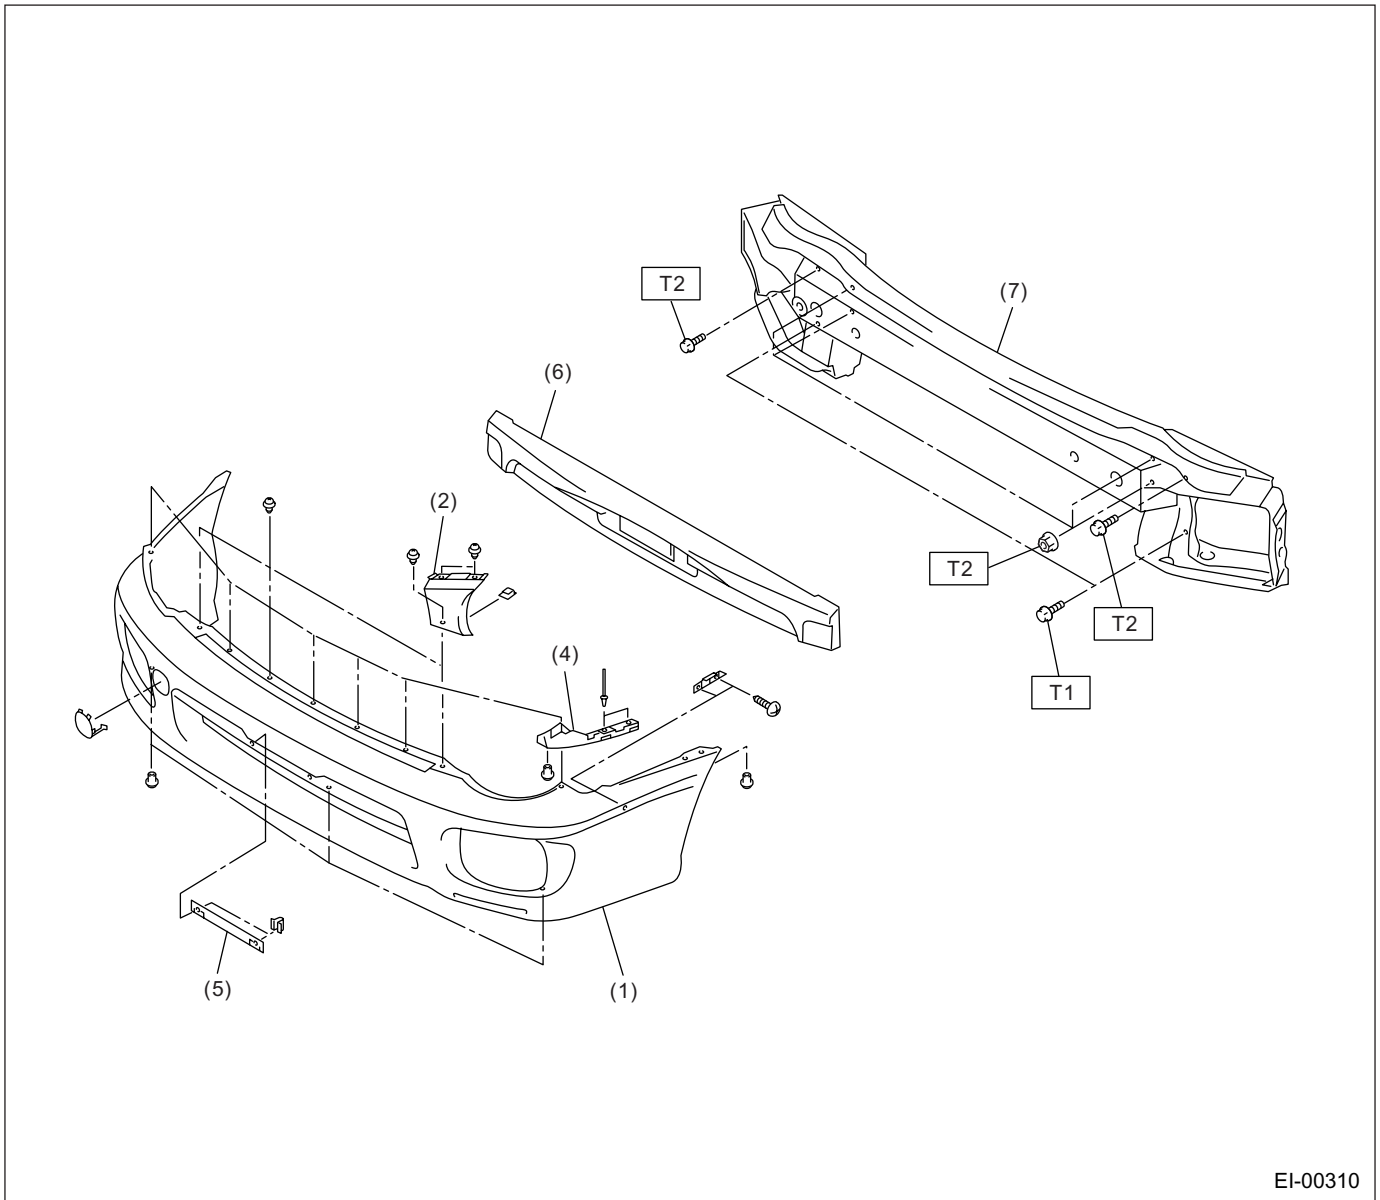

EI-00310

- | | |
|---------------------------|----------------------------|
| (1) Bumper face | (5) Bumper energy absorber |
| (2) Head light side cover | (6) Bumper back beam |
| (3) Bumper corner bracket | |
| (4) License plate bracket | |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 32 (3.3, 24)

T2: 69 (7.0, 51)

GENERAL DESCRIPTION

EXTERIOR/INTERIOR TRIM

5. REAR BUMPER

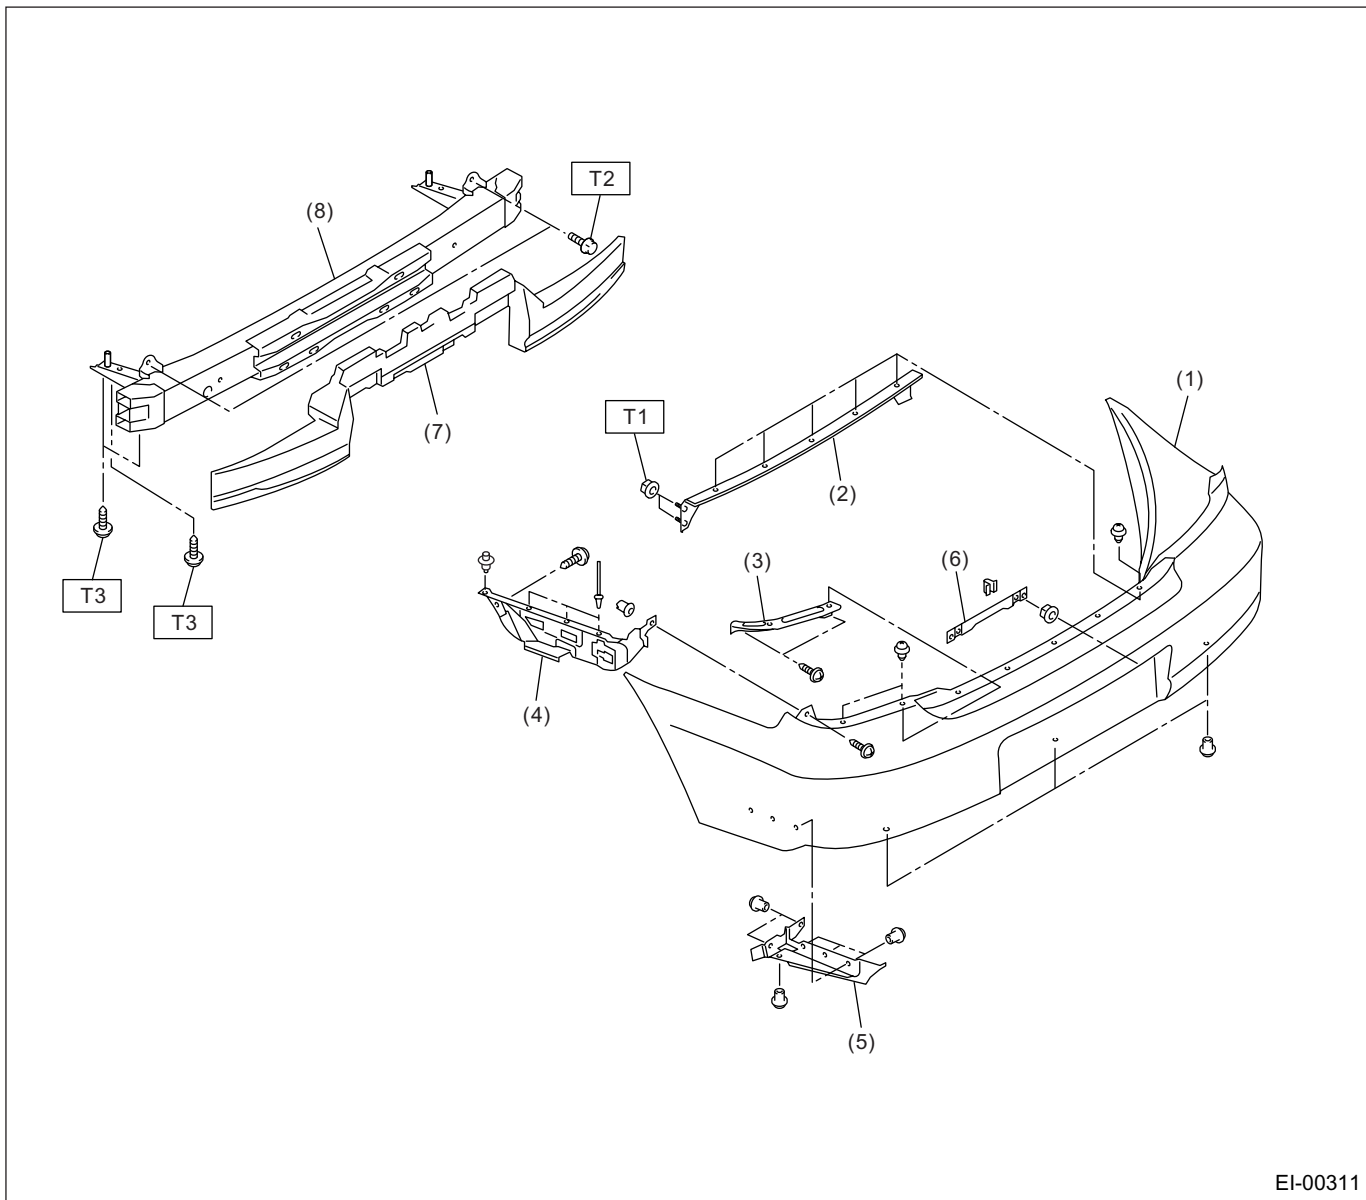

EI-00311

- | | |
|---------------------------|----------------------------|
| (1) Bumper face | (5) Bumper side cover |
| (2) Bumper upper beam | (6) License plate base |
| (3) Bumper corner bracket | (7) Bumper energy absorber |
| (4) Bumper side bracket | (8) Bumper back beam |


Tightening torque: N·m (kgf-m, ft-lb)

T1: 33 (3.4, 24)

T2: 34 (3.5, 25)

T3: 95 (9.7, 70)


6. MUD GUARD

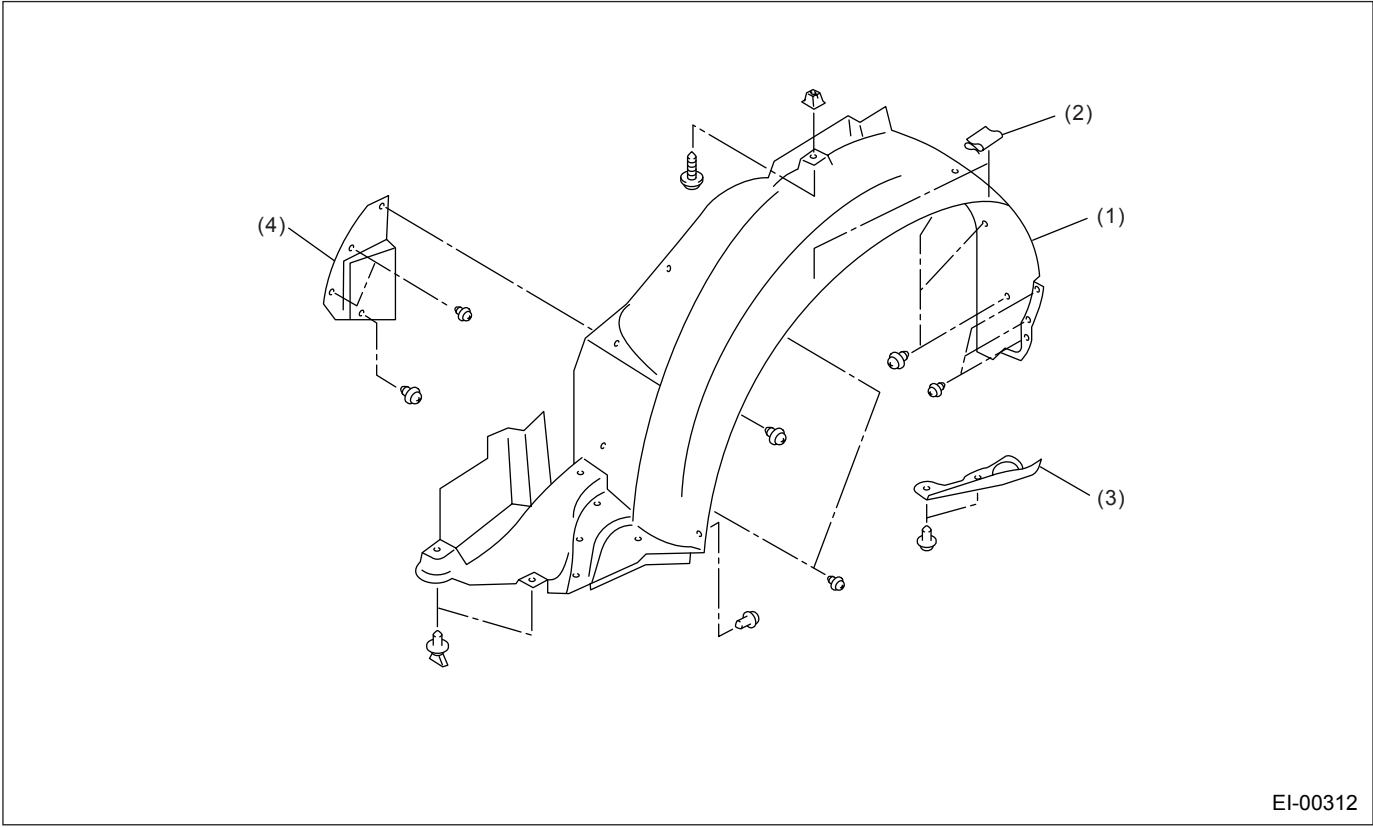

EI-00312

- (1) Mud guard
- (2) Clip
- (3) Sub frame cover
- (4) Mud guard plate

7. COWL PANEL

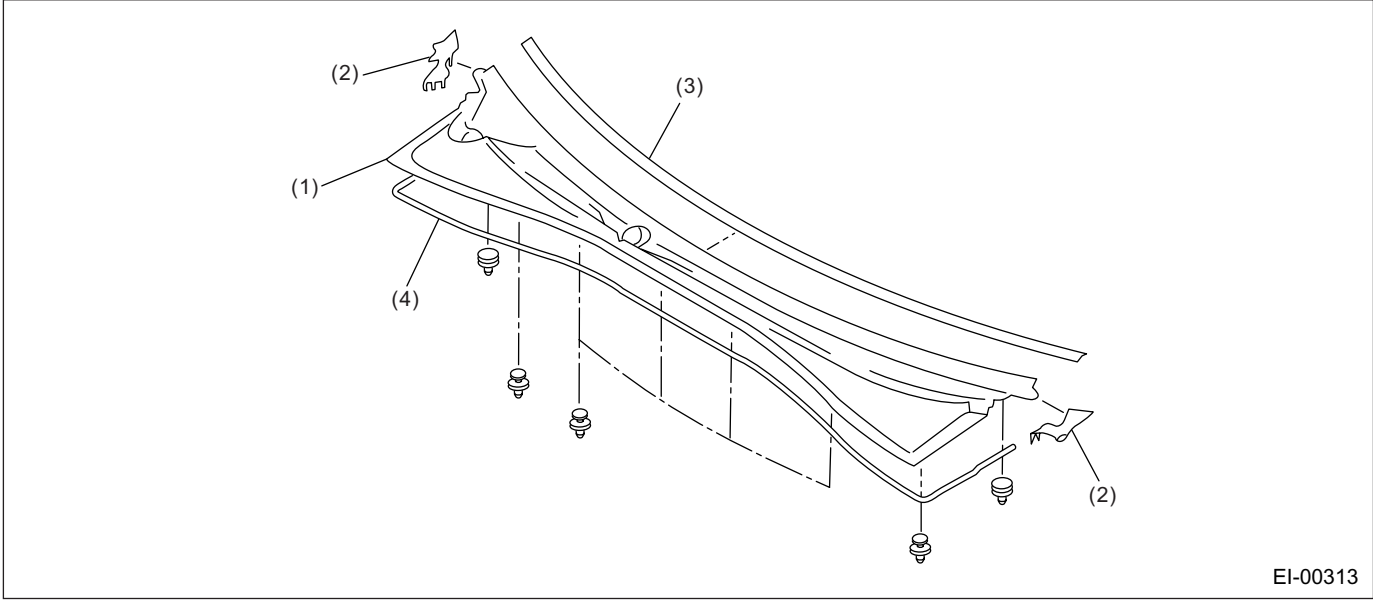


EI-00313

- (1) Cowl panel
- (2) Cowl side panel
- (3) Protector
- (4) Seal

GENERAL DESCRIPTION

EXTERIOR/INTERIOR TRIM

8. ROOF SPOILER

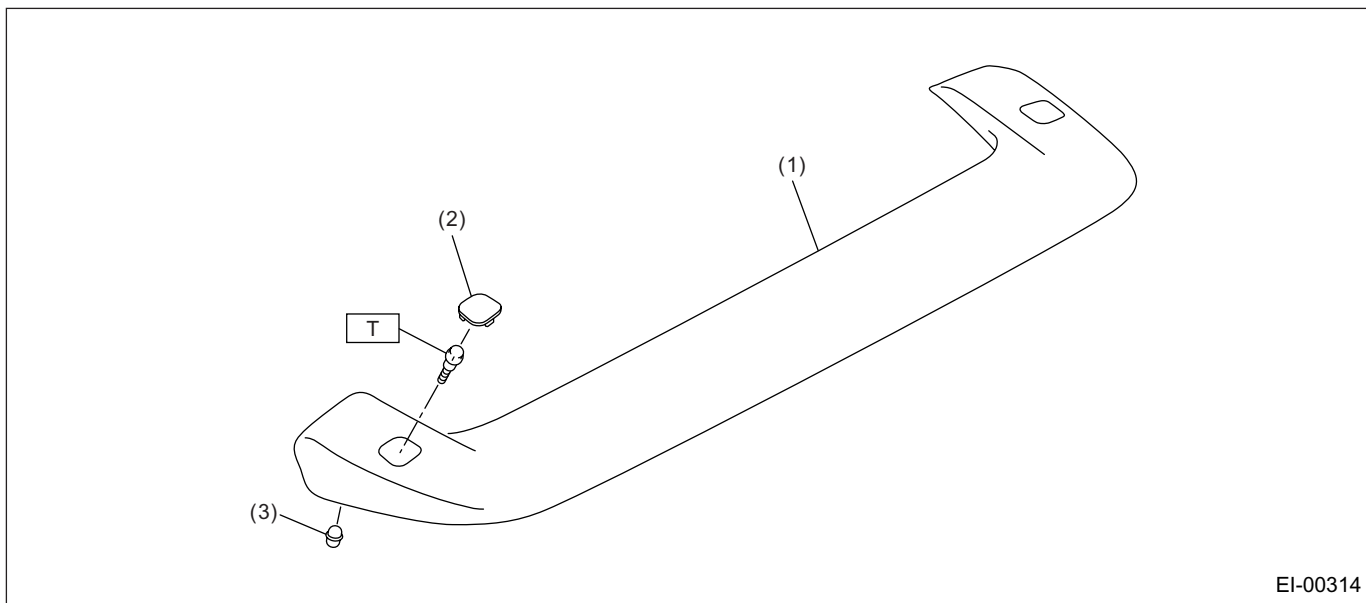

EI-00314

(1) Roof spoiler


(2) Cap

(3) Clip

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.35 (0.749, 5.42)

9. REAR SPOILER

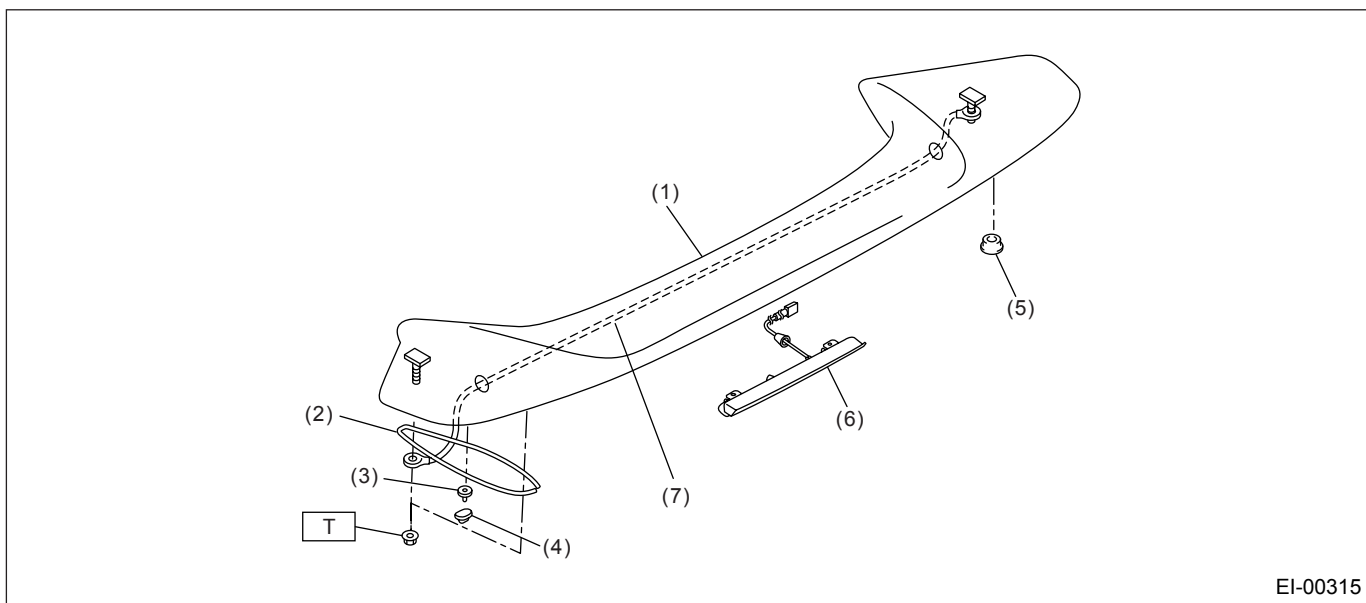

EI-00315

(1) Rear spoiler

(2) Protector

(3) Clip

(4) Grommet

(5) Seal (only RH side)


(6) High mount stop lamp

(7) Wire cable (routed inside)

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.4 (0.75, 5.46)

10.SIDE SILL SPOILER

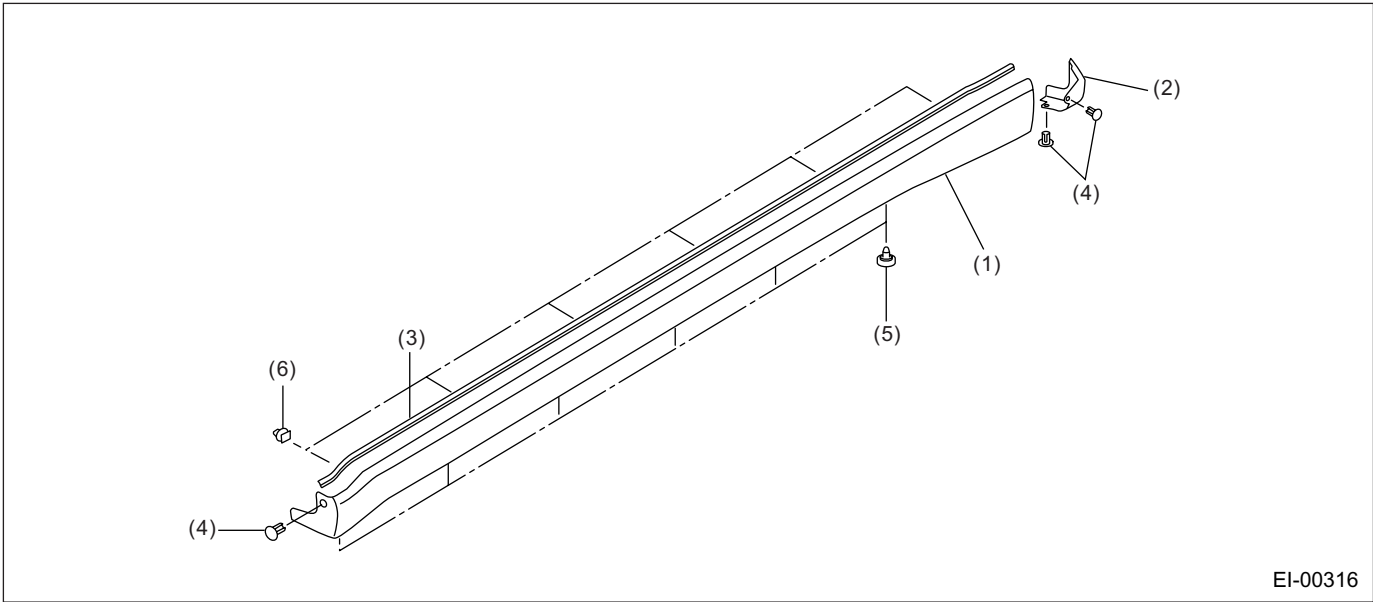

(1) Side sill spoiler
(2) End cover


(3) Protector
(4) Rivet clip

(5) Clip
(6) Spoiler clip

GENERAL DESCRIPTION

EXTERIOR/INTERIOR TRIM


11.DOOR TRIM

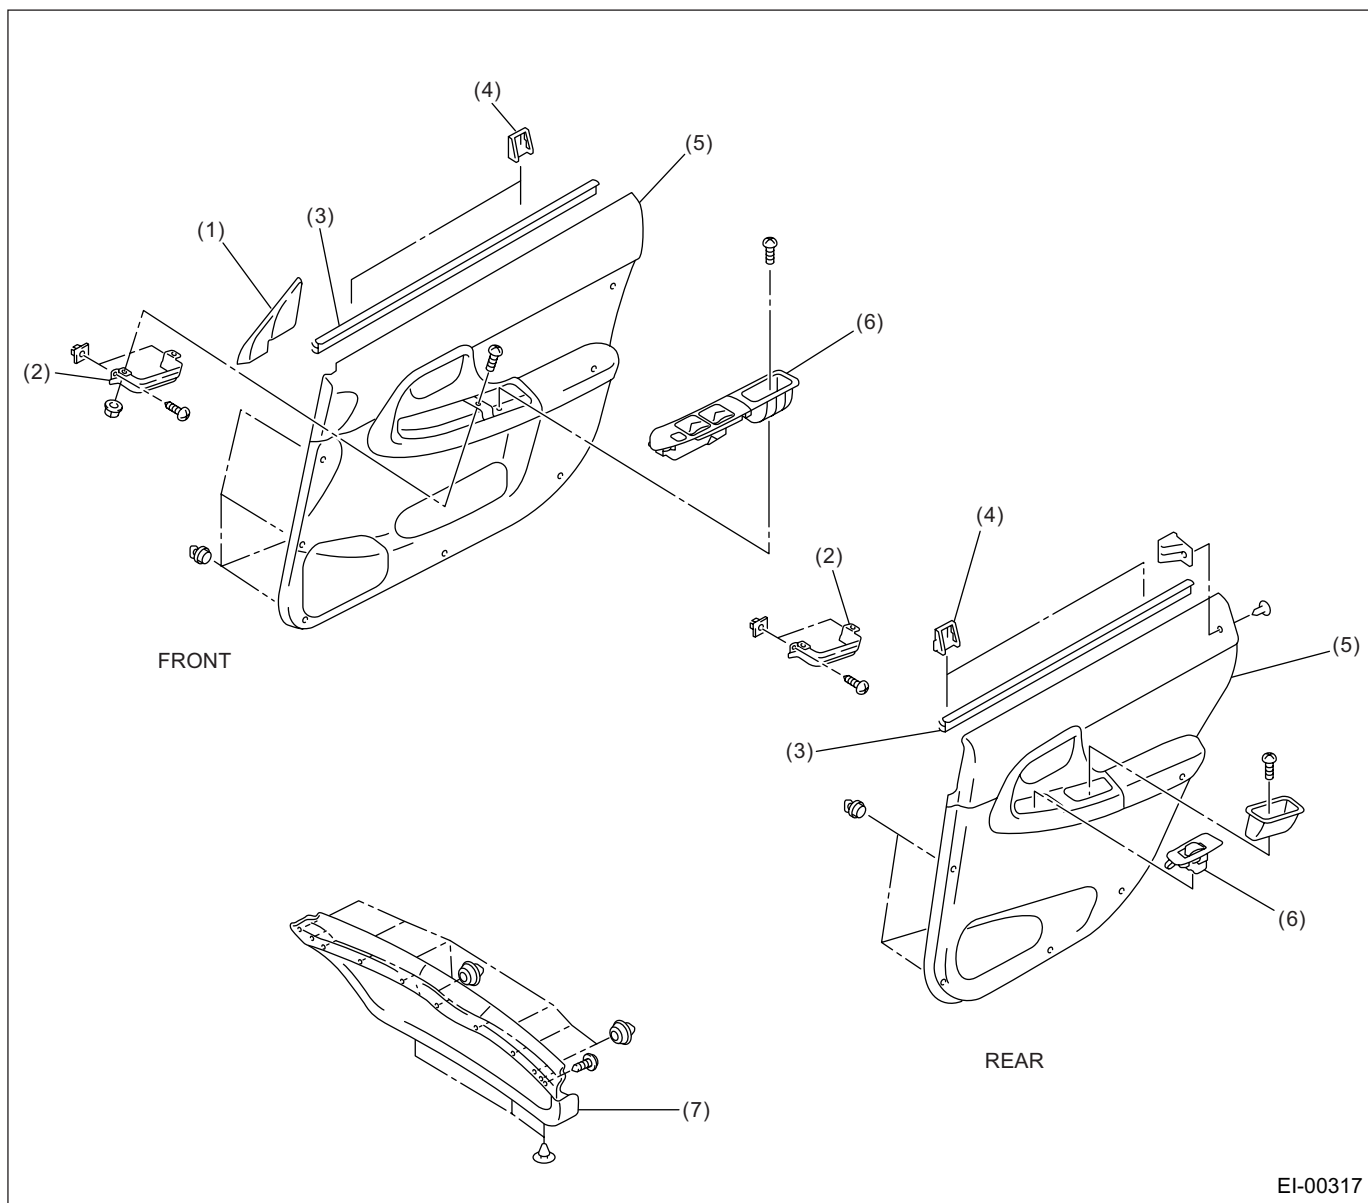

- (1) Gusset cover
- (2) Bracket
- (3) Weatherstrip upper

- (4) Clip
- (5) Trim panel
- (6) Power window switch cover

- (7) Lower trim

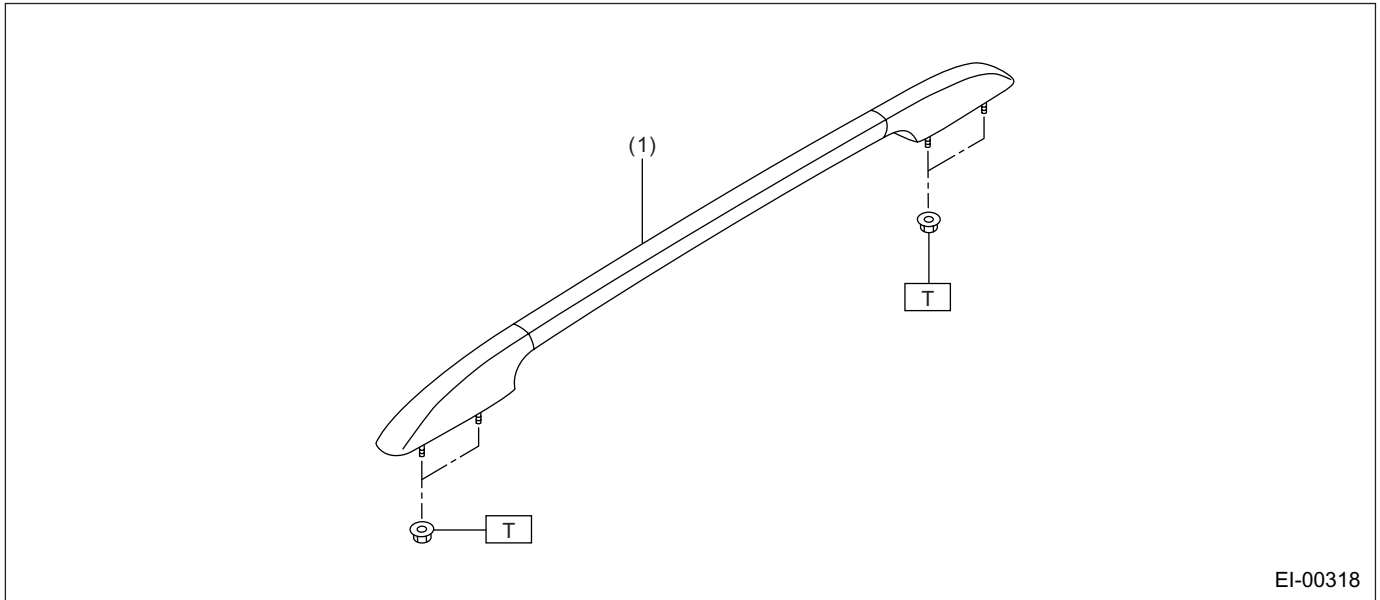12.ROOF RAIL


(1) Roof rail

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.4 (0.75, 5.46)

GENERAL DESCRIPTION

EXTERIOR/INTERIOR TRIM


13.CONSOLE BOX

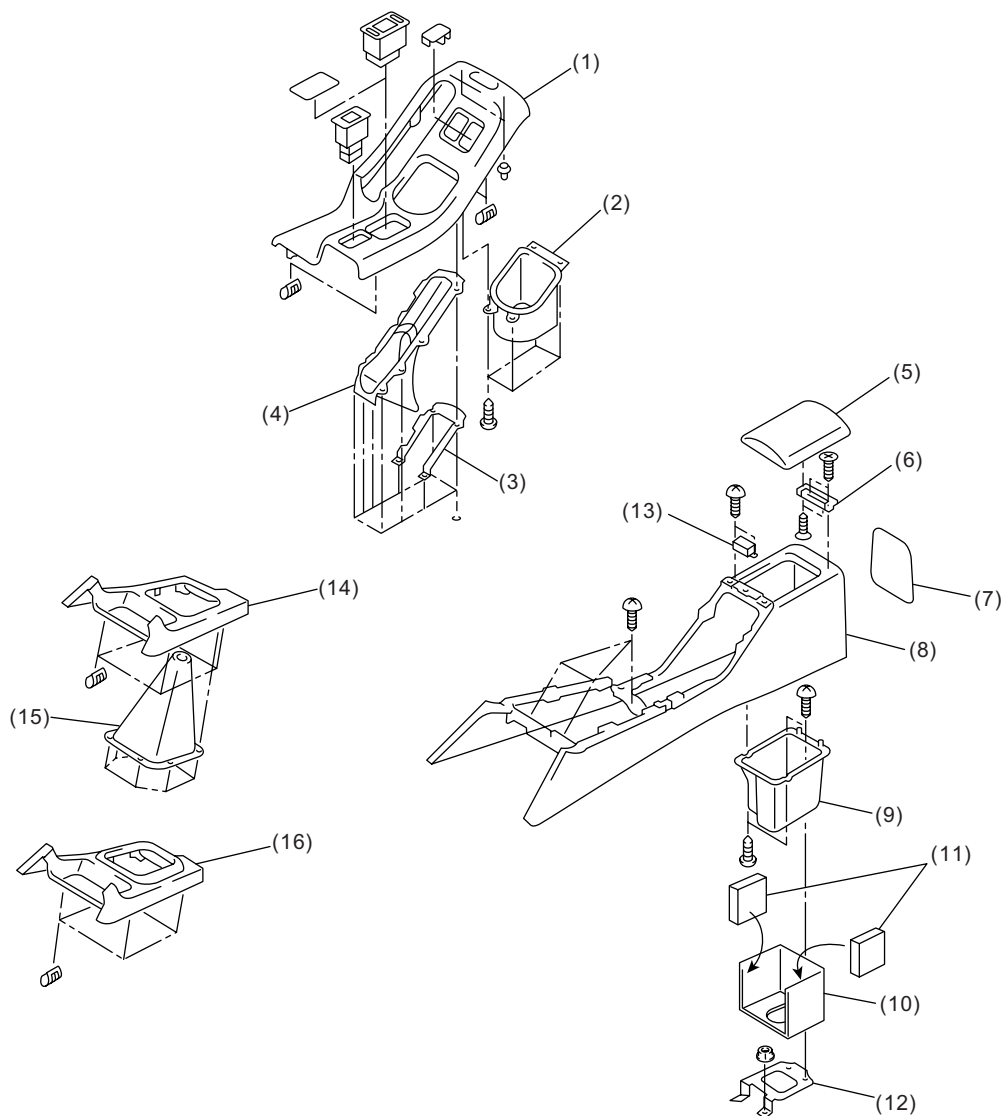

EI-00319

- | | | |
|-------------------|--------------------|-----------------------|
| (1) Console cover | (7) Rear lid | (13) Lock |
| (2) Cup holder | (8) Console box | (14) Front cover (MT) |
| (3) Bracket | (9) Console pocket | (15) Boot |
| (4) Strip | (10) Upper bracket | (16) Front cover (AT) |
| (5) Upper lid | (11) Pad | |
| (6) Lid hinge | (12) Lower bracket | |

14. INSTRUMENT PANEL

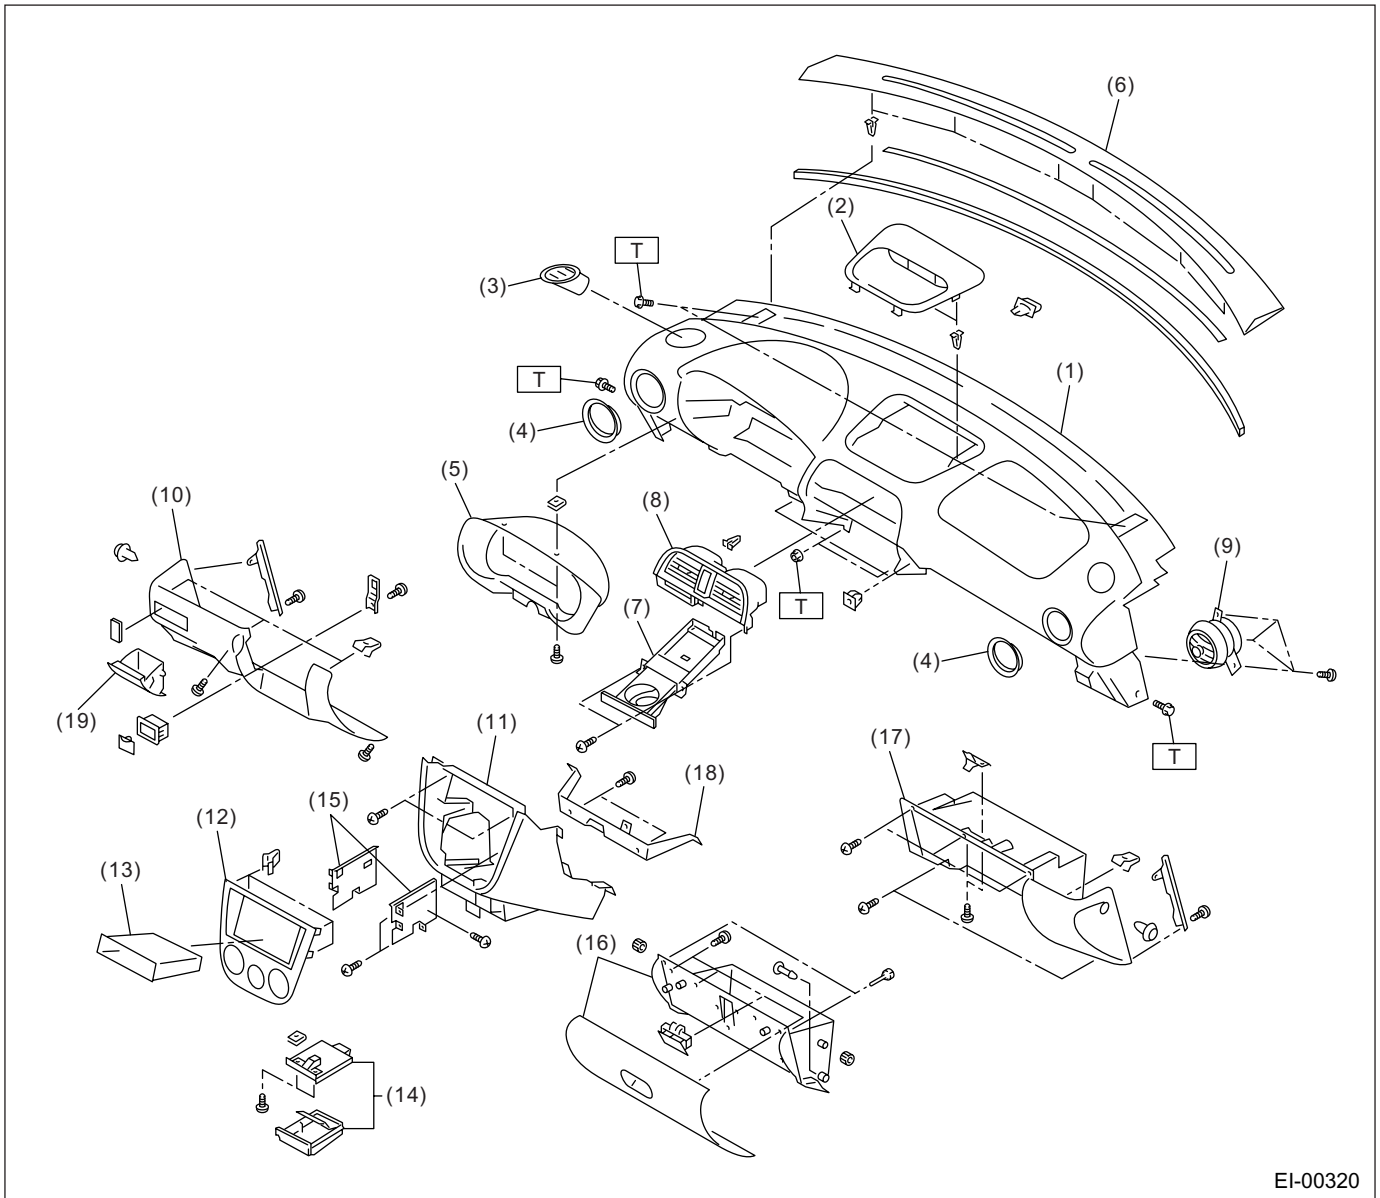

EI-00320

- | | |
|---------------------------------|----------------------------|
| (1) Pad & frame | (9) Air vent grille (Side) |
| (2) Center upper panel | (10) Lower cover |
| (3) Air vent grille (Defroster) | (11) Console cover |
| (4) Grille cover | (12) Center panel |
| (5) Meter visor | (13) Center pocket |
| (6) Defroster grille | (14) Ash tray |
| (7) Cup holder | (15) Audio bracket |
| (8) Air vent grille (Center) | (16) Glove box lid |

- | |
|----------------------------|
| (17) Glove box panel |
| (18) Console reinforcement |
| (19) Coin box |


Tightening torque: N·m (kgf·m, ft·lb)

T: 7 (0.71, 5.2)

GENERAL DESCRIPTION

EXTERIOR/INTERIOR TRIM


15.INNER TRIM (SEDAN)

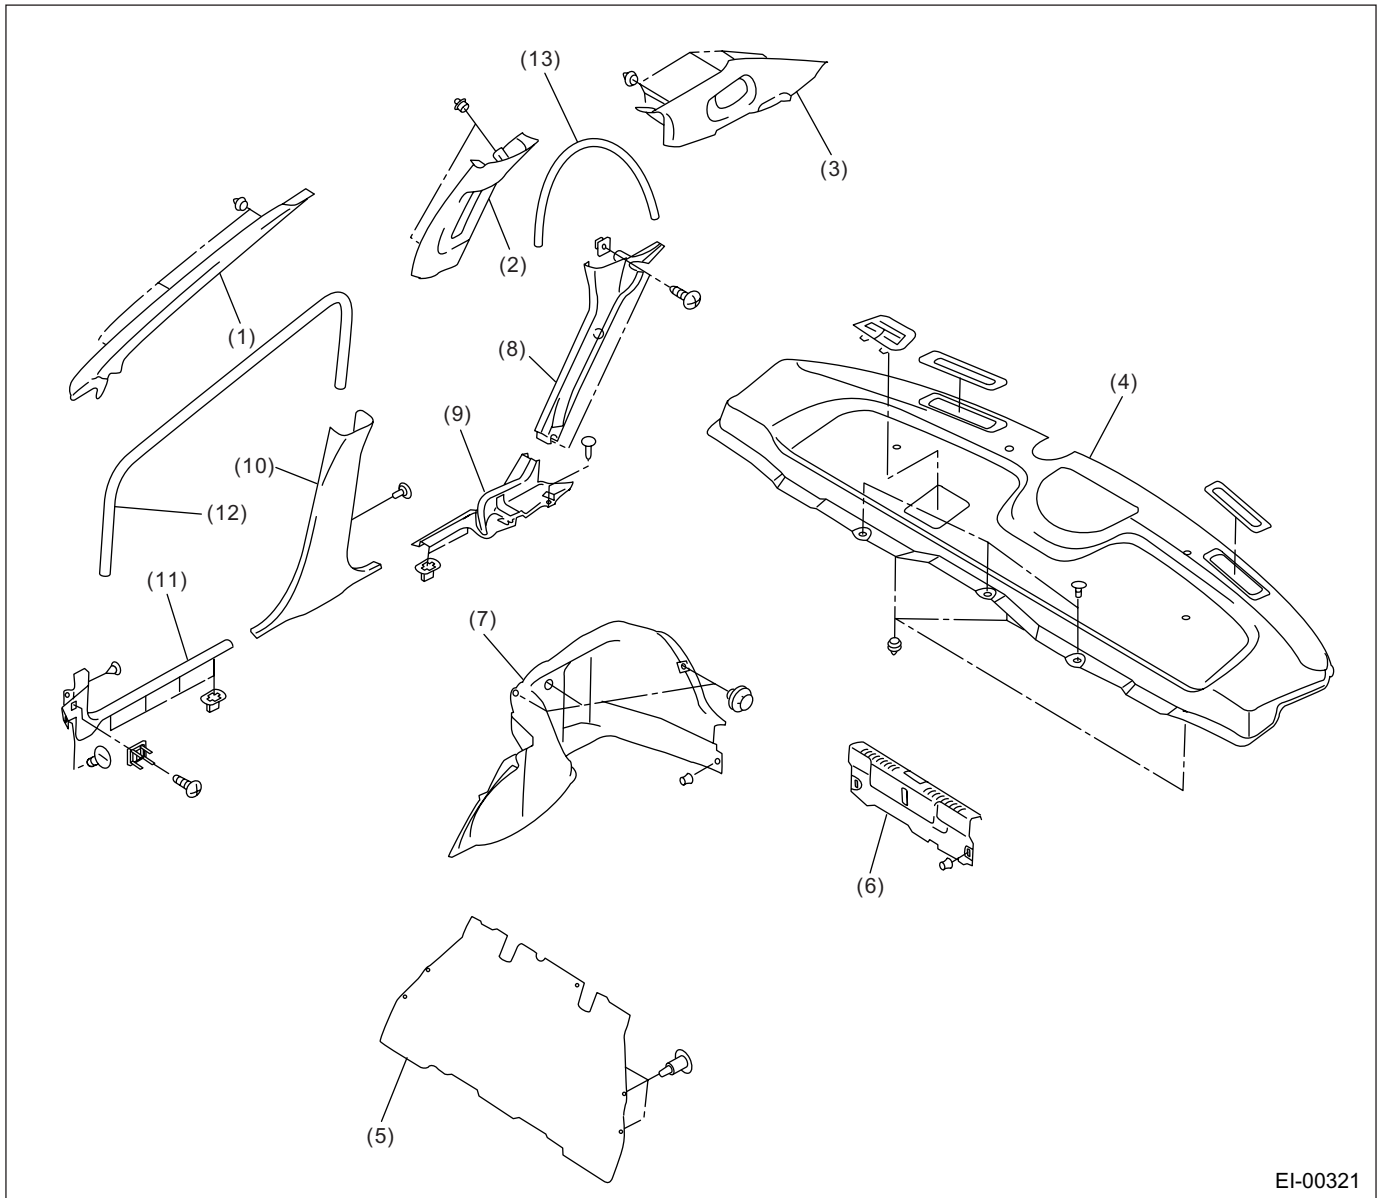

EI-00321

- | | | |
|------------------------------|-------------------------------|----------------------------|
| (1) Front pillar upper trim | (6) Trunk rear trim | (11) Side sill front cover |
| (2) Center pillar upper trim | (7) Trunk side trim | (12) Front garnish |
| (3) Rear pillar upper trim | (8) Rear pillar lower trim | (13) Rear garnish |
| (4) Rear shelf trim | (9) Side sill rear cover | |
| (5) Rear bulk trim | (10) Center pillar lower trim | |

16.INNER TRIM (WAGON)

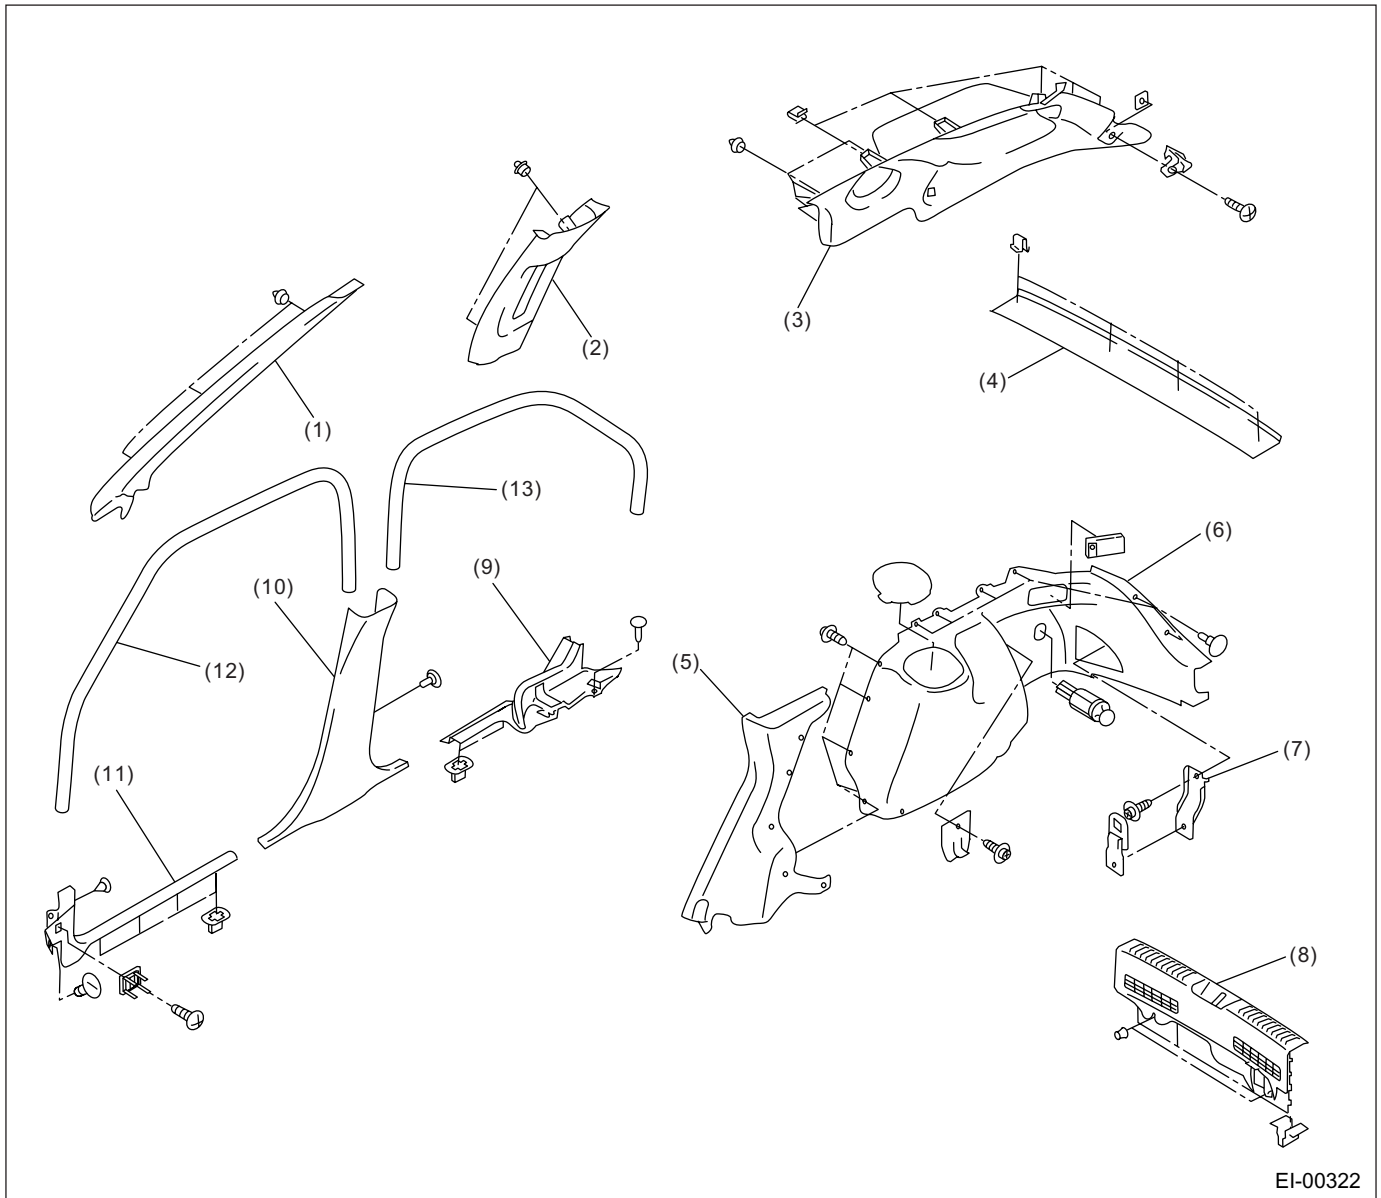


EI-00322

- | | | |
|------------------------------|-------------------------------|----------------------------|
| (1) Front pillar upper trim | (6) Rear quarter lower trim | (11) Side sill front cover |
| (2) Center pillar upper trim | (7) Hook | (10) Front garnish |
| (3) Rear pillar upper trim | (8) Rear skirt trim | (11) Rear garnish |
| (4) Rear rail trim | (9) Side sill rear cover | (12) Front garnish |
| (5) Rear pillar lower trim | (10) Center pillar lower trim | (13) Rear garnish |

GENERAL DESCRIPTION


EXTERIOR/INTERIOR TRIM

17.ROOF TRIM (SEDAN)

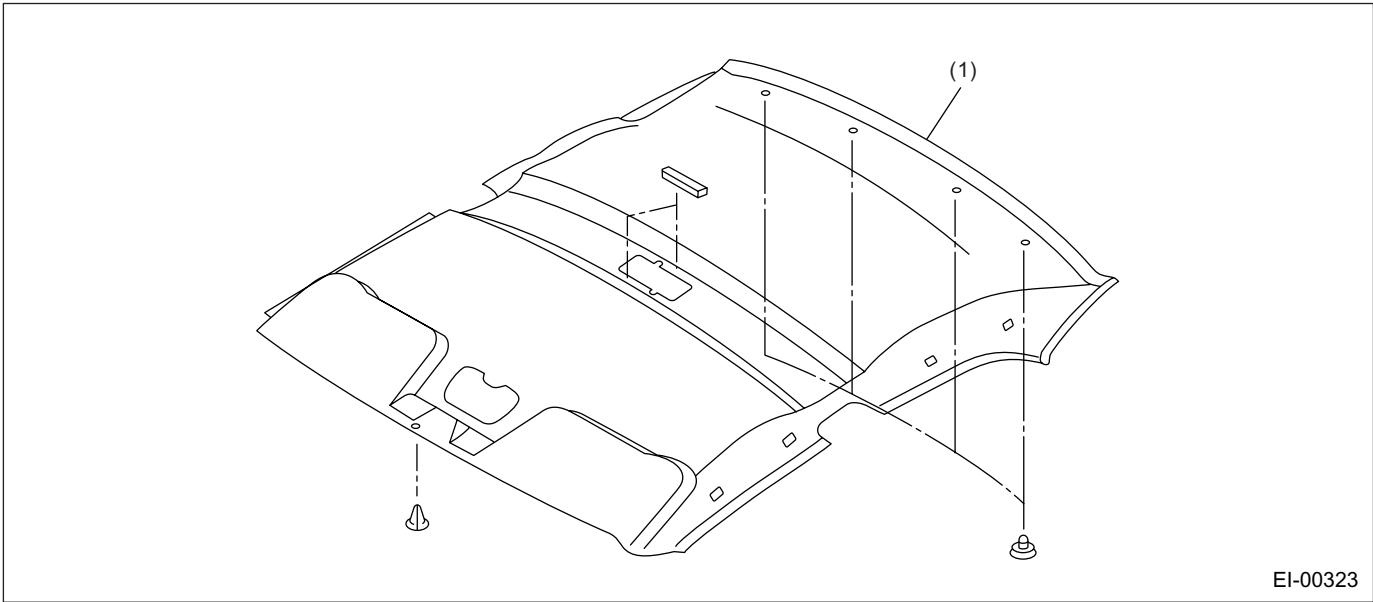


(1) Roof trim

18.ROOF TRIM (WAGON)

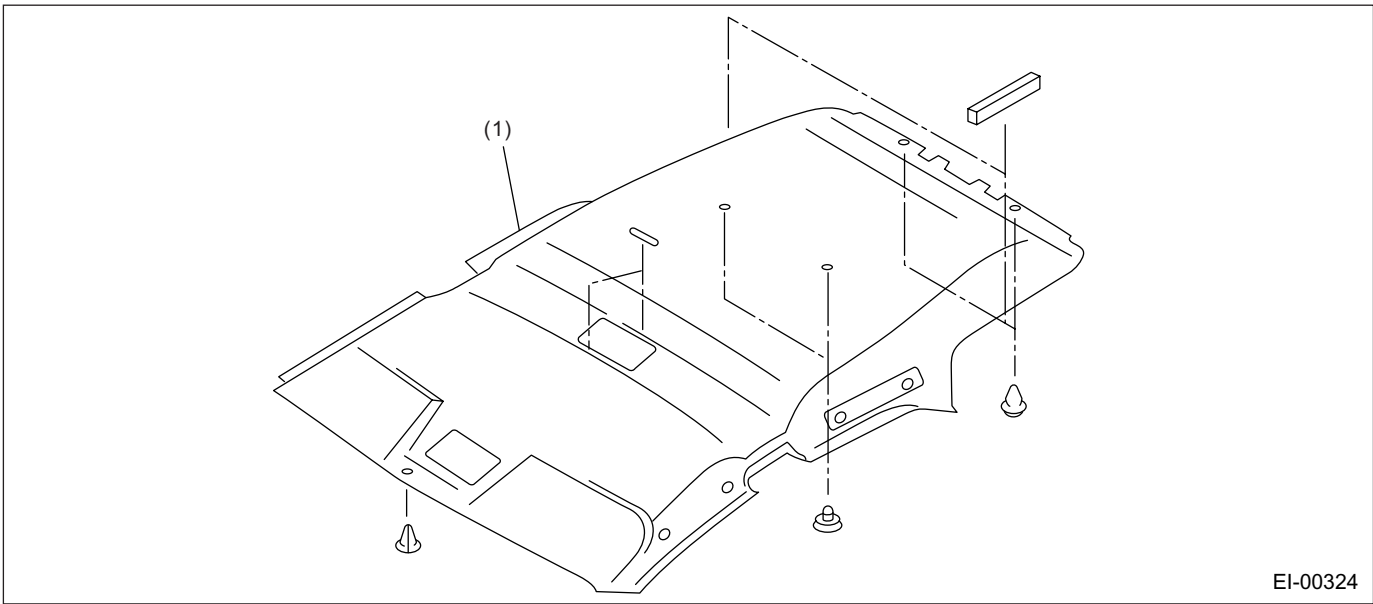

(1) Roof trim

19.LUGGAGE FLOOR MAT

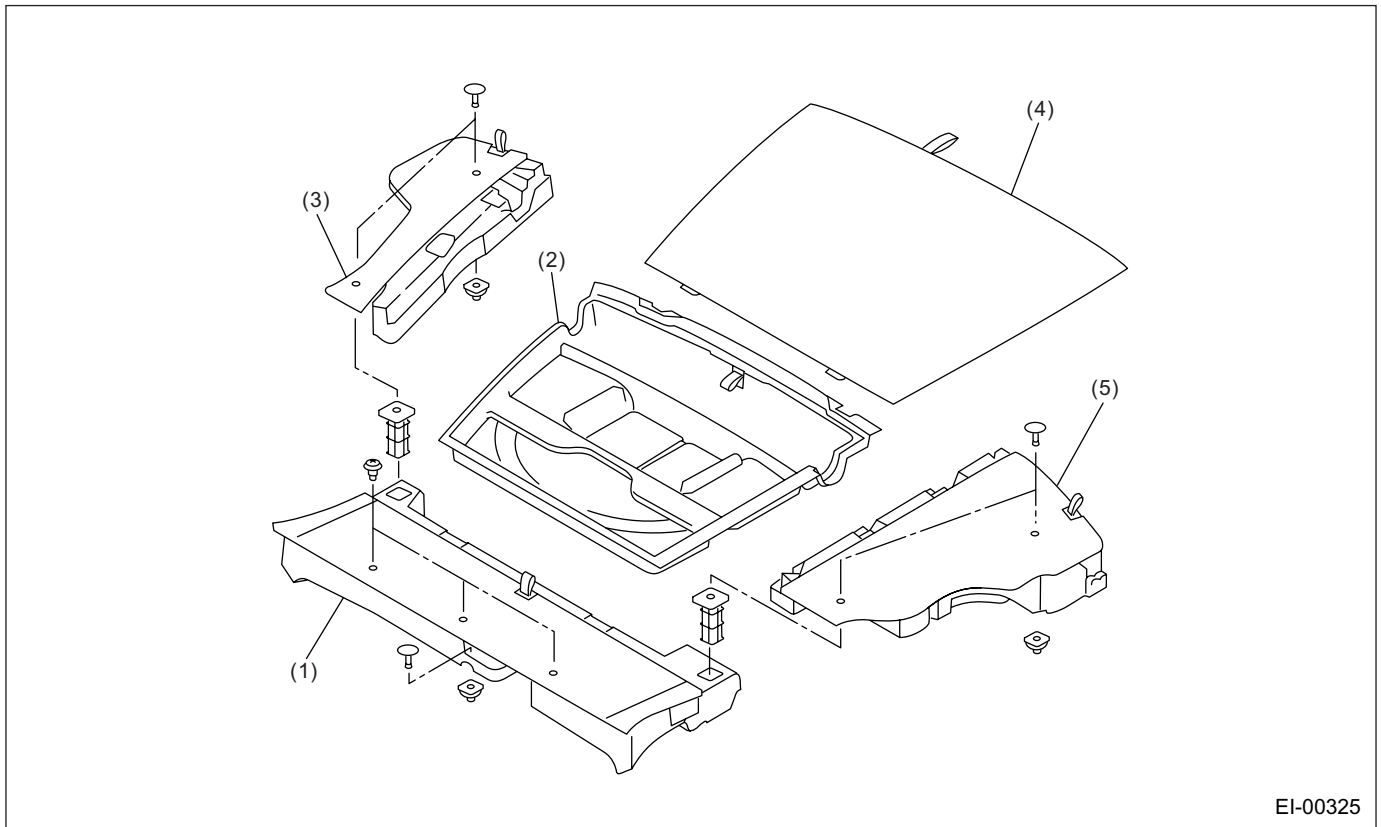

EI-00325

(1) Front floor mat
(2) Floor box

(3) Side floor mat (RH)
(4) Center floor mat

(5) Side floor mat (LH)

EXTERIOR/INTERIOR TRIM

This exploded view diagram illustrates the assembly of a mechanical component. The diagram includes the following parts and callouts:

- Callout (1):** Points to a bracket or support arm that is attached to the main assembly using two screws.
- Callout (2):** Points to a large, flat rectangular plate that is secured to the assembly with two screws.
- Callout (3):** Points to a complex bracket or support structure that is attached to the main assembly using two screws.

The diagram shows the relative positions and alignment of these components, with dashed lines indicating the paths of the screws used for assembly.

(3) Assist grip

TOOL NAME	REMARKS
Clip remover	Used for removal of trim.