


13. Rear Door Trim

A: REMOVAL


CAUTION:

Do not apply excessive force to the clip. Otherwise the clip may be broken.

- 1) Disconnect the ground terminal from battery.
- 2) Pull up the inner remote cover toward you to remove the upper hook. Pull down it to remove the lower hook. Remove the inner remote cover.

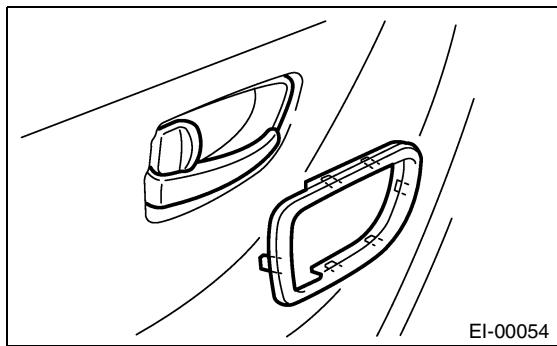


- 3) Remove the screw and clip.

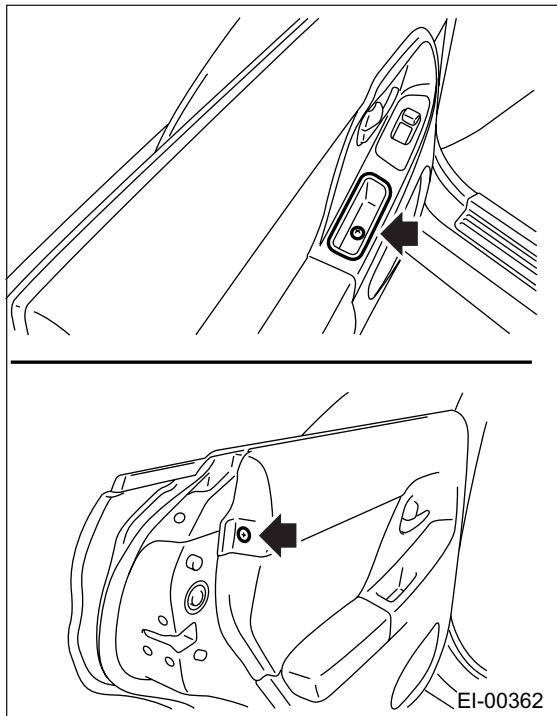

- 4) Remove the clips of trim panel using clip remover to remove the trim panel.

- 5) Disconnect the power window harness connector.

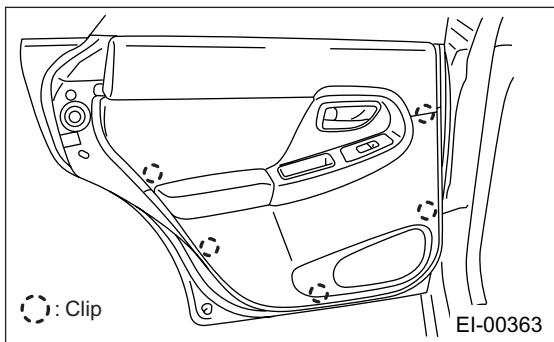

B: INSTALLATION

Install in the reverse order of removal.