


4. Rear Exhaust Pipe

A: REMOVAL


1) Separate the rear exhaust pipe from center exhaust pipe.

CAUTION:
Be careful, the exhaust pipe is hot.

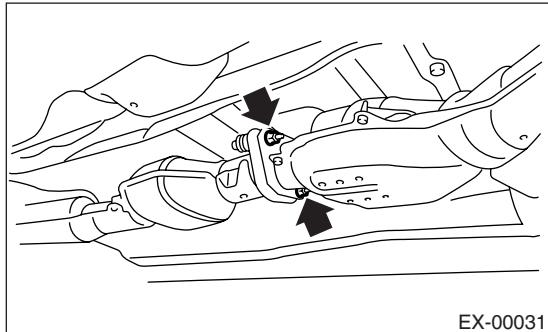

EX-00031

2) Separate the rear exhaust pipe from muffler.

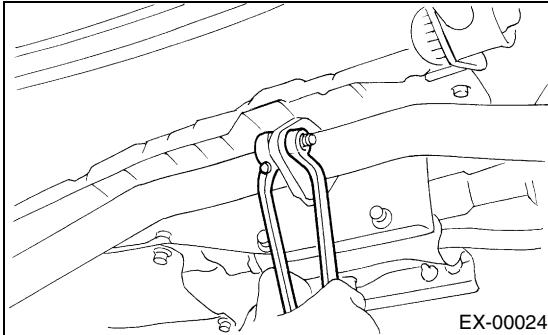


EX-00024

3) Apply a coat of SUBARU CRC to mating area of the cushion rubbers in advance.

SUBARU CRC (Part No. 004301003)

4) Remove the rear exhaust pipe bracket from the cushion rubber.

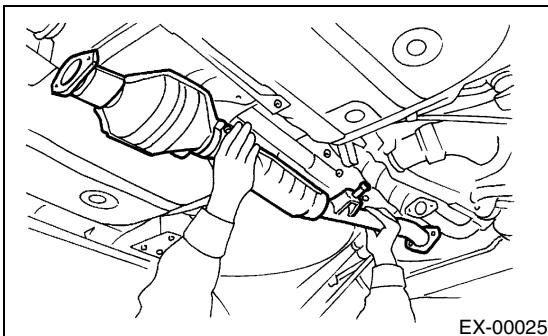


EX-00025

B: INSTALLATION

1) Apply a coat of SUBARU CRC to mating area of the cushion rubbers in advance.

SUBARU CRC (Part No. 004301003)


2) Install the rear exhaust pipe bracket to cushion rubber.

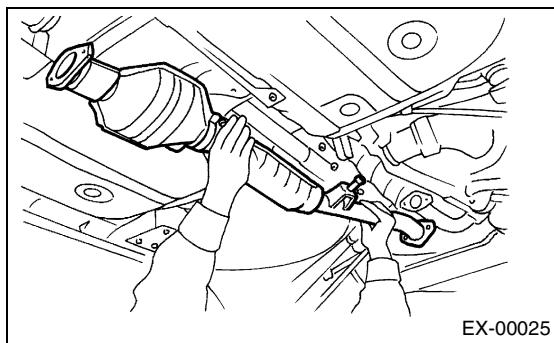

EX-00025

NOTE:
Replace the gaskets with new ones.
3) Install the rear exhaust pipe to muffler.


Tightening torque:
 $48 \text{ N}\cdot\text{m} (4.9 \text{ kgf-m}, 35.4 \text{ ft-lb})$

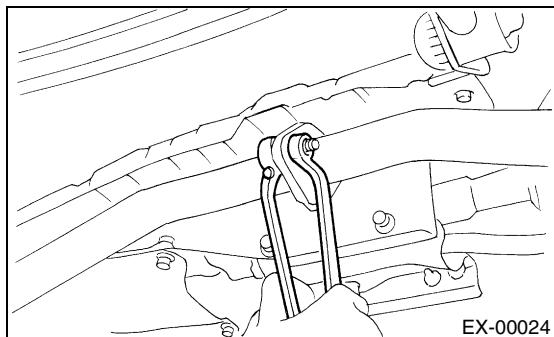

EX-00024

NOTE:
Replace the self-locking nuts with new ones.
4) Install the rear exhaust pipe to center exhaust pipe.

Tightening torque:
 $18 \text{ N}\cdot\text{m} (1.8 \text{ kgf-m}, 13.0 \text{ ft-lb})$

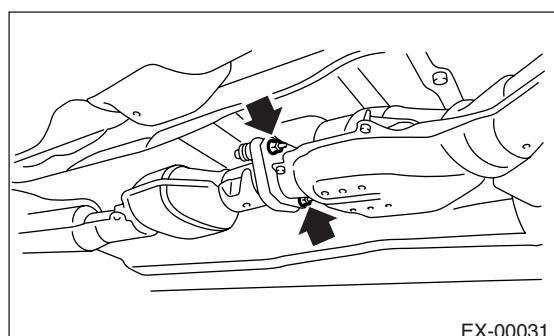

EX-00031

C: INSPECTION

- 1) Make sure there are no exhaust leaks from connections and welds.
- 2) Make sure there are no holes or rusting.
- 3) Make sure the cushion rubber is not worn or cracked.