


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT


1. FRONT GRILLE

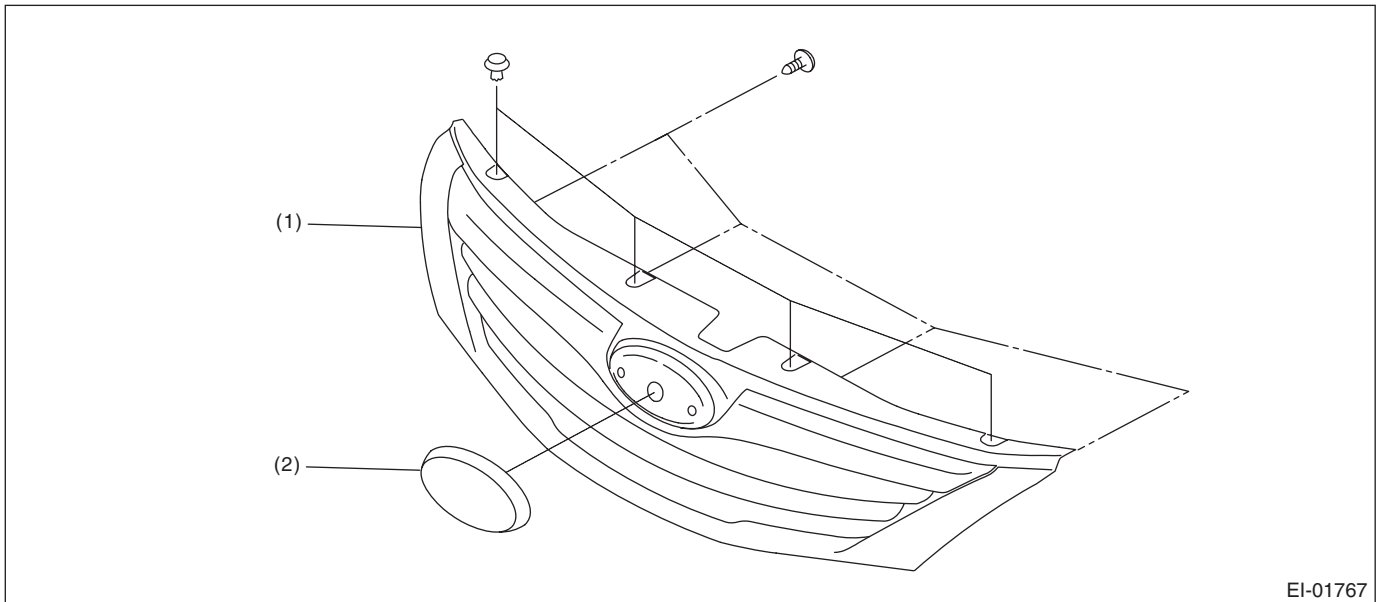

(1) Front grille ASSY

(2) Front grille emblem


2. UNDER COVER

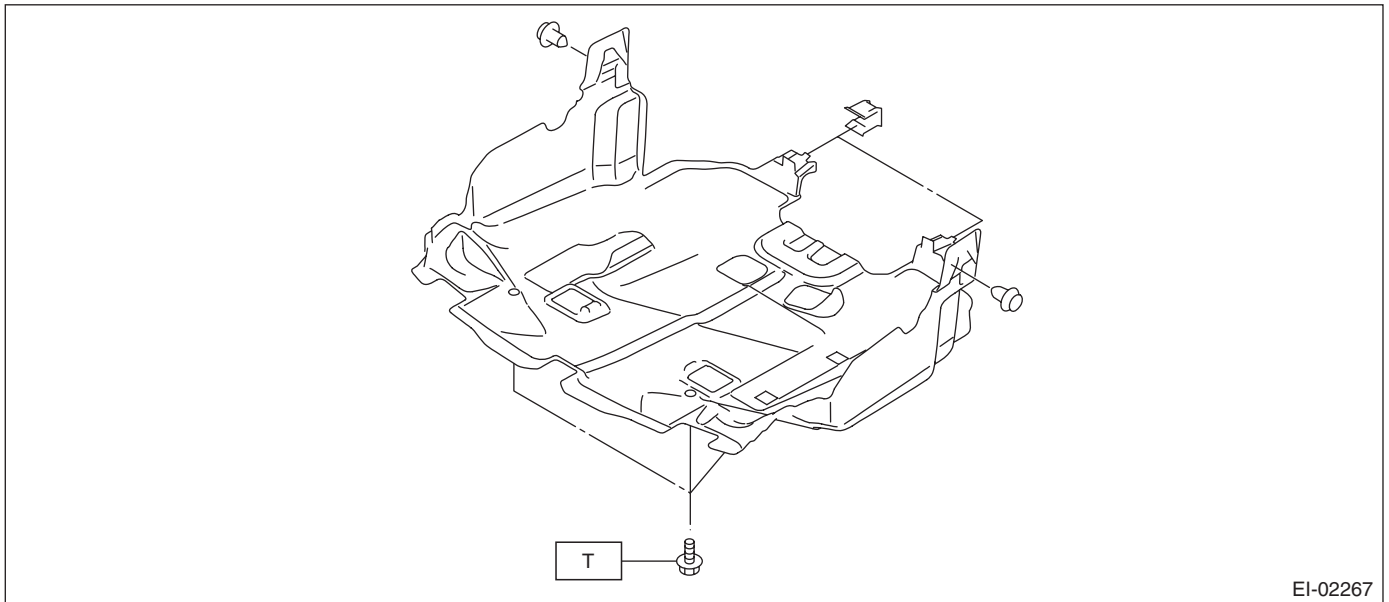

Tightening torque:N·m (kgf-m, ft-lb)

T: 18 (1.84, 13.3)

3. UNDER PROTECTOR

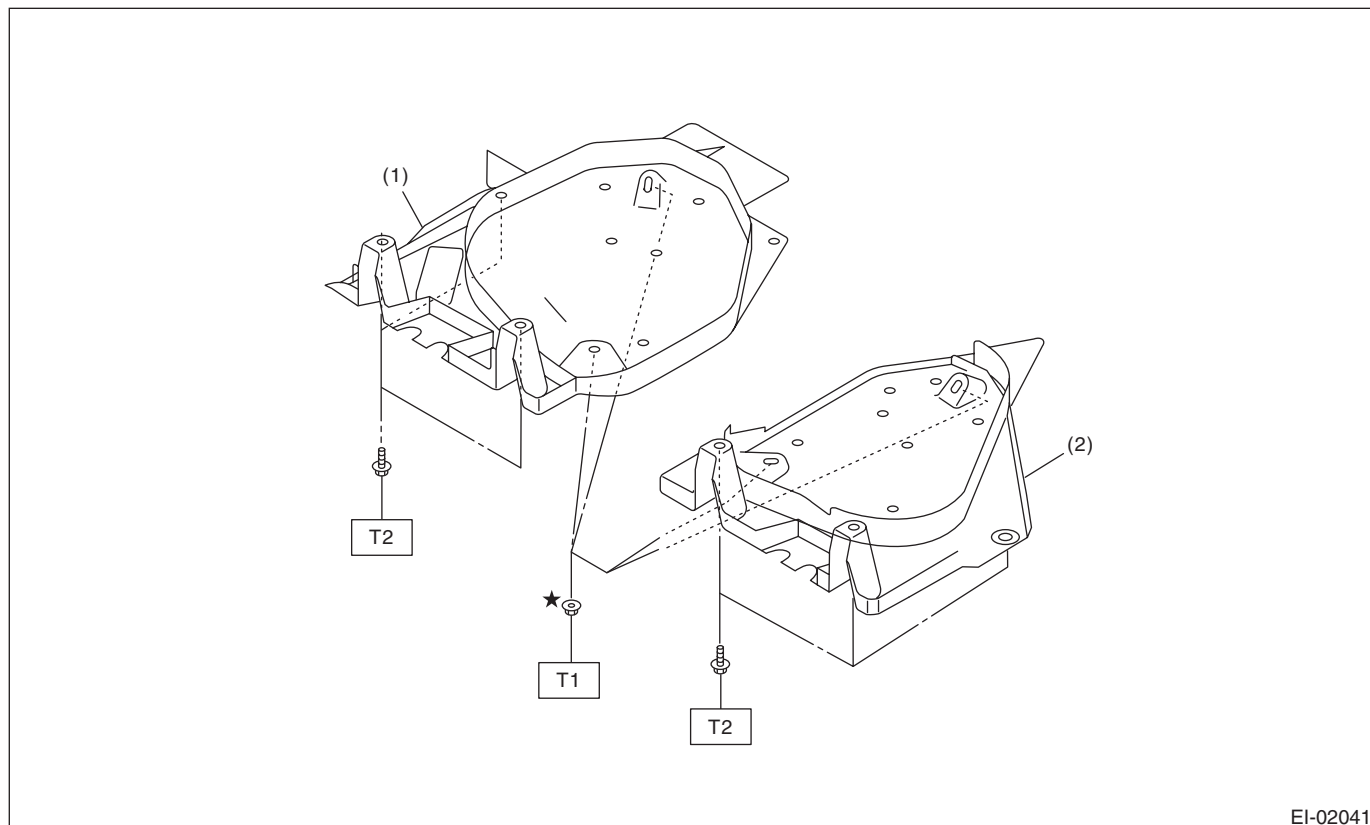

EI-02041

(1) Fuel tank protector RH

(2) Fuel tank protector LH

Tightening torque: N·m (kgf-m, ft-lb)


T1: 9 (0.92, 6.6)

T2: 18 (1.84, 13.3)

General Description

EXTERIOR/INTERIOR TRIM

4. FRONT HOOD GRILLE

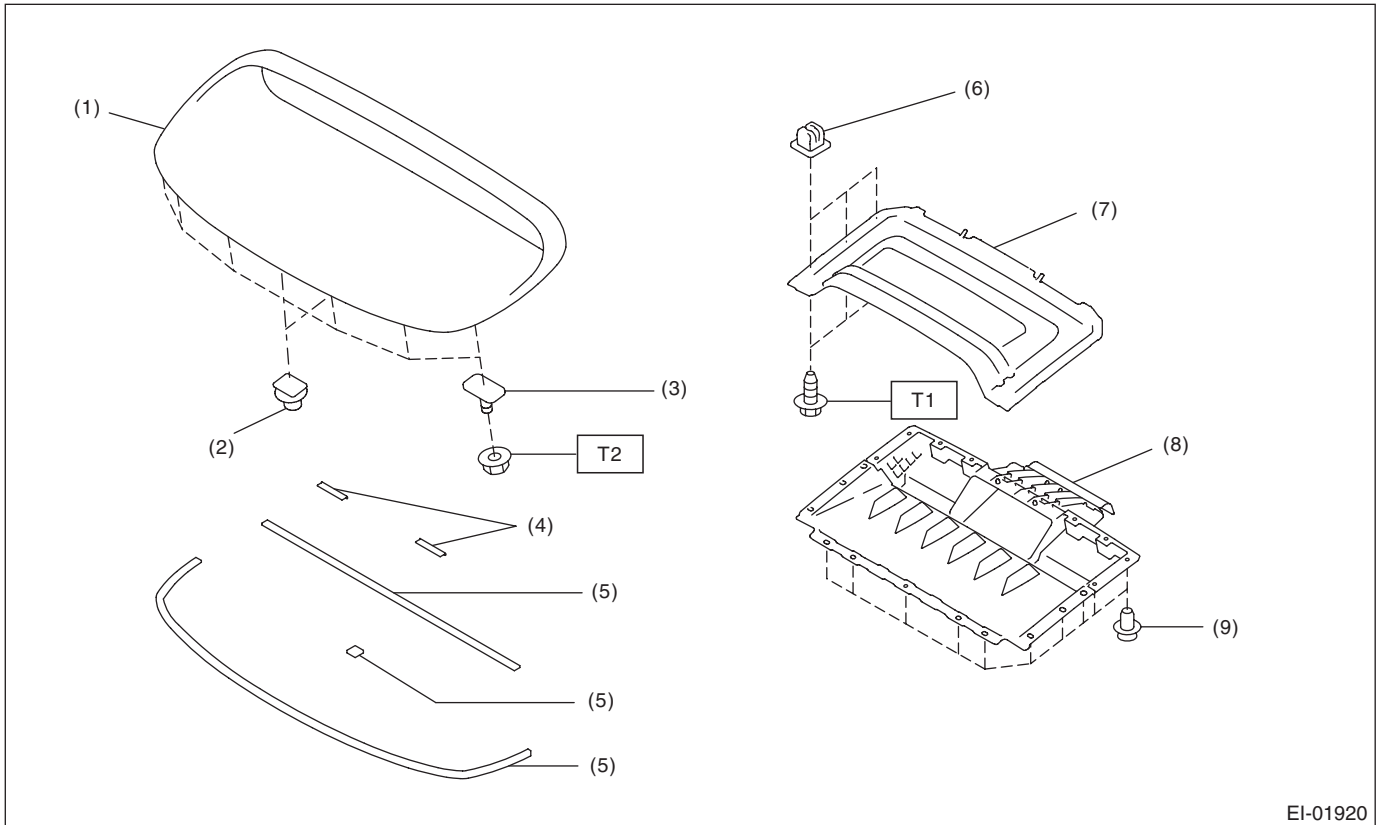


- | | |
|-----------------------|---------------------|
| (1) Front hood grille | (6) Grommet |
| (2) Clip anchor | (7) Hood duct |
| (3) Bolt | (8) Hood duct inner |
| (4) Protector | (9) Clip |
| (5) Gasket | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 1.0 (0.1, 0.7)

T2: 4.5 (0.46, 3.3)

5. FRONT BUMPER

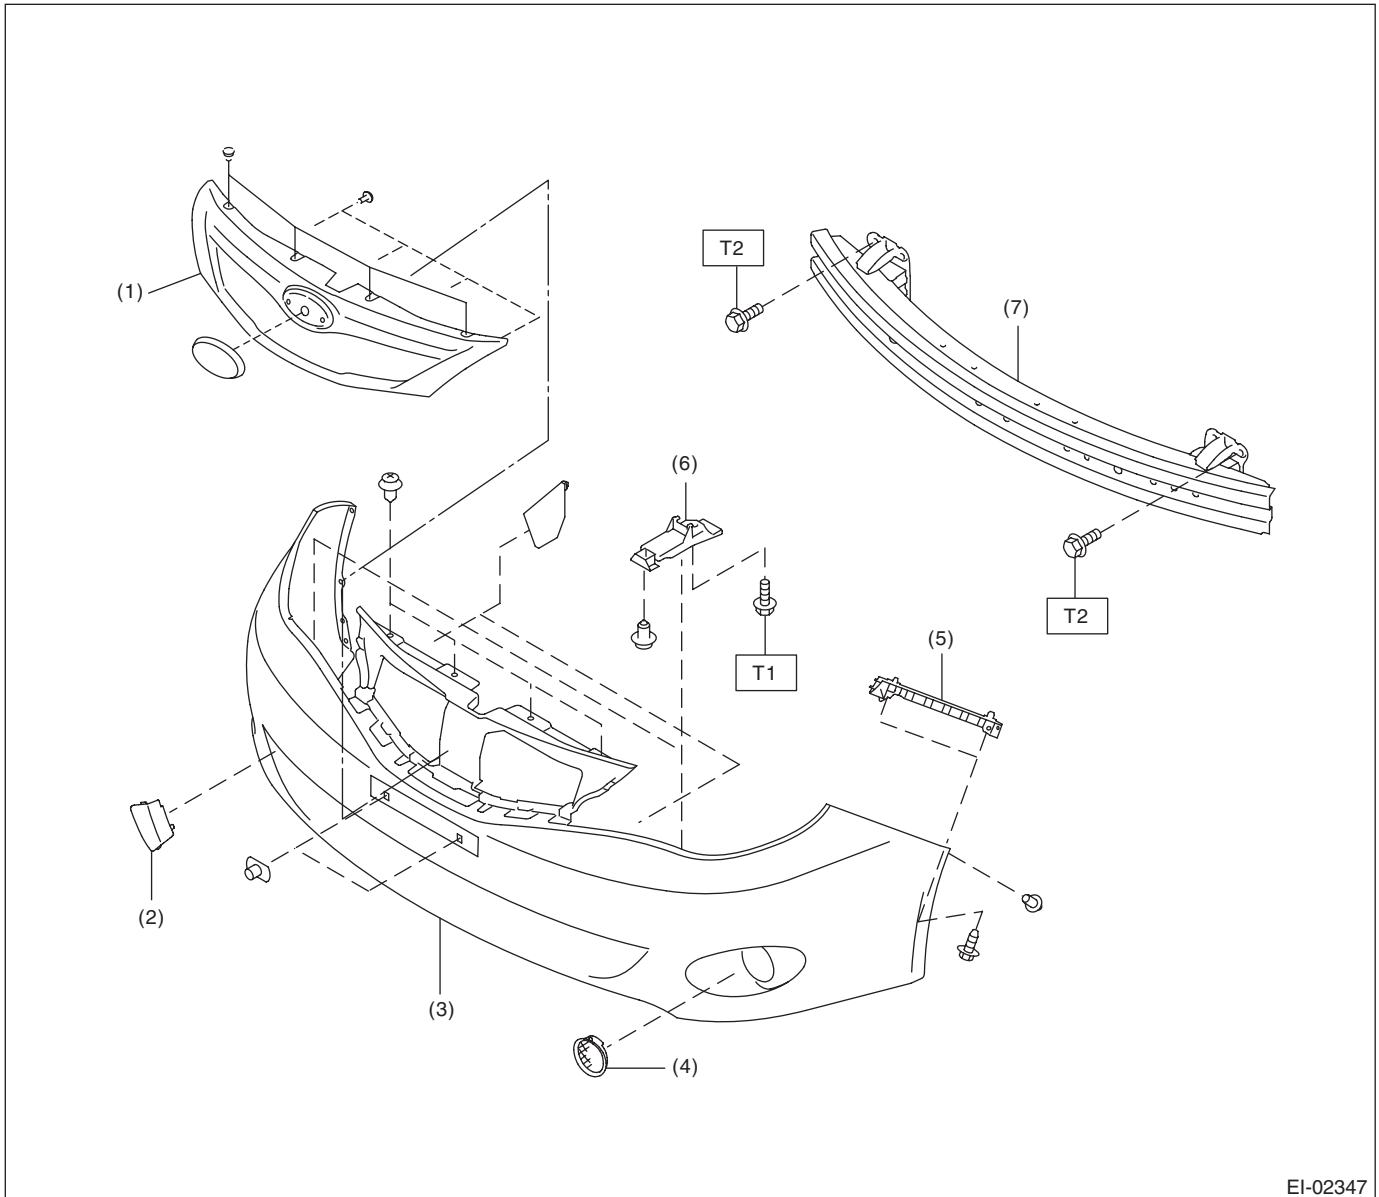

EI-02347

- (1) Front grille ASSY
- (2) Front hook cover
- (3) Bumper face
- (4) Fog light cover

- (5) Front side bracket
- (6) Front bracket center lower
- (7) Bumper beam reinforcement

Tightening torque: N·m (kgf-m, ft-lb)


T1: 7.5 (0.76, 5.5)

T2: 32 (3.26, 23.6)

General Description

EXTERIOR/INTERIOR TRIM

6. REAR BUMPER (5 DOOR MODEL)

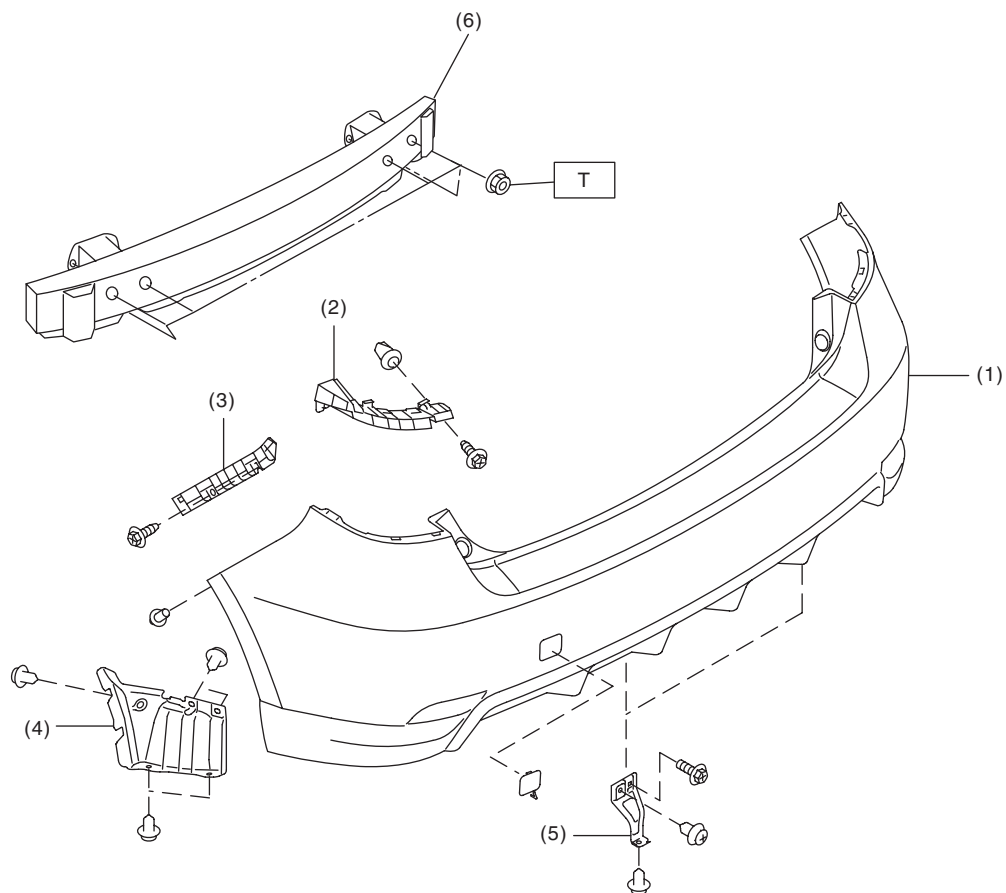


EI-02348

- | | |
|-------------------------|-------------------------------|
| (1) Bumper face | (4) Rear side cover lower |
| (2) Rear bracket corner | (5) Lower bracket |
| (3) Rear side bracket | (6) Bumper beam reinforcement |

Tightening torque: N·m (kgf-m, ft-lb)

T: 45 (4.59, 33.2)

7. REAR BUMPER (4 DOOR MODEL)

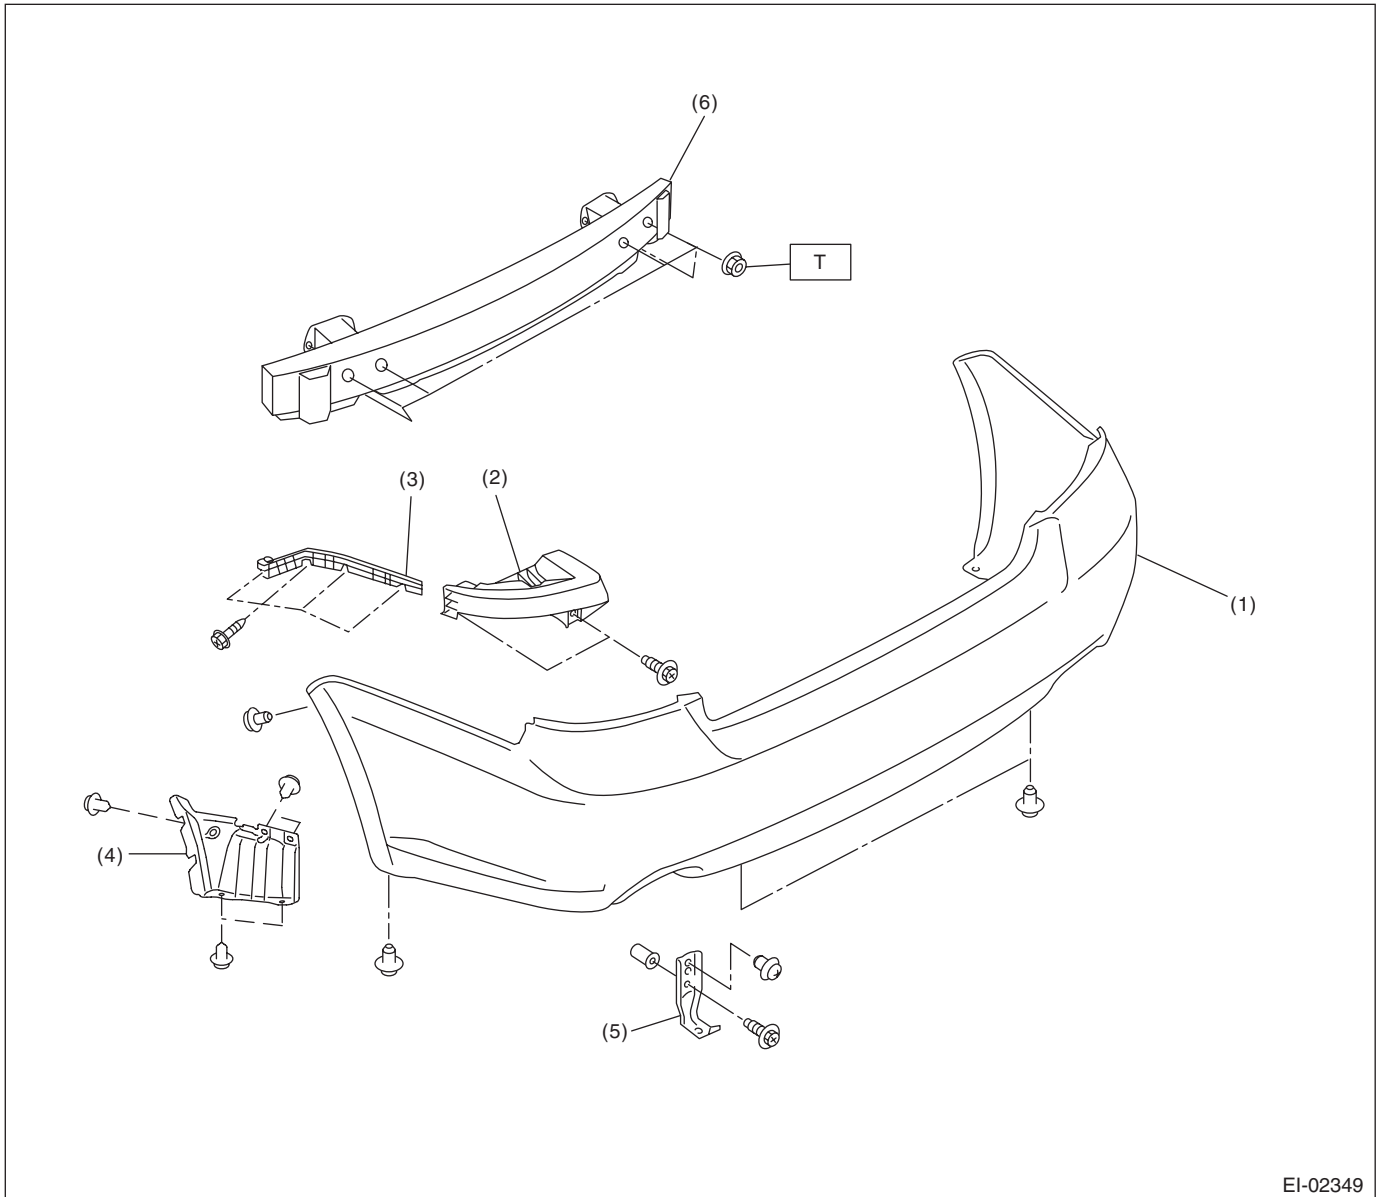

- | | |
|-------------------------|-------------------------------|
| (1) Bumper face | (4) Rear side cover lower |
| (2) Rear bracket corner | (5) Lower bracket |
| (3) Rear side bracket | (6) Bumper beam reinforcement |


Tightening torque: N·m (kgf-m, ft-lb)

T: 45 (4.59, 33.2)

General Description

EXTERIOR/INTERIOR TRIM

8. MUD GUARD

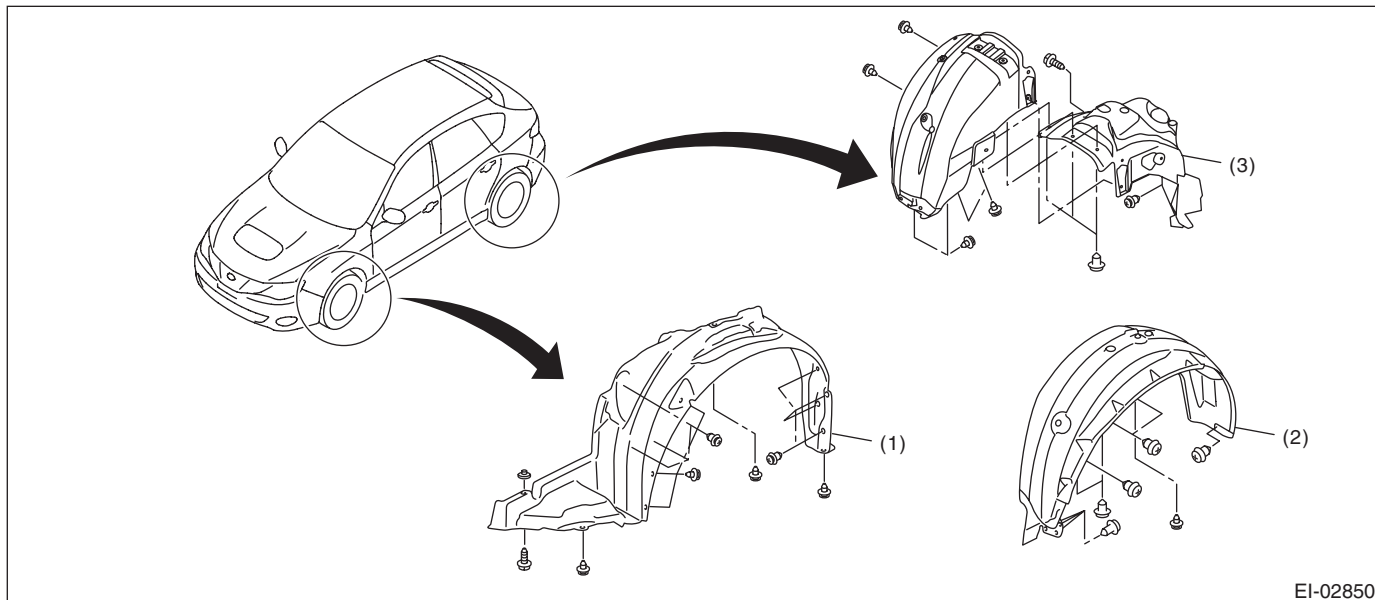


(1) Front mud guard

(2) Rear mud guard LH

(3) Rear mud guard RH

9. COWL PANEL

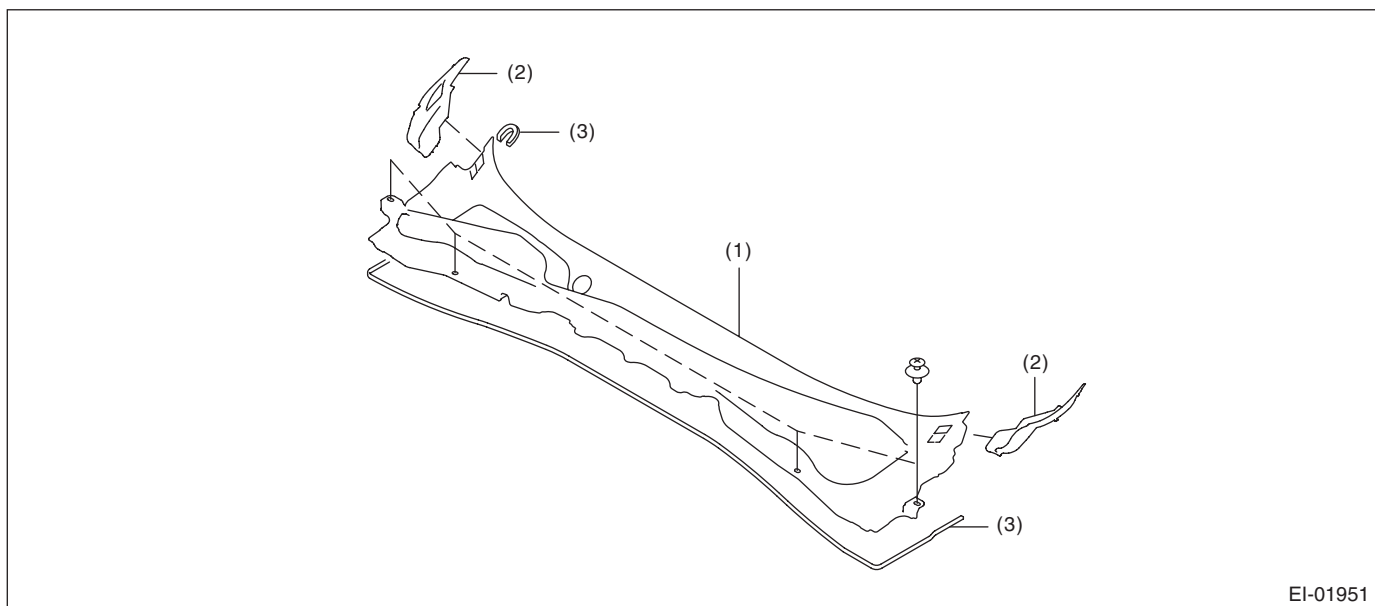


(1) Cowl panel

(2) Cowl panel side

(3) Gasket

10. ROOF SPOILER

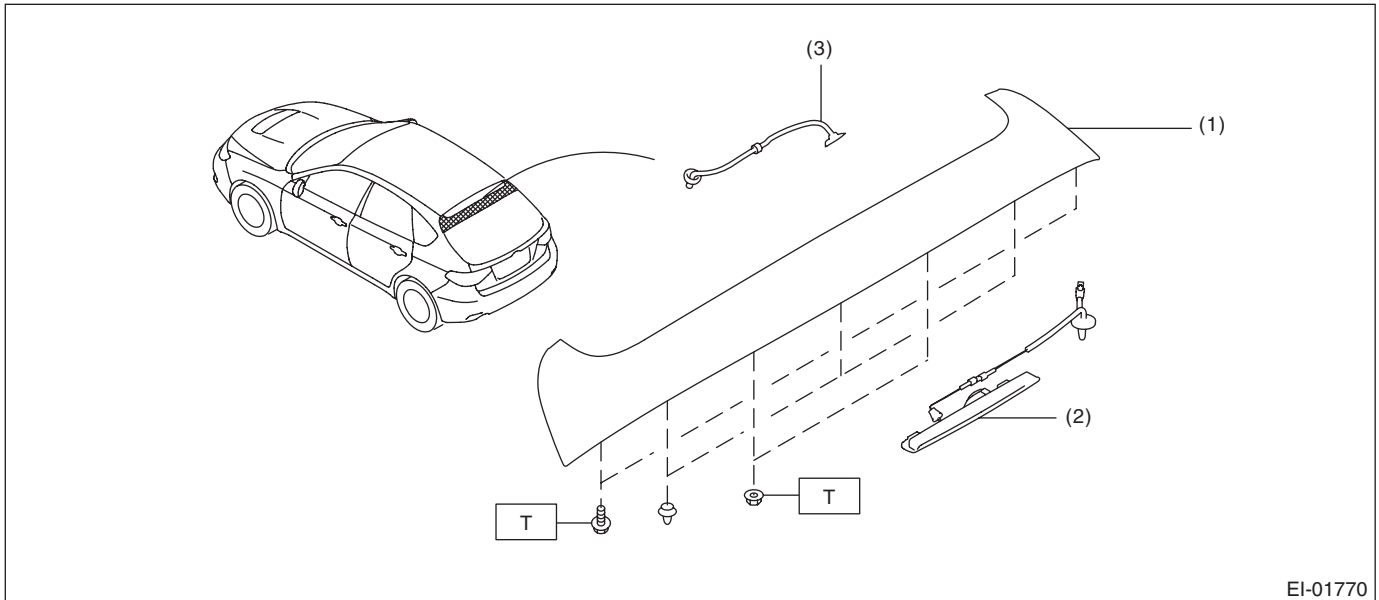

EI-01770


- (1) Roof spoiler
- (2) High-mounted stop light

- (3) Washer nozzle

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

11. REAR SPOILER

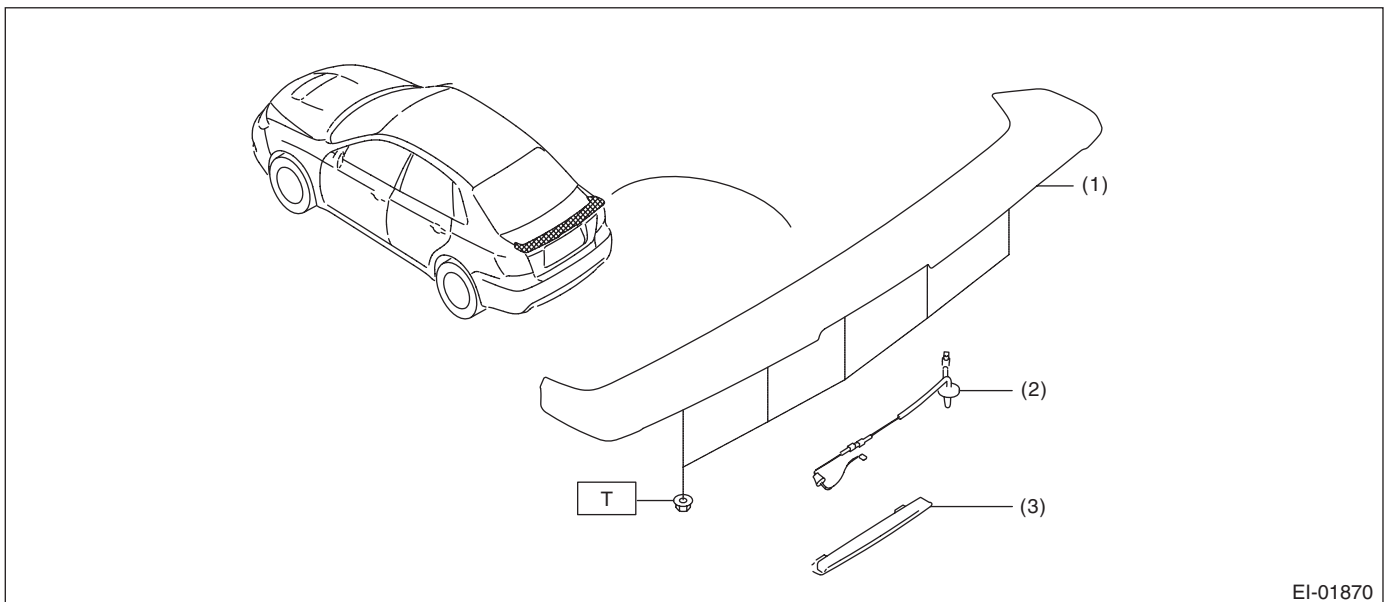

EI-01870

- (1) Rear spoiler
- (2) High mounted stop light
- (3) High mounted stop light harness

- (3) High mounted stop light


Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description


EXTERIOR/INTERIOR TRIM

12.SIDE SILL SPOILER

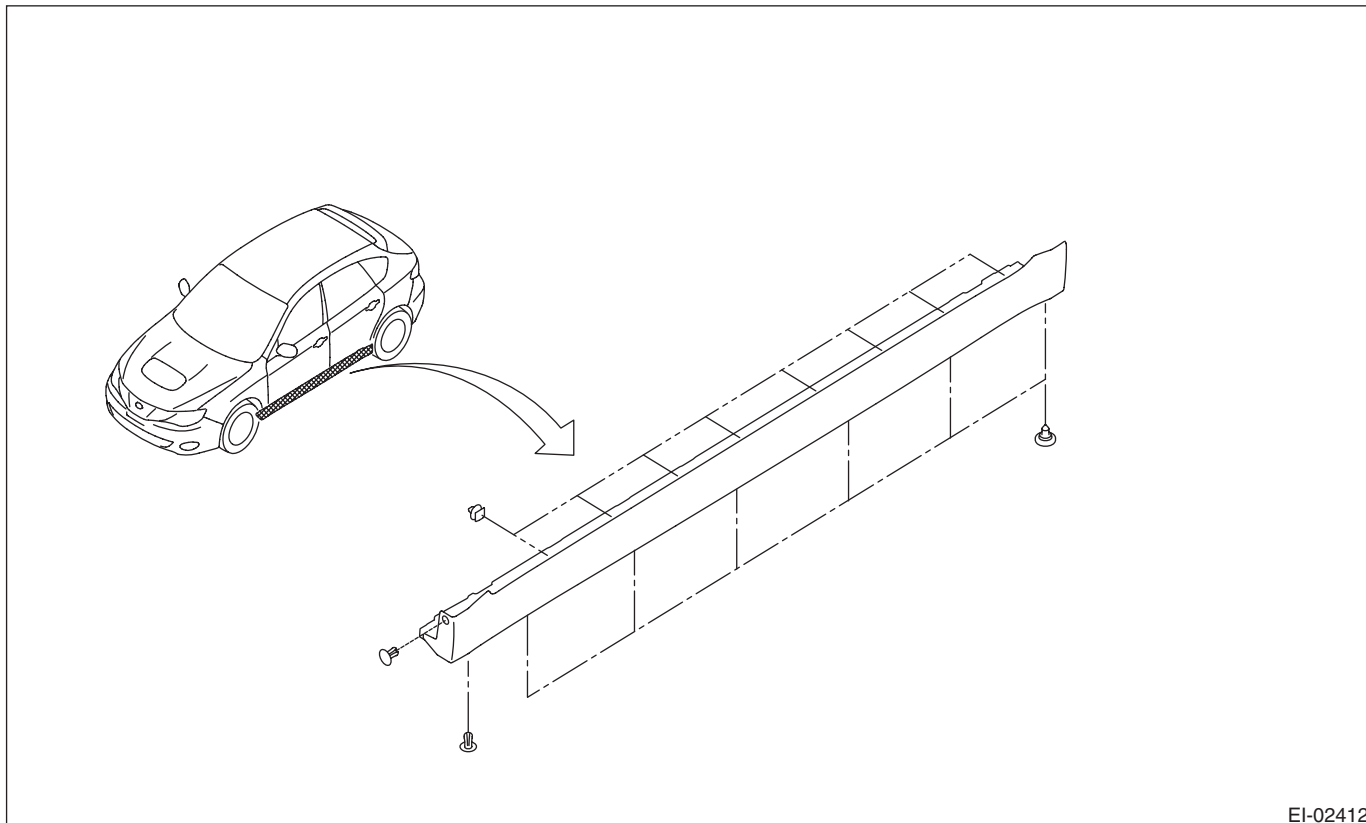

EI-02412

13.ROOF MOLDING

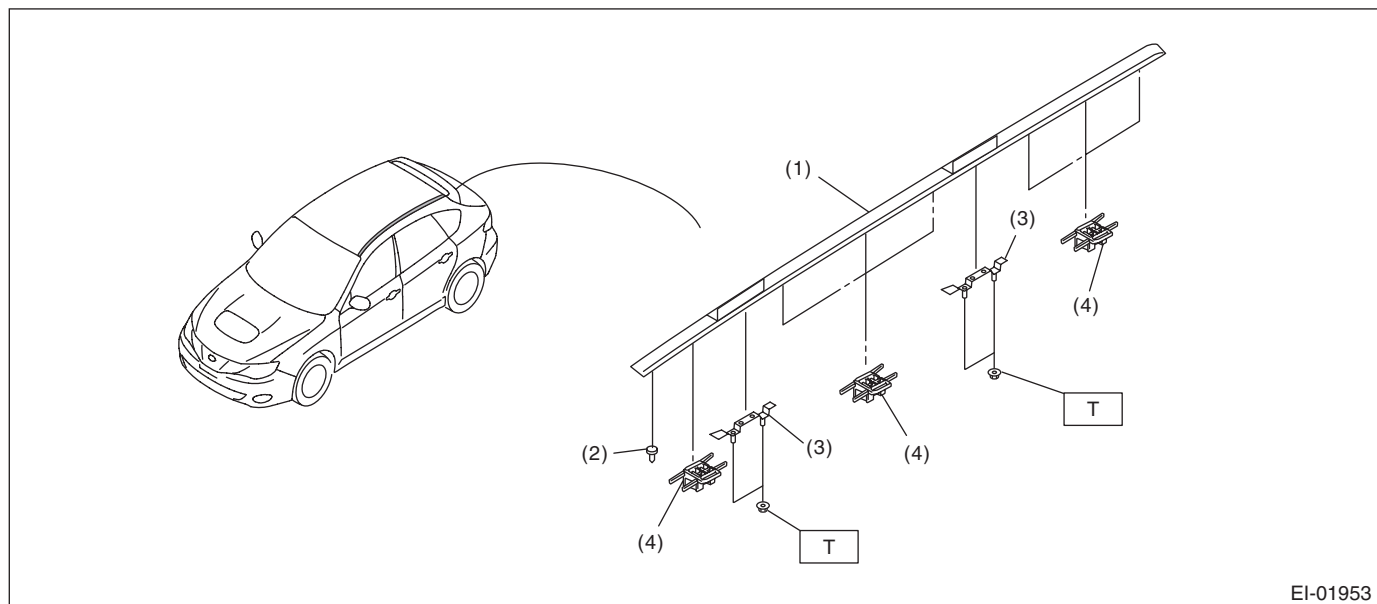


EI-01953

- (1) Roof molding
- (2) Rivet

- (3) Roof carrier attachment bracket
- (4) Clip

Tightening torque:N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

14.REAR GATE GARNISH

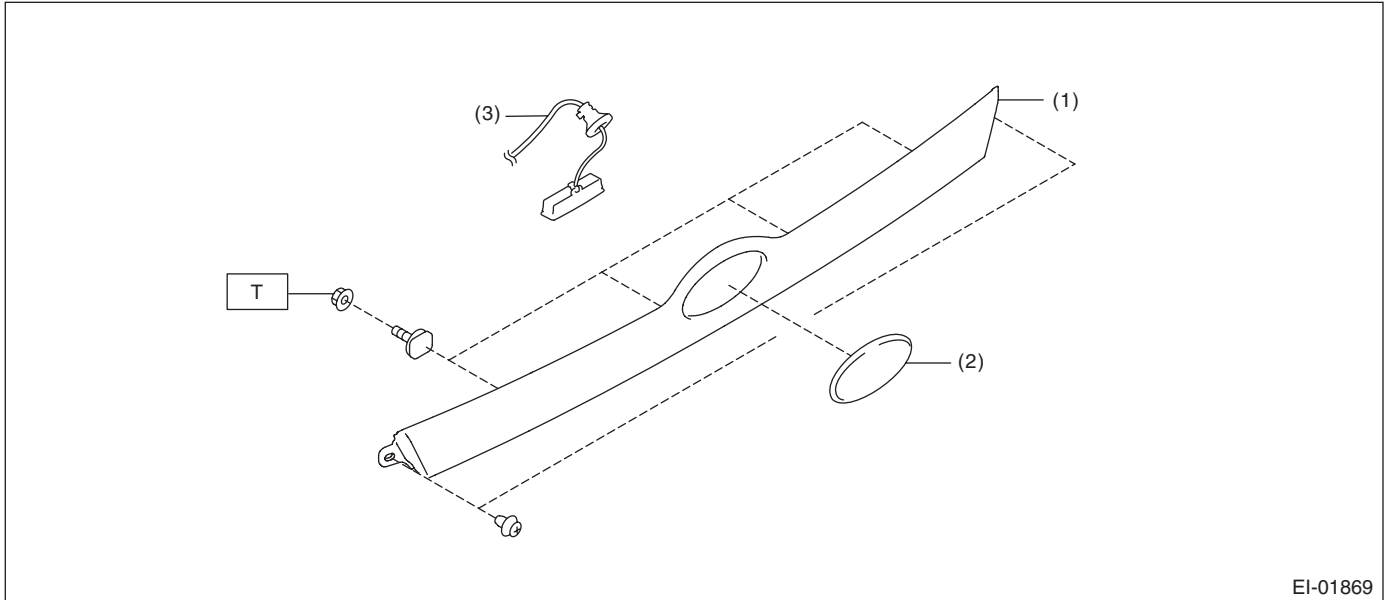


- (1) Rear gate garnish
- (2) Ornament

- (3) Rear gate opener button harness

Tightening torque:N·m (kgf-m, ft-lb)

T: 4.5 (0.46, 3.3)

15.TRUNK LID GARNISH

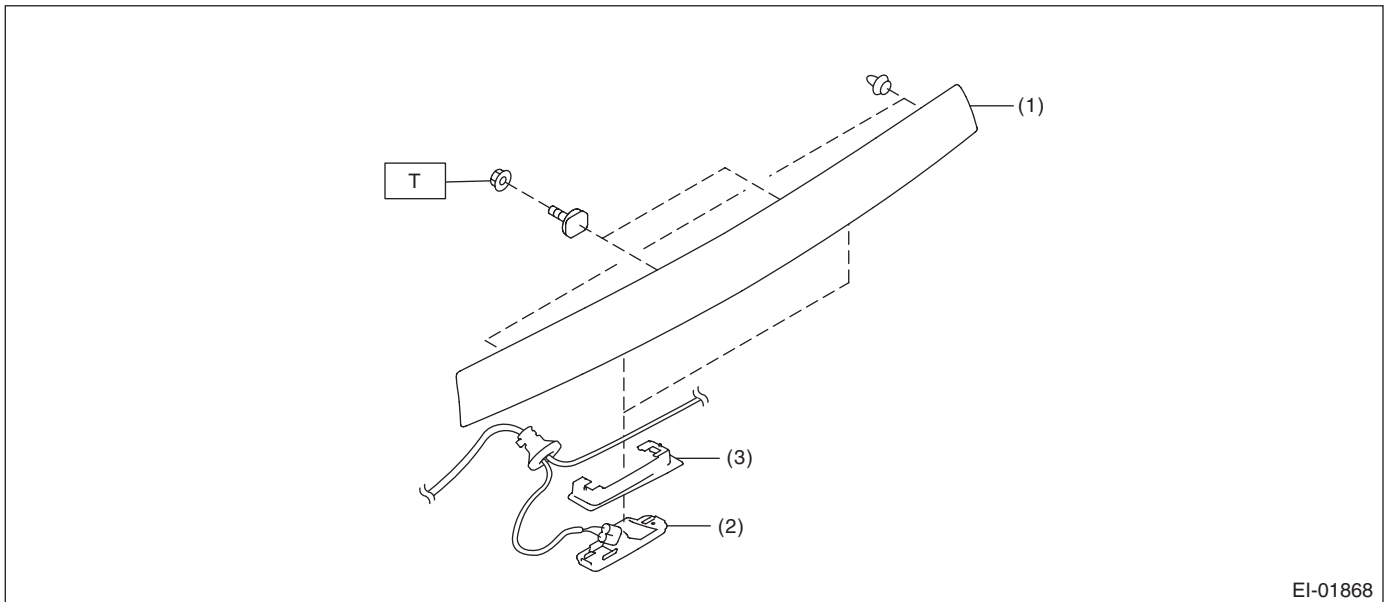

- (1) Rear gate garnish
- (2) License light ASSY

- (3) License light bracket


Tightening torque:N·m (kgf-m, ft-lb)

T: 4.5 (0.46, 3.3)

General Description

EXTERIOR/INTERIOR TRIM


16.DOOR TRIM

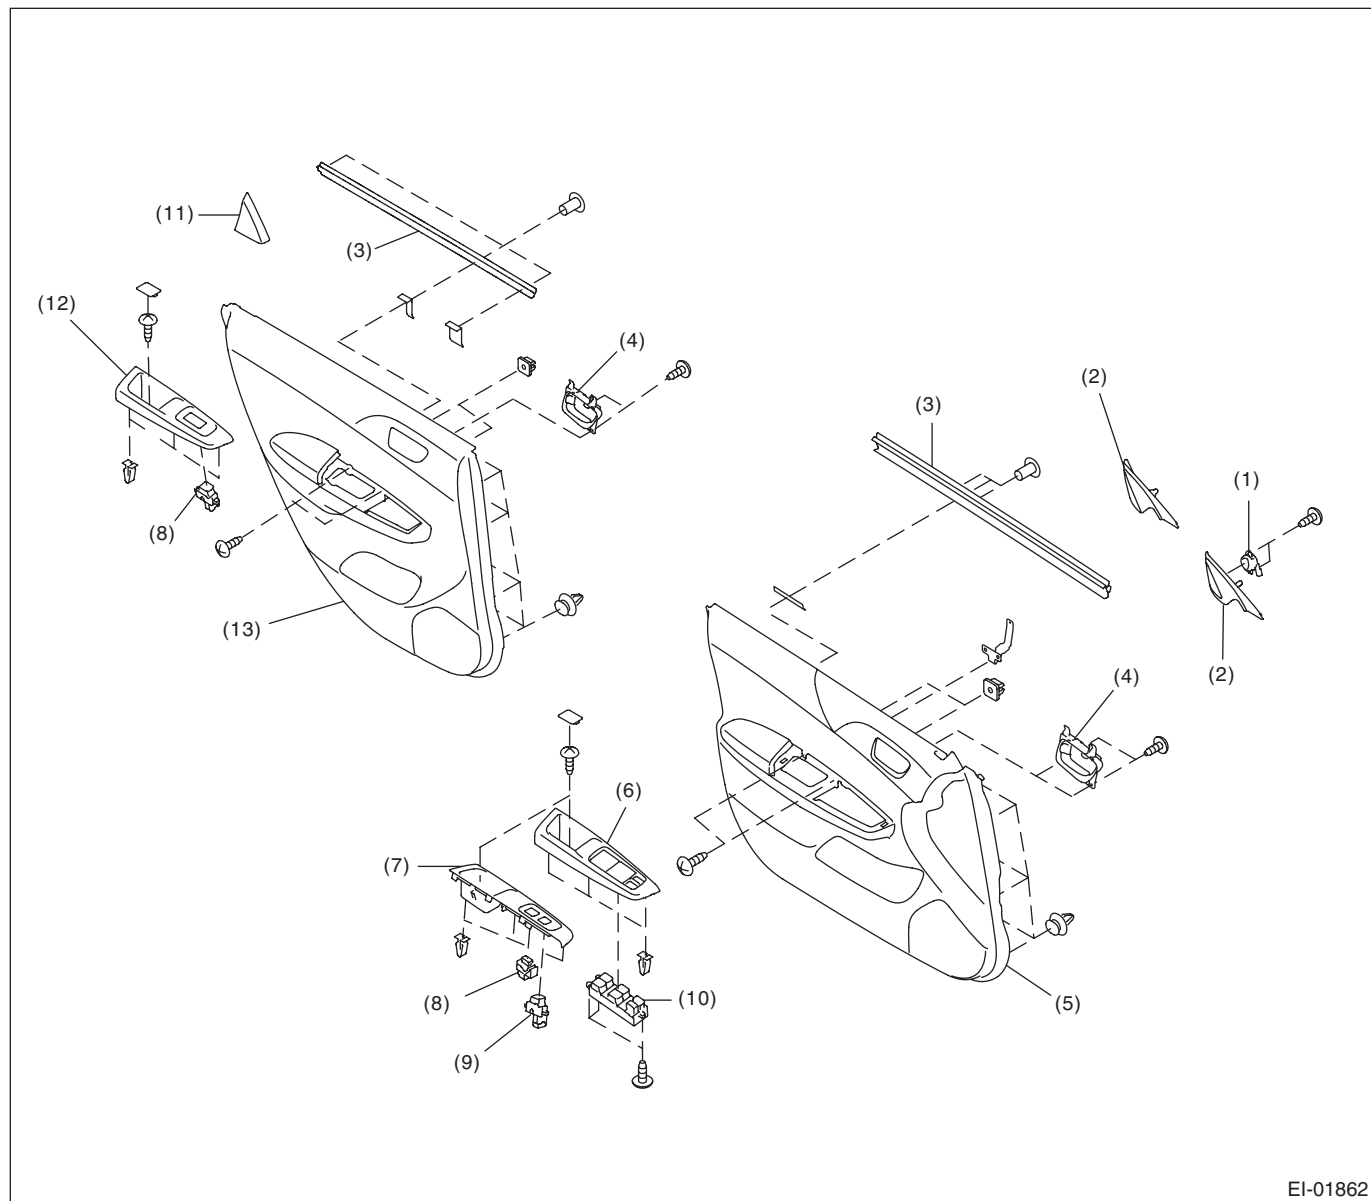

EI-01862

- | | | |
|-------------------------|--|-------------------------------------|
| (1) Tweeter | (6) Power window switch panel front LH | (11) Gusset cover rear |
| (2) Gusset cover front | (7) Power window switch panel front RH | (12) Power window switch panel rear |
| (3) Upper weather strip | (8) Power window sub-switch | (13) Rear door trim |
| (4) Inner remote | (9) Door lock switch | |
| (5) Front door trim | (10) Power window main switch ASSY | |

17.CONSOLE BOX

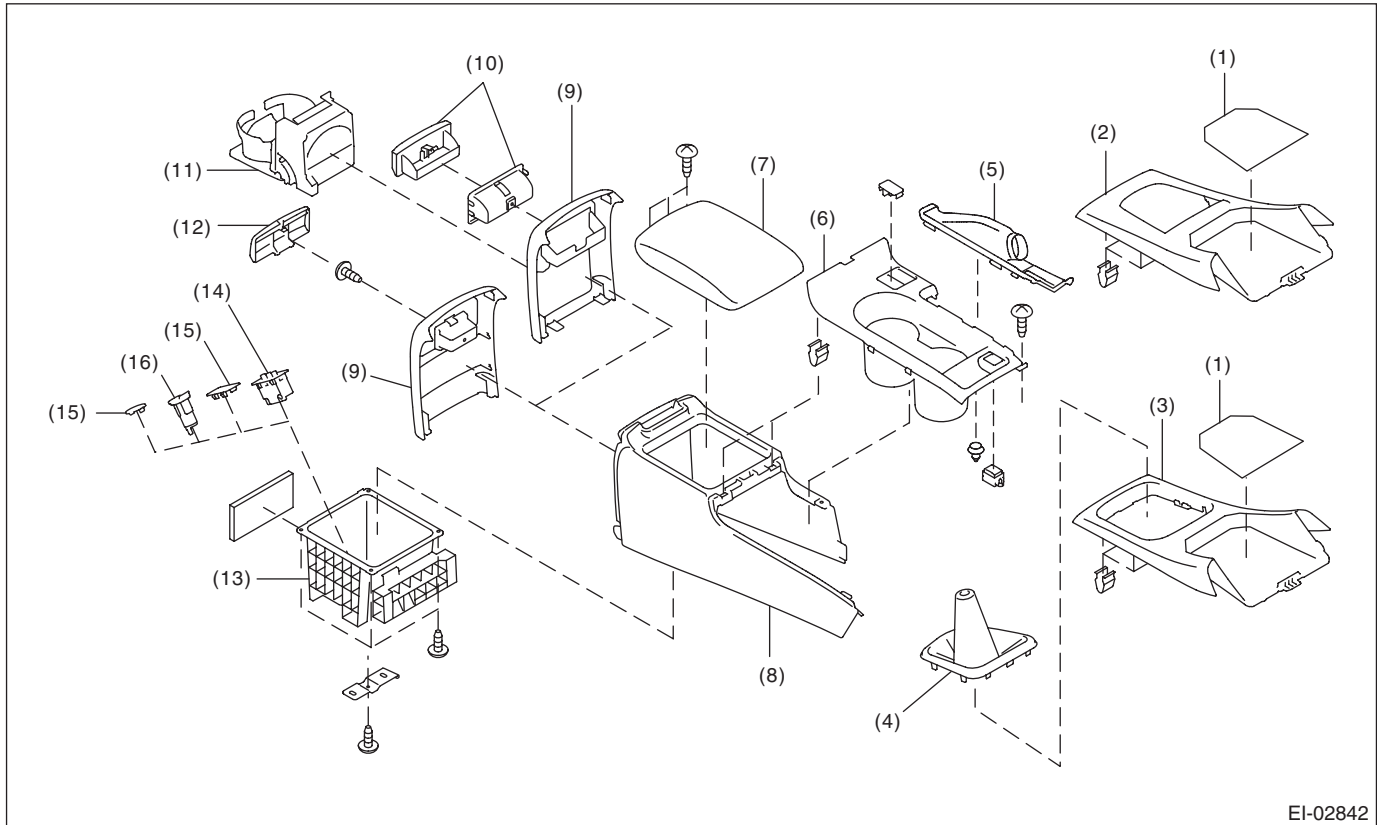


EI-02842

- | | | |
|------------------------------------|---------------------------|------------------------------------|
| (1) Front cover mat | (7) Upper lid | (12) Console box end cap |
| (2) Console front panel (AT model) | (8) Console box outer | (13) Console pocket |
| (3) Console front panel (MT model) | (9) Console box end cover | (14) AUX input terminal |
| (4) Shift boot | (10) Ash tray | (15) Cap |
| (5) Parking brake lever boot | (11) Rear cup holder | (16) Accessory power supply socket |
| (6) Console cover | | |

General Description


EXTERIOR/INTERIOR TRIM

18.INSTRUMENT PANEL

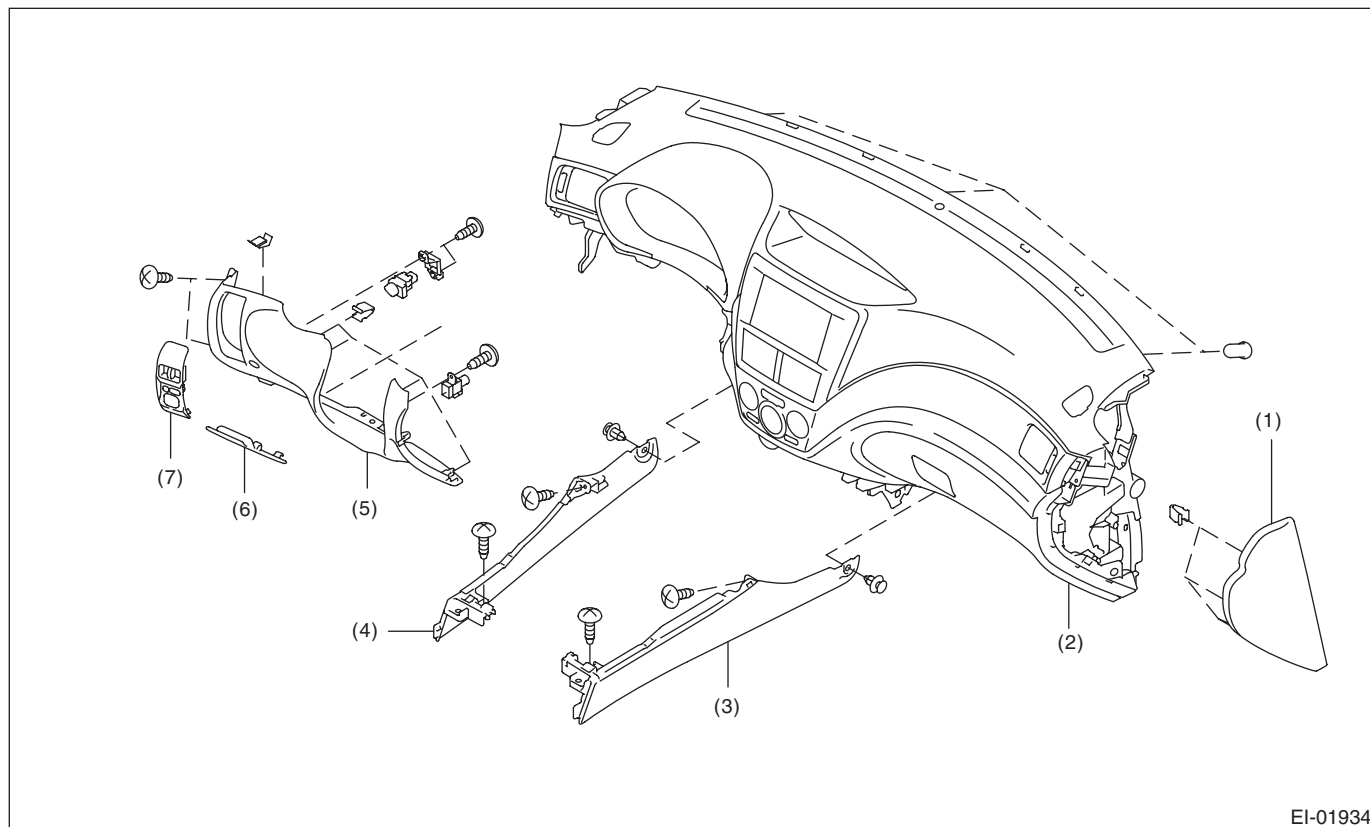

EI-01934

- | | | |
|---------------------------------|----------------------------------|-----------------------|
| (1) Instrument panel side cover | (4) Console side panel LH | (7) Switch panel ASSY |
| (2) Instrument panel ASSY | (5) Instrument panel lower cover | |
| (3) Console side panel RH | (6) Fuse box lid | |

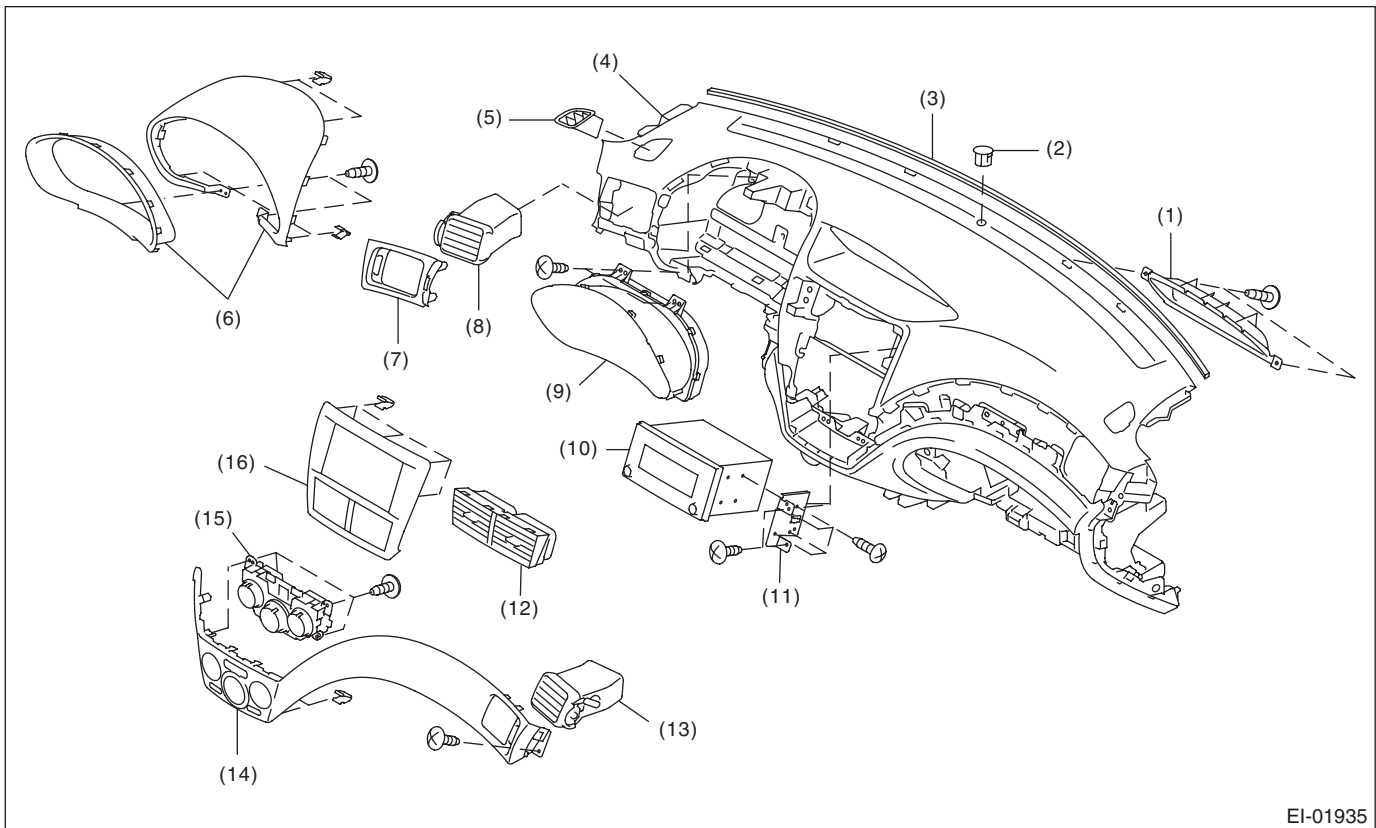


EI-01935

- | | | |
|---------------------------|-----------------------------|------------------------------|
| (1) Clock panel | (7) Ornament panel LH | (13) Air vent side grille RH |
| (2) Sunload sensor | (8) Air vent side grille LH | (14) Ornament panel RH |
| (3) Cushion | (9) Combination meter ASSY | (15) Control module |
| (4) Instrument panel ASSY | (10) Audio | (16) Center panel |
| (5) Defroster side grille | (11) Audio bracket | |
| (6) Meter visor ASSY | (12) Air vent grille CTR | |

General Description

EXTERIOR/INTERIOR TRIM

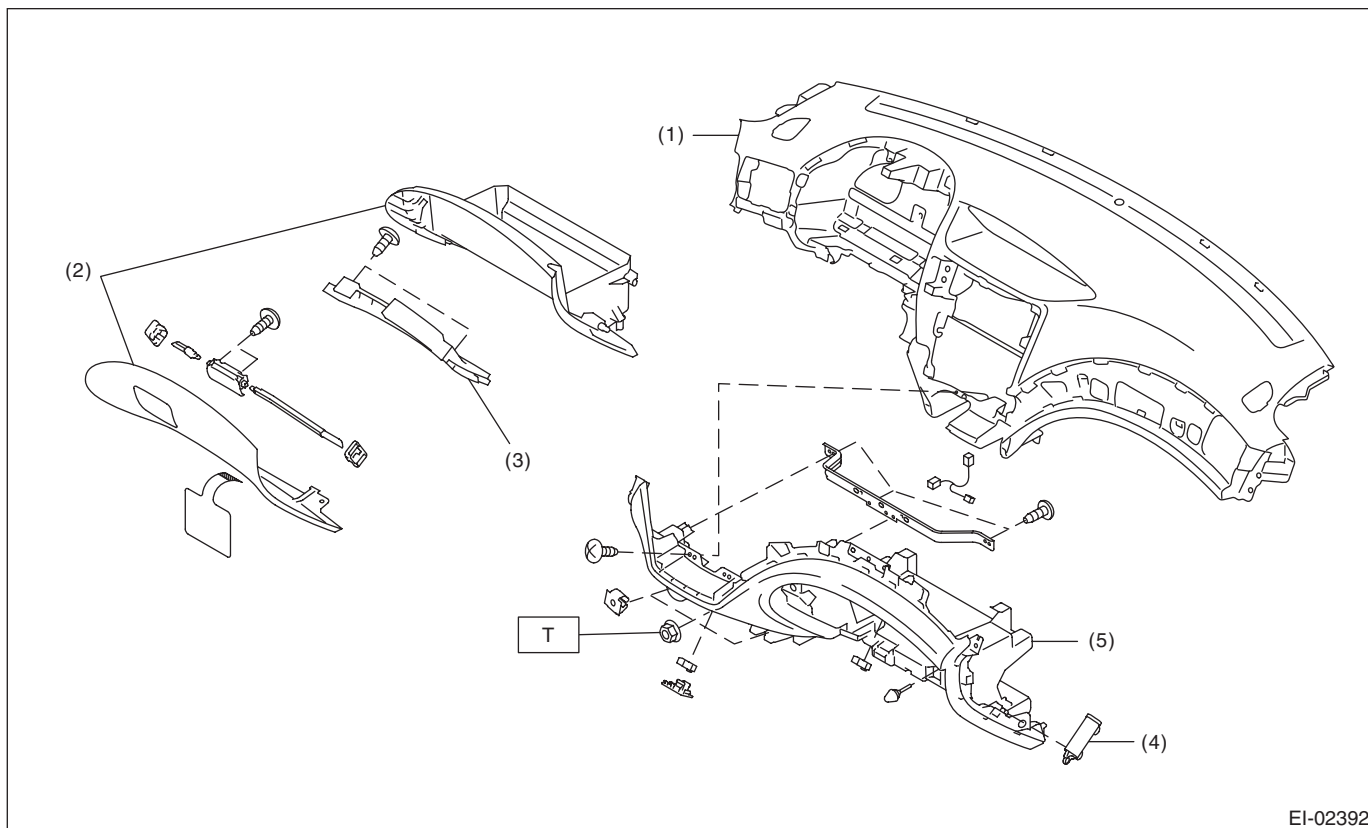

(1) Instrument panel pad and frame
ASSY

(2) Glove box lid ASSY


(3) Glove box pad

(4) Glove box damper

(5) Instrument panel lower

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

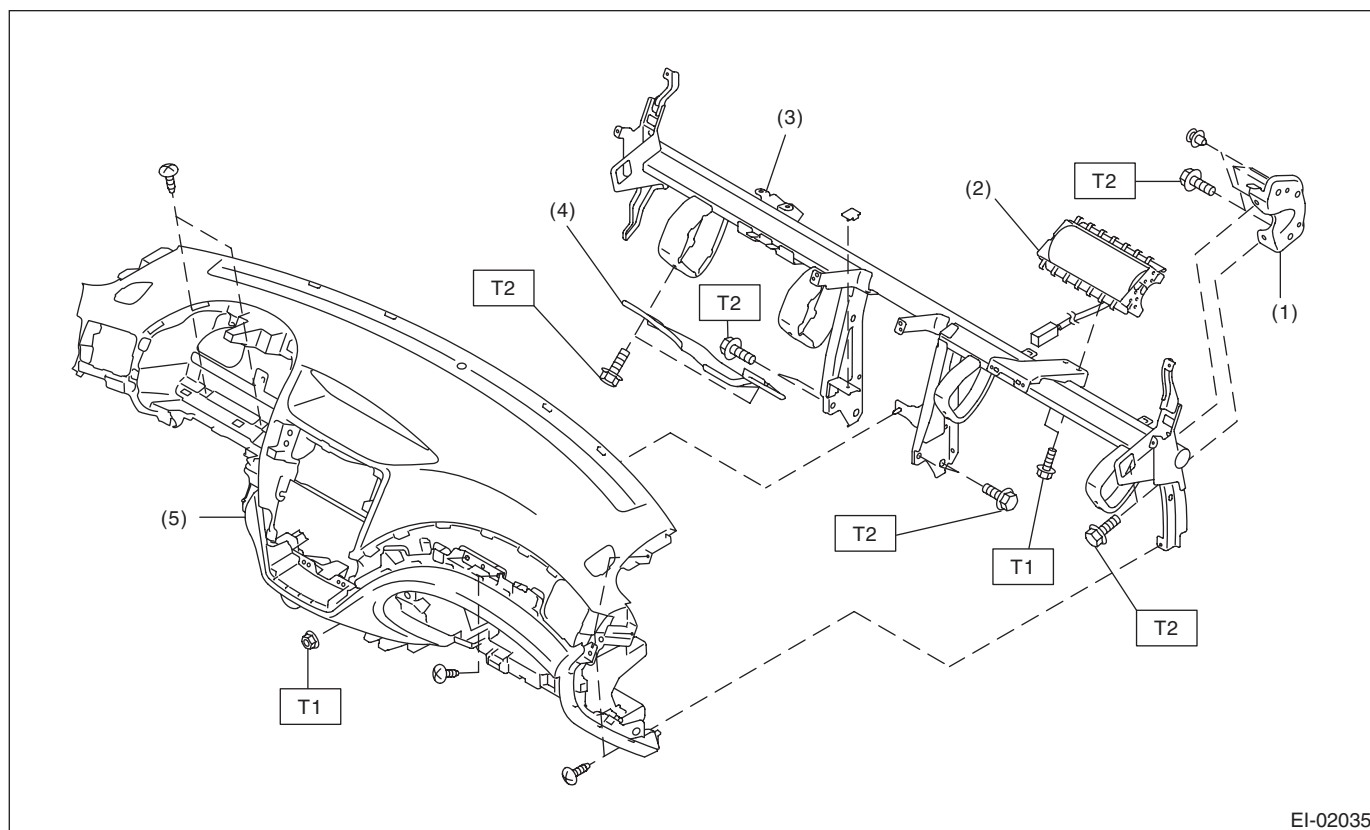

EI-02035

- | | |
|------------------------------------|---------------------------|
| (1) Steering support beam bracket | (4) Knee guard panel |
| (2) Passenger's airbag module ASSY | (5) Instrument panel ASSY |
| (3) Steering support beam ASSY | |


Tightening torque: N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 25 (2.55, 18.4)

General Description


EXTERIOR/INTERIOR TRIM

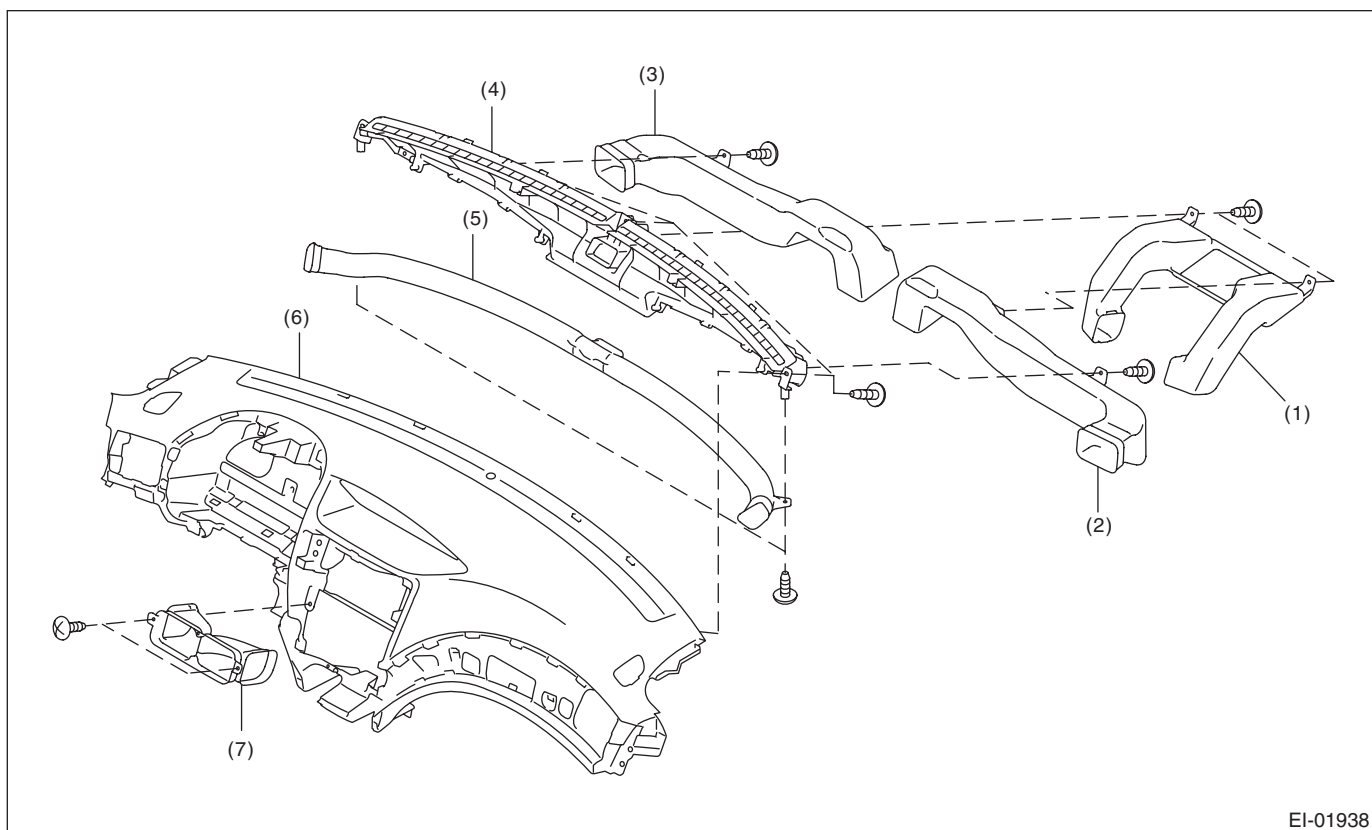

EI-01938

- | | | |
|-----------------------|---|----------------------------|
| (1) Center vent duct | (4) Defroster nozzle ASSY | (7) Center vent duct front |
| (2) Side vent duct LH | (5) Side defroster | |
| (3) Side vent duct RH | (6) Instrument panel pad and frame ASSY | |

19.INNER TRIM (5 DOOR MODEL)

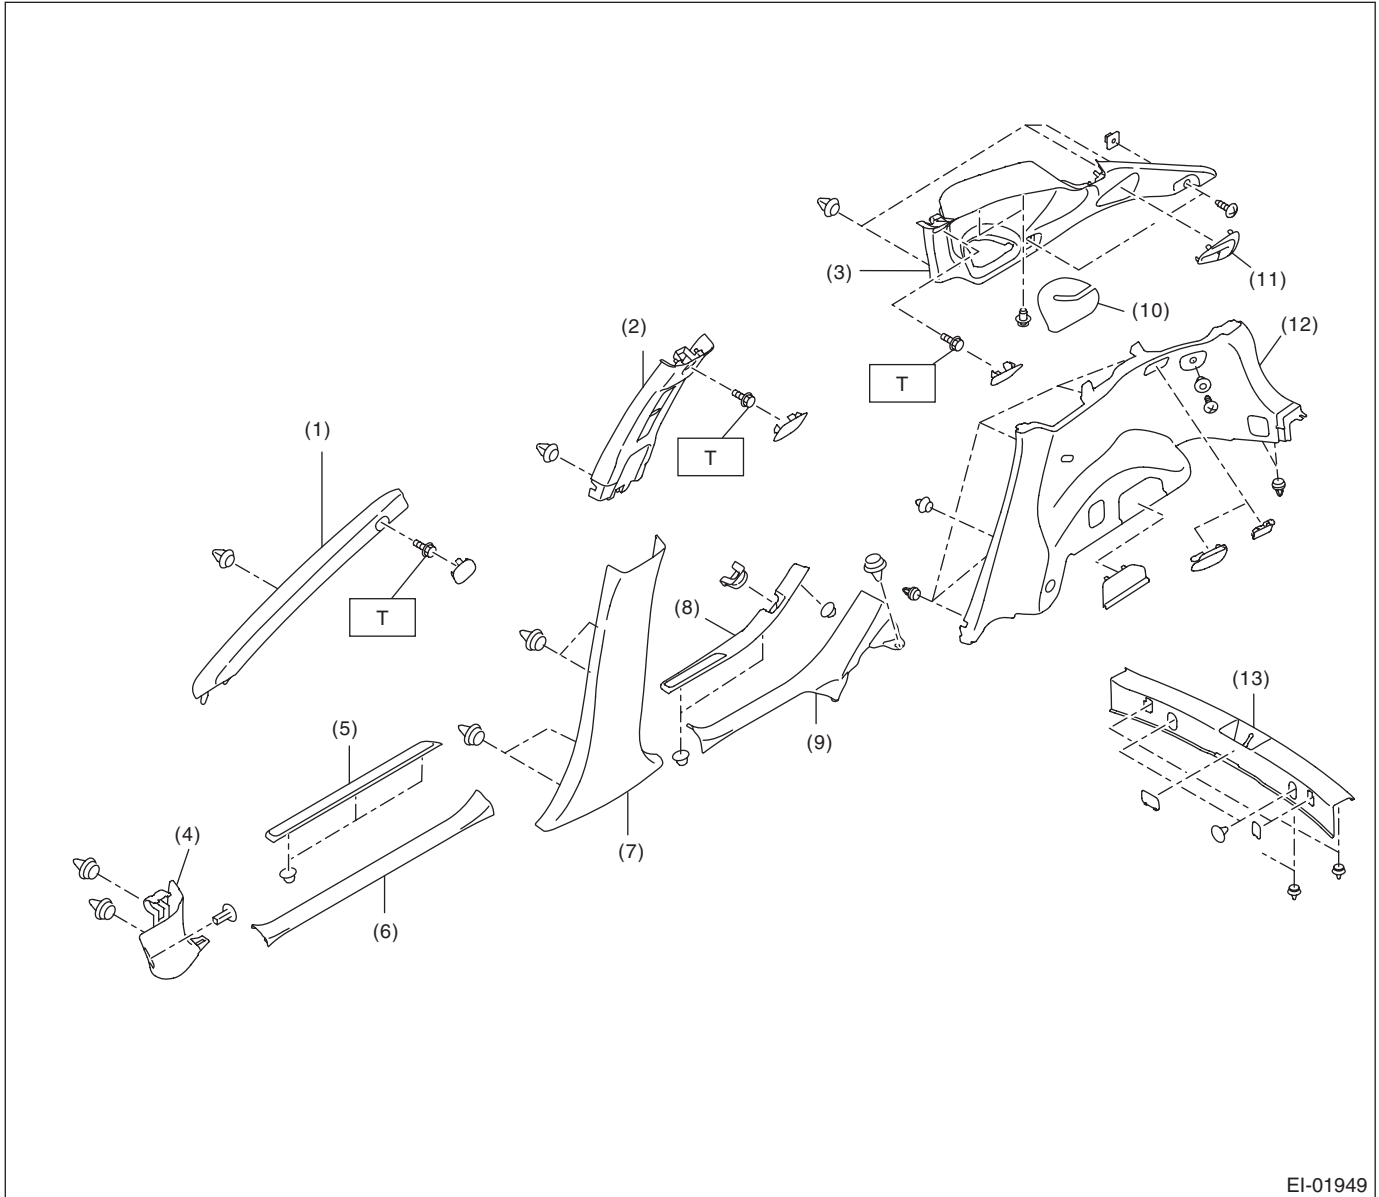

EI-01949

- | | |
|-------------------------------|------------------------------|
| (1) Front pillar upper trim | (7) Center pillar lower trim |
| (2) Center pillar upper trim | (8) Rear outside scuff plate |
| (3) Rear quarter upper trim | (9) Rear inside scuff plate |
| (4) Front pillar lower trim | (10) Side seat belt cover |
| (5) Front outside scuff plate | (11) Center seat belt cover |
| (6) Front inside scuff plate | |

- | |
|------------------------------|
| (12) Rear quarter lower trim |
| (13) Luggage room end cover |


Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM

20.INNER TRIM (4 DOOR MODEL)

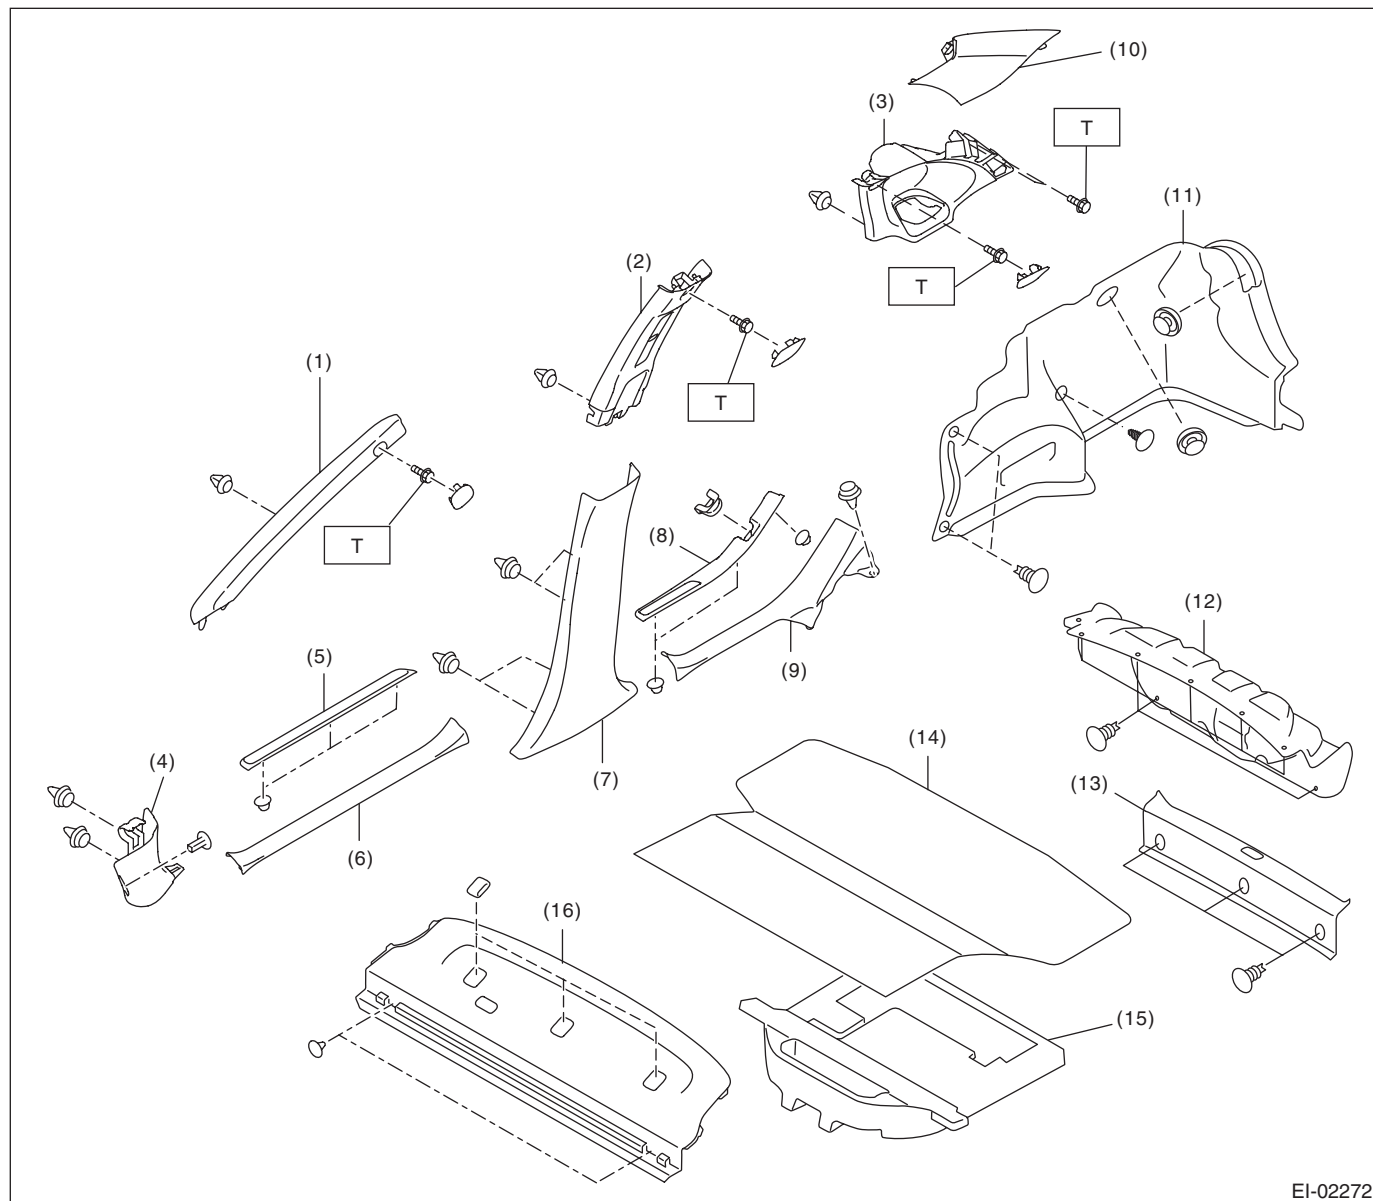

EI-02272


- (1) Front pillar upper trim
- (2) Center pillar upper trim
- (3) Quarter upper trim, front
- (4) Front pillar lower trim
- (5) Front outside scuff plate
- (6) Front inside scuff plate
- (7) Center pillar lower trim

- (8) Rear outside scuff plate
- (9) Rear inside scuff plate
- (10) Quarter upper trim, rear
- (11) Quarter lower trim
- (12) Trunk lid trim
- (13) Trunk room end cover

- (14) Trunk room mat
- (15) Sub trunk box
- (16) Rear shelf trim

Tightening torque: N·m (kgf-m, ft-lb)
T: 7.5 (0.76, 5.5)

21.REAR GATE TRIM

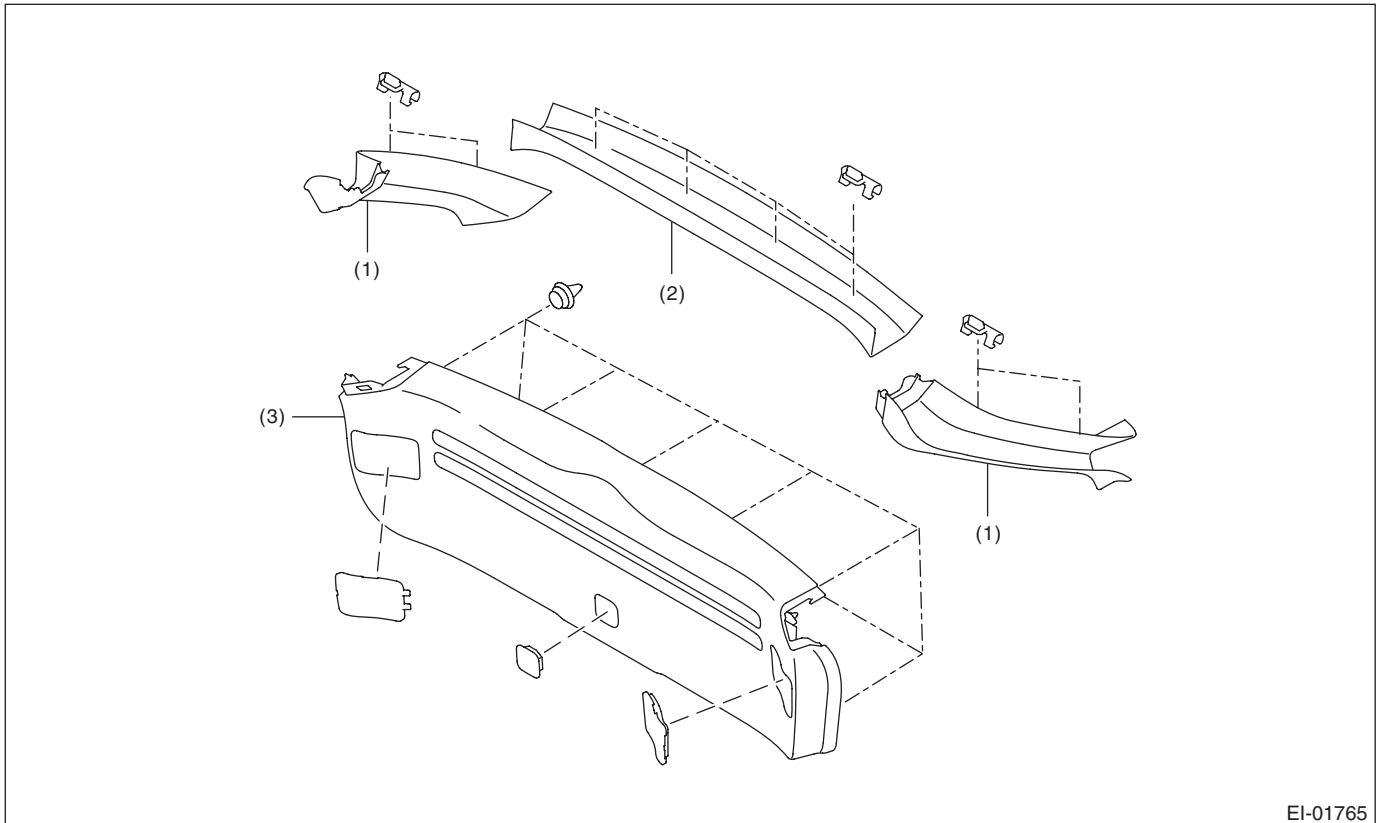


(1) Rear gate pillar trim

(2) Rear gate upper trim

(3) Rear gate lower trim

22.ROOF TRIM

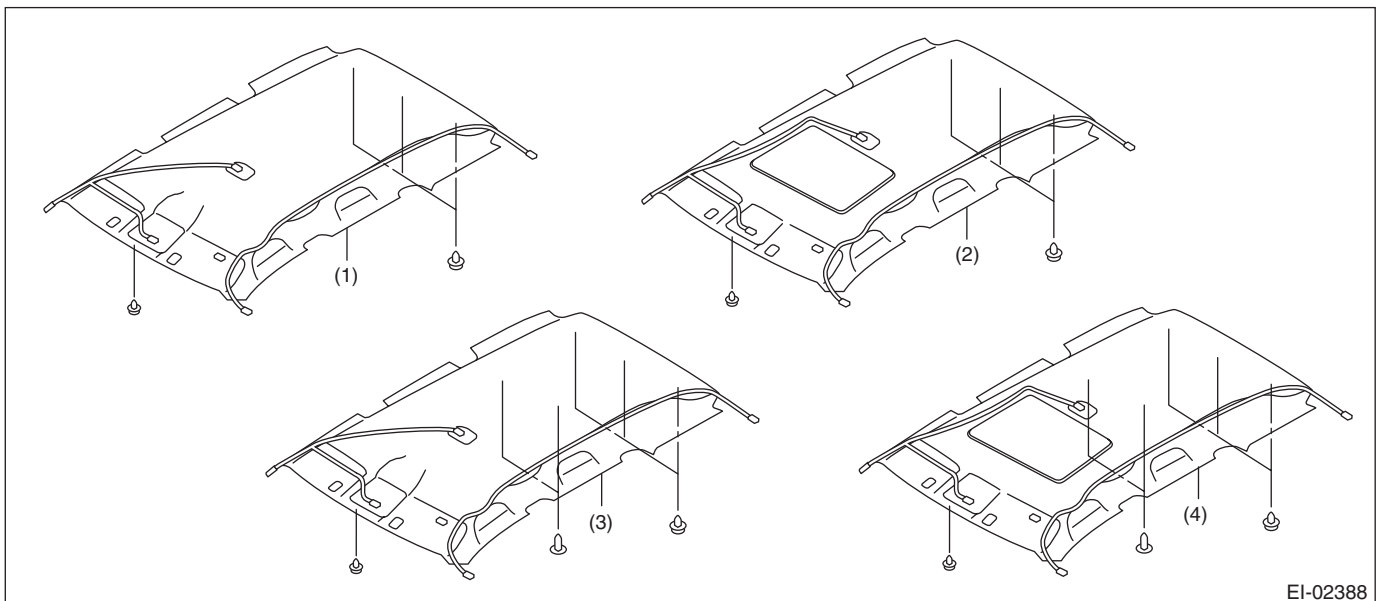

(1) Model without sunroof (5 door model)

(3) Model without sunroof (4 door model)


(2) Model with sunroof (5 door model)

(4) Model with sunroof (4 door model)

General Description

EXTERIOR/INTERIOR TRIM

23.ROOM INNER PARTS

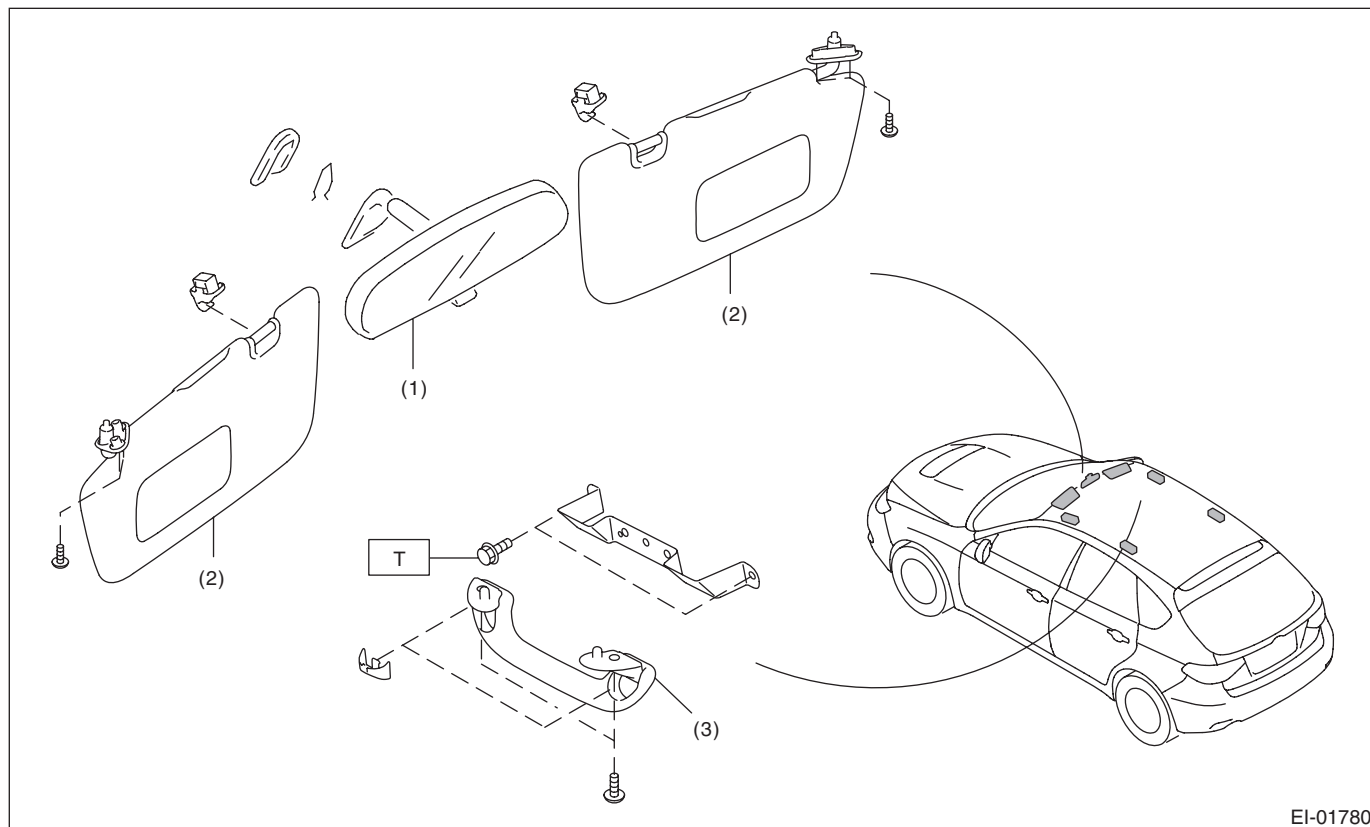

EI-01780

(1) Room mirror


(2) Sun visor

(3) Assist grip

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

24.HEAT SHIELD COVER

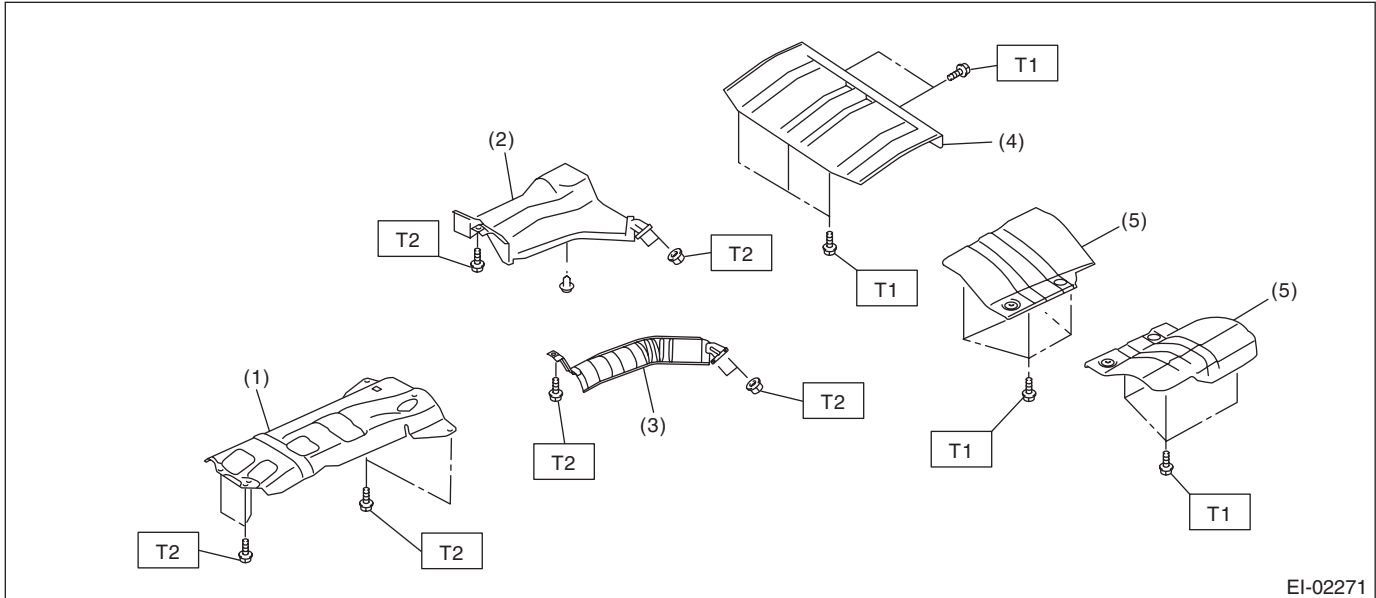

EI-02271

- | | |
|--|---|
| (1) Front heat shield cover | (4) Rear heat shield cover (5 door model) |
| (2) Center heat shield cover (turbo model) | (5) Rear heat shield cover (4 door model) |
| (3) Center heat shield cover (non-turbo model) | |

Tightening torque:N·m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 18 (1.84, 13.3)

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim. • KTC AP201-10A • KTC AP201-N • KTC AP203-10A • KTC AP20L-10B Or equivalent.
Clip clamp pliers	Used for removal of various clips and clamps. • KTC CCP-190 Or equivalent.