



30. Rear Gate Garnish

A: REMOVAL

- 1) Remove the rear gate trim. <Ref. to EI-67, REMOVAL, Rear Gate Trim.>
- 2) Remove the rear wiper motor. <Ref. to WW-19, Rear Wiper Motor.>
- 3) Remove the rear finisher light. <Ref. to LI-26, REMOVAL, Rear Finisher Light Assembly.>
- 4) Disconnect the connector.
 - Rear gate opener button harness connector
 - Rear request switch harness connector (Smart keyless models)
- 5) Remove the nuts.

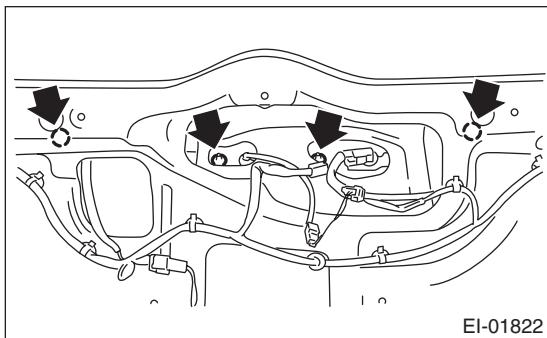

- 6) Remove the clips, and remove the rear gate garnish.

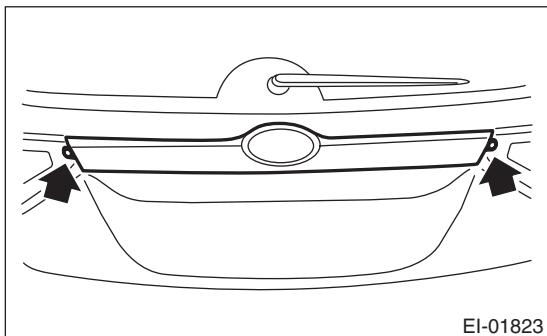

B: INSTALLATION

CAUTION:

Make sure that the harness grommet is securely installed.

If not properly installed, this may cause leaks.

Install in the reverse order of removal.

Tightening torque:

4.5 N·m (0.46 kgf·m, 3.3 ft-lb)