

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

54.Bulkhead Wiring Harness (In Compartment)

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B27	4	★	B-3		Blower Resistor (Manual A/C)
B31	6	★	C-1	AB1	Airbag wiring harness
B32	8	★	C-2		Turn signal and hazard unit
B36	28	★	B-4	i1	Instrument panel wiring harness
B38	28	★	B-2	i3	
B40	16	Black	C-2		Data link connector
B41	2	★	B-2		Power window circuit breaker
B52	24	★	B-2		Fuse & relay box (F/B)
B53	20	★	C-3		Joint connector
B54	35	★	C-3		TCM
B55	35	★	C-3		
B57	4	★	B-3		Power transistor (Auto A/C)
B65	4	★	C-2		Stop light & brake switch (4 door model)
		Black	C-2		Stop light & brake switch (5 door model)
B68	14	★	C-2		Roll connector
B70	18	★	C-2		Combination switch
B71	17	★	C-2		
B72	6	★	C-2		Ignition switch
B75	2	Green	B-4	B76	Delivery (test) mode connector
B76	2	Green	B-4	B75	
B77	6	★	B-3		Mode door actuator (Auto A/C)
B83	8	★	C-4		Joint connector
B87	2	★	B-4		Blower motor
B88	2	Brown	B-3		Evaporator sensor (Auto A/C)
	3	★	B-3		Evaporator sensor (Manual A/C)
B89	2	Black	B-5		Blower diode
B90	12	★	B-5	R50	Roof cord
B97	12	★	C-5	R1	Rear wiring harness RH
B98	20	★	C-5	R2	
B99	12	★	C-1	R3	Rear wiring harness LH
B106	2	★	C-2		Clutch start switch
B107	2	Blue	C-2		Clutch switch (cruise control)
B117	10	Gray	C-4		AT select lever
B122	8	★	C-4		Joint connector
B123	2	Black	C-1	B124	Key lock
B124	2	Black	C-1	B123	
B134	34	★	C-4		ECM
B135	35	★	C-4		
B136	35	★	C-4		
B137	31	★	C-4		
B138	8	★	C-4		Joint connector
B152	10	Gray	B-2		Fuse & relay box (F/B)
B158	8	★	B-2		
B159	9	Brown	B-2		
B162	2	★	B-2		
B163	6	★	C-4		Intake door actuator

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B177	2	★	B-5		Wiper deicer
B180	24	★	B-2		Remote engine start CM
B181	2	★	B-2	B182	Short connector
B182	2	★	C-2	B181	
B220	40	★	B-4		Fuse (Relay block)
					A/F, oxygen sensor relay
					Fuel pump relay
					IG relay
					Main relay
					Electronic throttle control relay
B224	2	★	C-2		Key illumination
B225	40	Black	C-2		Fuse (Relay block)
					Starter relay
					Front fog light relay
					Power window relay
					Wiper deicer relay
					Tail & Illumination relay
					Seat heater relay
B230	4	★	D-4		Yaw rate & G sensor
B231	4	Black	C-2		Steering angle sensor
B239	6	★	B-3		Air mix door actuator (Auto A/C)
B279	30	★	C-3		Body integrated unit
B280	26	Dark gray	C-3		
B281	28	★	C-3		
B315	6	★	C-3		Accelerator pedal position sensor
B318	4	★	B-1		VDC OFF switch
B350	4	★	C-2		Key warning switch & key lock solenoid
B358	2	★	C-4		AT select lever illumination
B363	2	Green	C-1	B364	Test mode sub connector
B364	2	Green	C-1	B363	
B367	8	★	C-2		Impact sensor
B386	7	★	B-4		Blower motor relay
B415	2	Black	B-2		Immobilizer antenna
B434	5	Pink	D-1		Multi joint connector
B435	5	Brown	D-1		
B436	5	Yellow	D-1		
B437	5	Blue	D-1		
B438	5	Gray	D-1		
B439	5	Green	D-1		
B440	5	Orange	D-1		
B441	5	★	D-1		
B442	5	Black	D-2		
B443	5	Red	D-2		
B444	5	Light green	D-2		
B445	5	Violet	D-2		


★ : White or natural color

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB1	6	★	C-1	B31	Bulkhead wiring harness
AB2	4	Yellow	C-2	AB7	Driver's airbag module
AB6	30	Yellow	C-4		Airbag CM
AB9	4	Yellow	C-4		Passenger's airbag module

★ : White or natural color

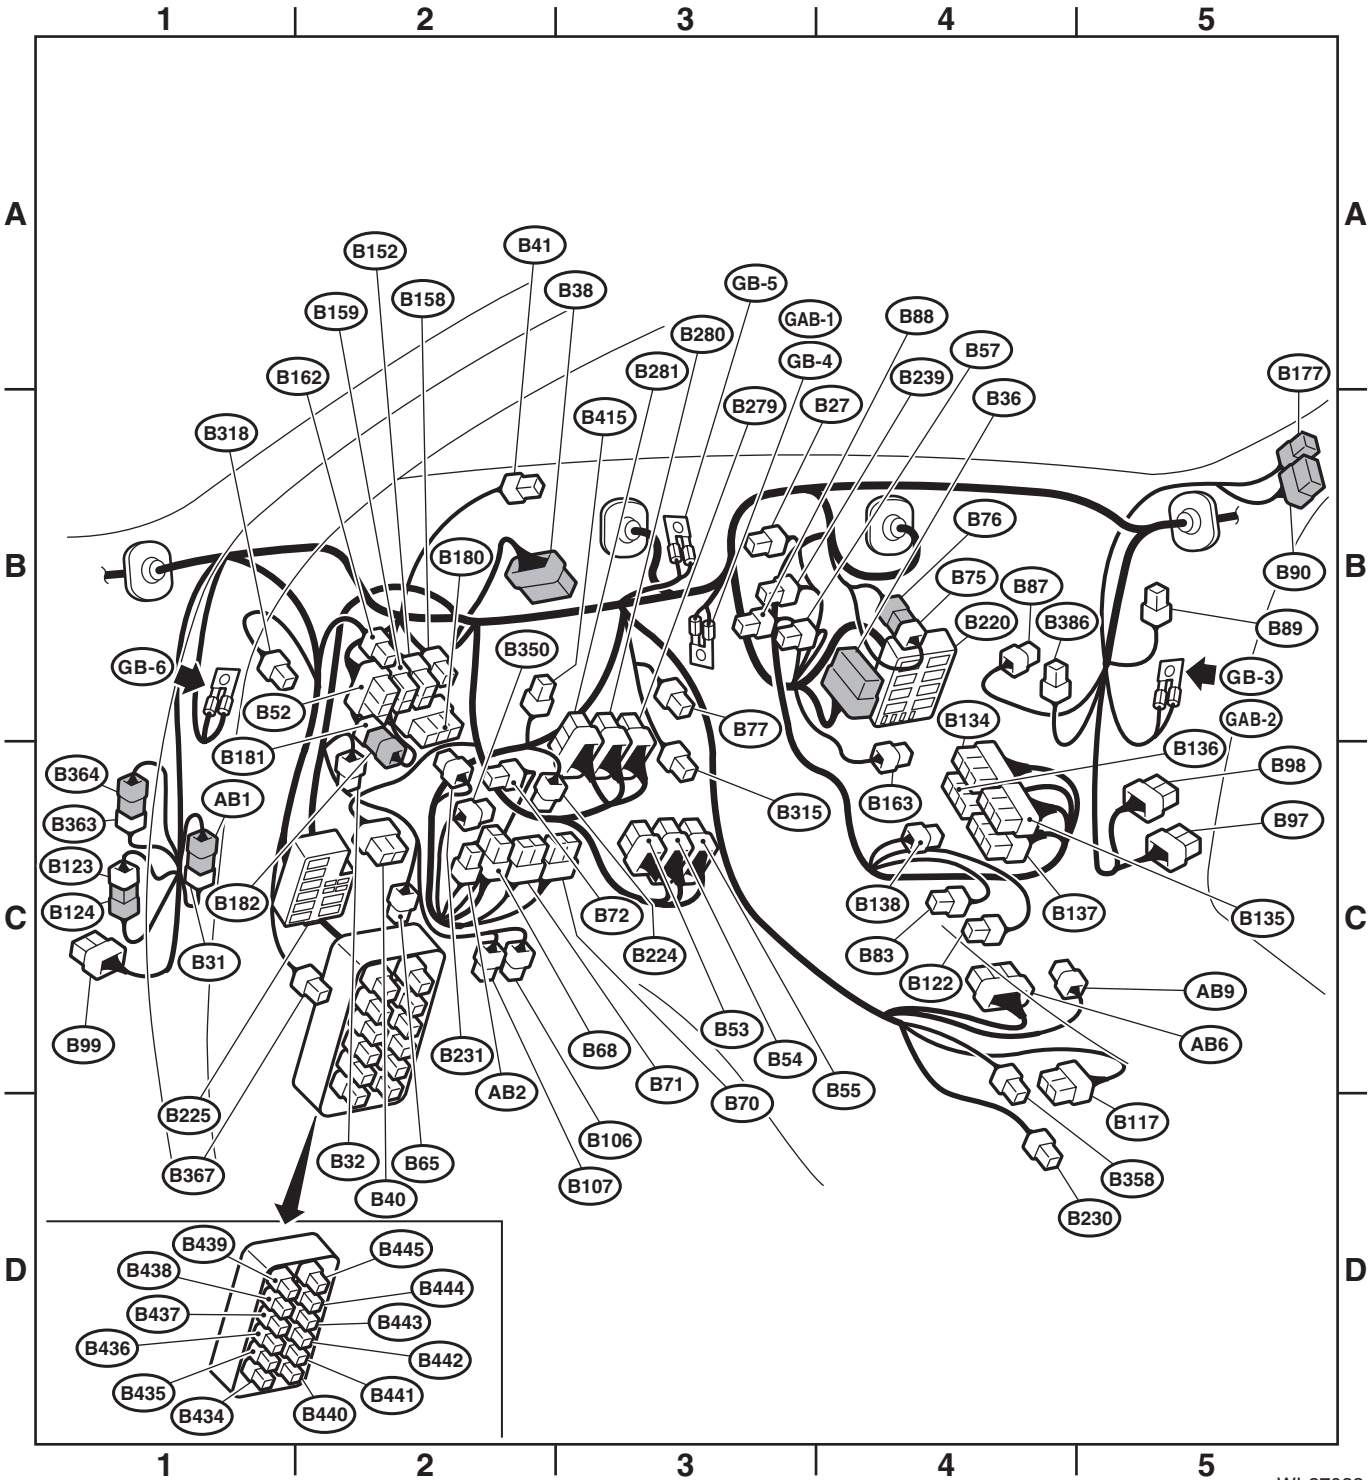

WI-27033