


9. Outer Mirror


A: REPLACEMENT

CAUTION:

- When removing the mirror, be careful not to damage the back surface of mirror with a flat tip screwdriver.
 - When installing the mirror, insert the fitting area securely.
- 1) Face the mirror upward.
 - 2) Use a flat tip screwdriver to remove clips (A).
 - 3) Lift the lower mirror up to remove hooks (B).

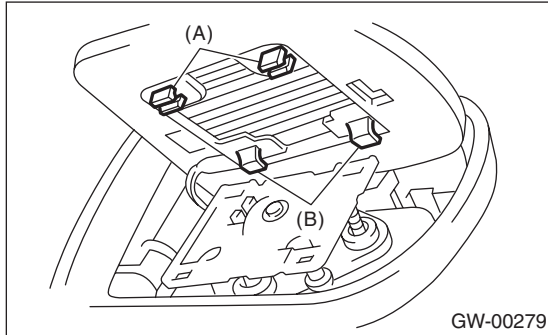

- 4) Disconnect the mirror heater connector from side of the mirror. (Model with mirror heater)

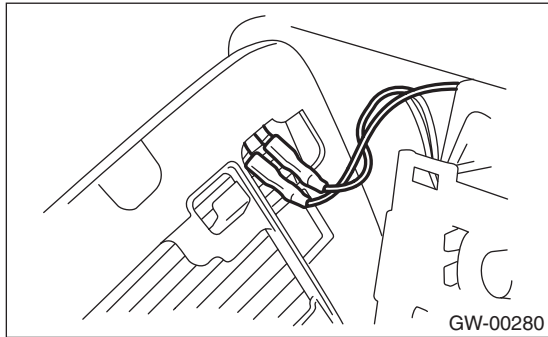

- 5) Catch the hooks (B) and install clips (A).

