


11. Rear Washer

A: REMOVAL

- 1) Remove the high-mounted stop light. <Ref. to LI-29, REMOVAL, High-mounted Stop Light.>
- 2) Remove the washer hose from the washer nozzle.
- 3) Push the claw of the nozzle from the reverse side of roof spoiler with a flat tip screwdriver or equivalent, and remove the washer nozzle.

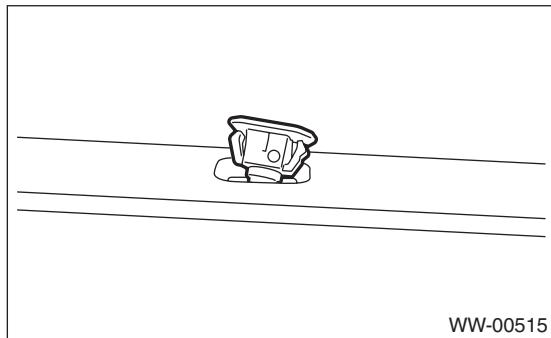

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

1. VISUAL CHECK

Check the following items, if a failure is found replace the parts.

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.


2. SPRAY POSITION CHECK

- 1) Turn the wiper switch to OFF position.
- 2) While the vehicle is at a standstill, make sure that the washer injection position is as shown in the figure.
- 3) After check, if the spray position is largely different from the position, replace with a new washer nozzle.

Spray position:

A: 140 mm (5.5 in)

B: 70°

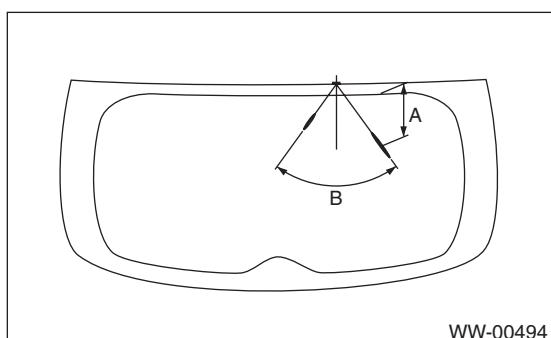

ENTERTAINMENT

ET

	Page
1. General Description	2
2. Audio System	3
3. Navigation System	4
4. Audio	6
5. Front Speaker	7
6. Tweeter	8
7. Rear Speaker	9
8. Antenna	10
9. Steering Satellite Switch	11
10. Steering Switch	13
11. Navigation Body	14
12. GPS Antenna	15
13. Front Accessory Power Supply Socket	16
14. Rear Accessory Power Supply Socket	17
15. AUX Input Terminal	18