


## 8. Front Washer Nozzle

### A: REMOVAL

- 1) Remove the washer hose from the washer nozzle.
- 2) Open the clips on the underside of the front hood with a thin screwdriver or other tool, and remove the washer nozzle.

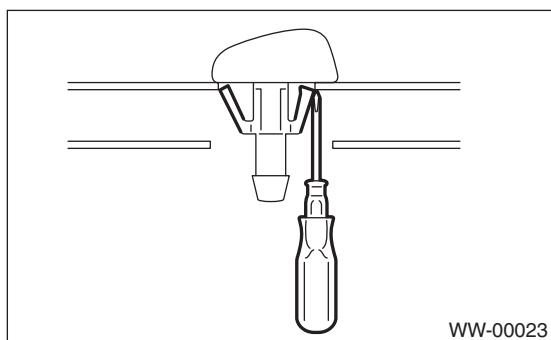

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

#### 1. VISUAL CHECK

Check the following items, if a failure is found replace the parts.

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

#### 2. SPRAY POSITION CHECK

- 1) Turn the wiper switch to OFF position.
- 2) While the vehicle is at a standstill, make sure that the washer injection position is as shown in the figure.
- 3) After check, if the spray position is largely different from the position, replace with a new washer nozzle.

##### *Spray position:*

**A: 250 mm (9.84 in)**

**B: 315 mm (12.4 in)**

