



3. Power Supply Circuit

A: WIRING DIAGRAM

- Engine room side

P-SUP-01

P-SUP-01

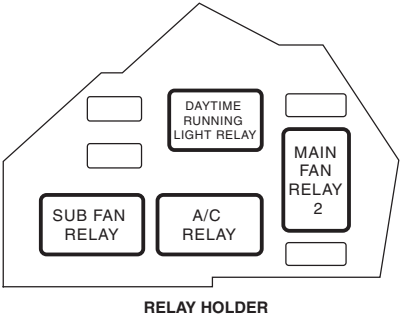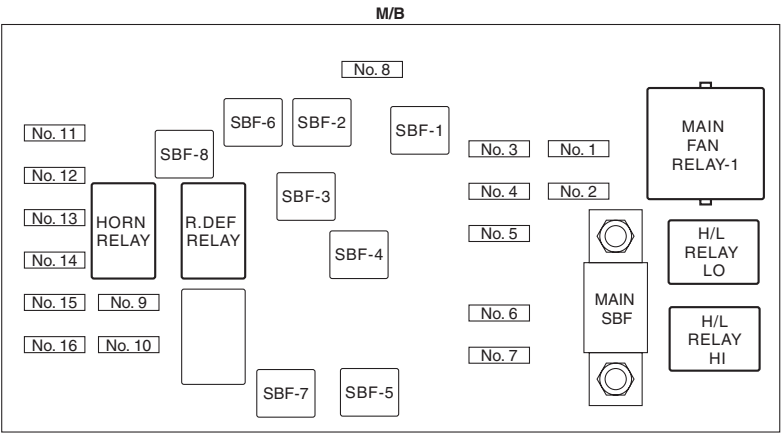




Power Supply Circuit

WIRING SYSTEM


- Passenger room side

P-SUP-02

P-SUP-02

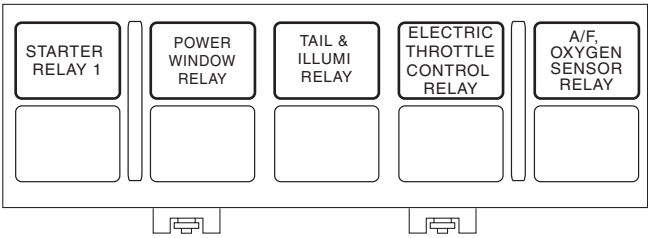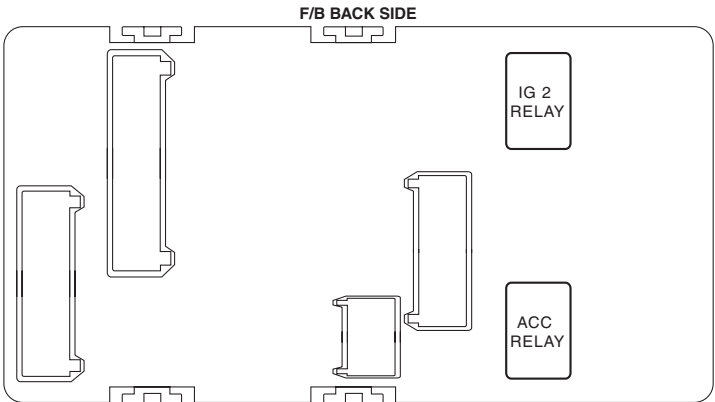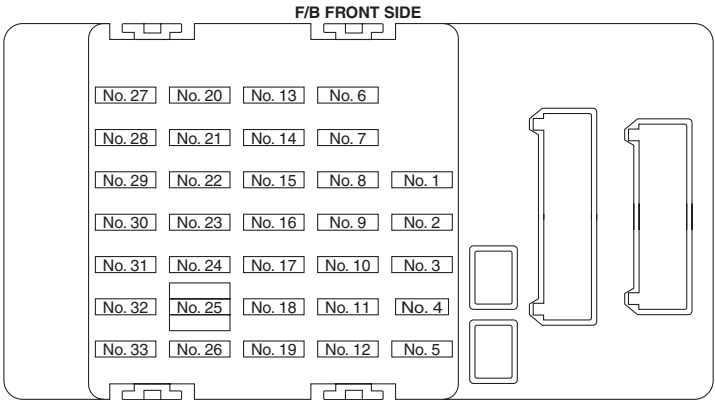

RELAY HOLDER


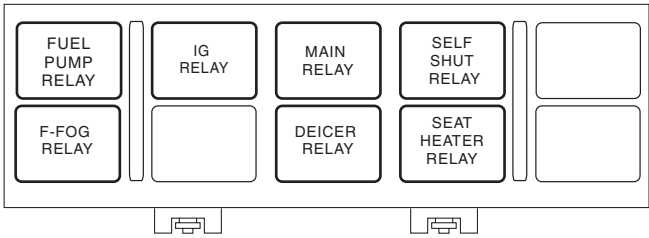


RELAY HOLDER

WI-34135

Power Supply Circuit

WIRING SYSTEM

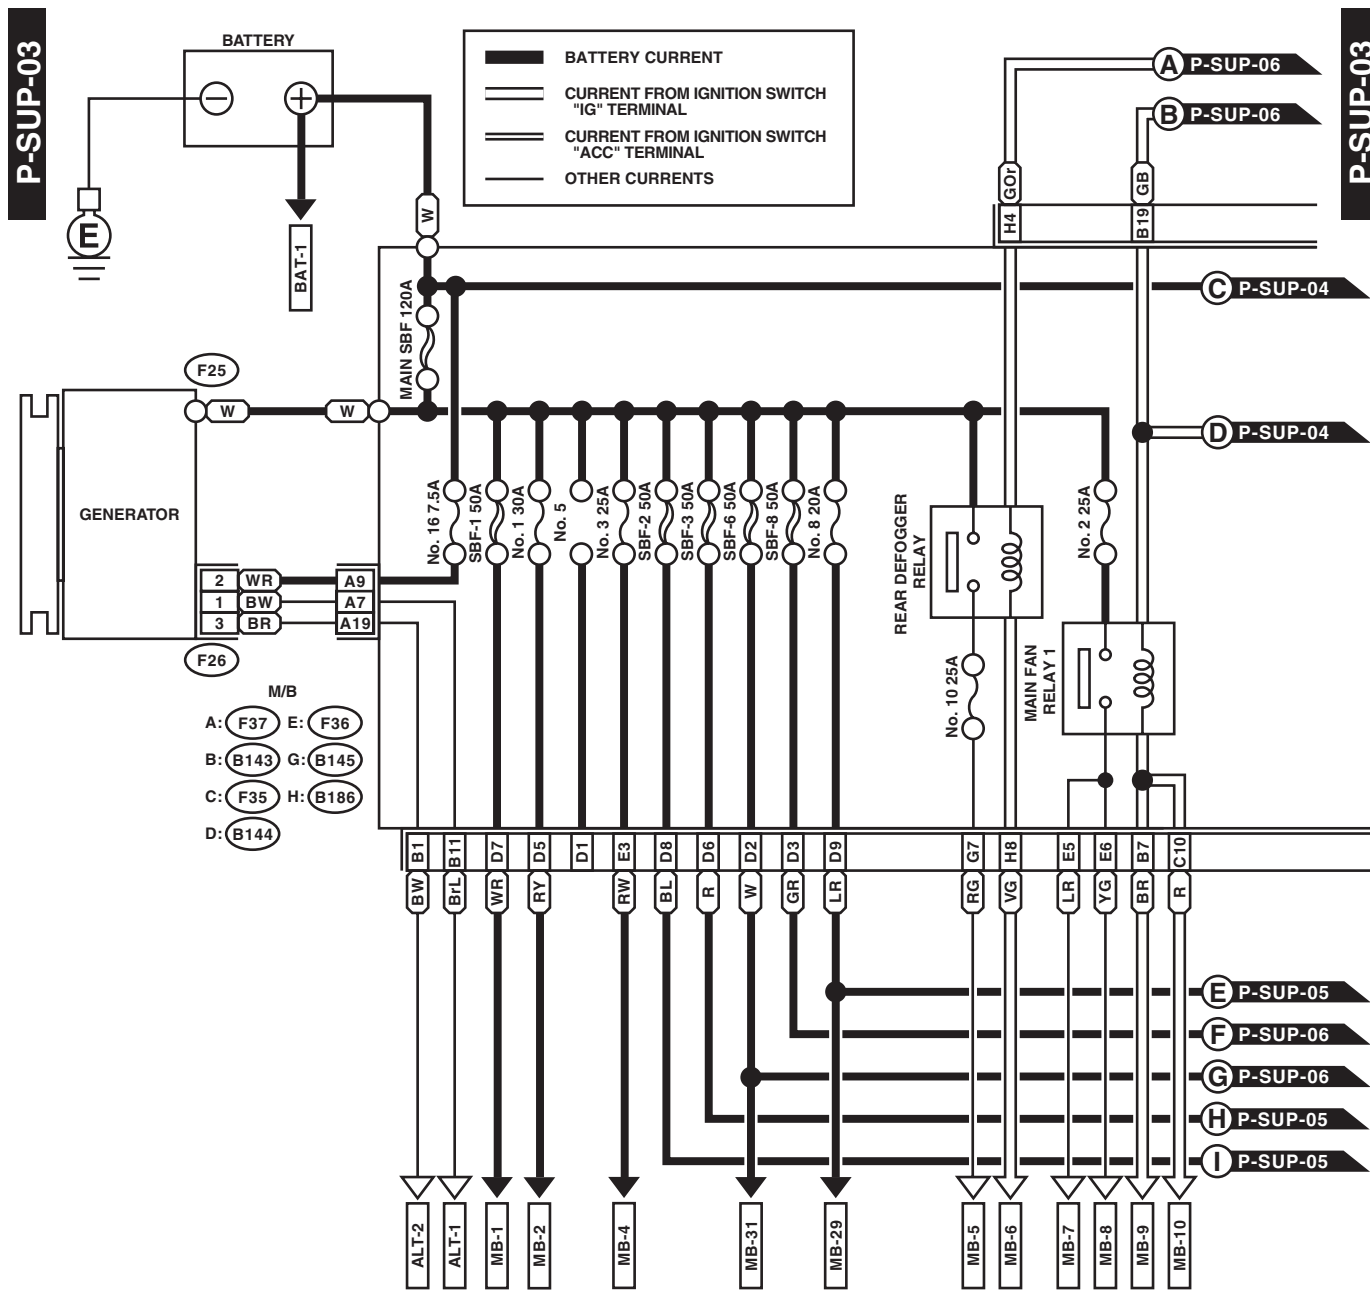

A: F37




G: B145 (BROWN)




E: F36




H: B186



D: B144 (BROWN)



C: F35 (BLUE)




B: B143



WI-34136


Power Supply Circuit

WIRING SYSTEM

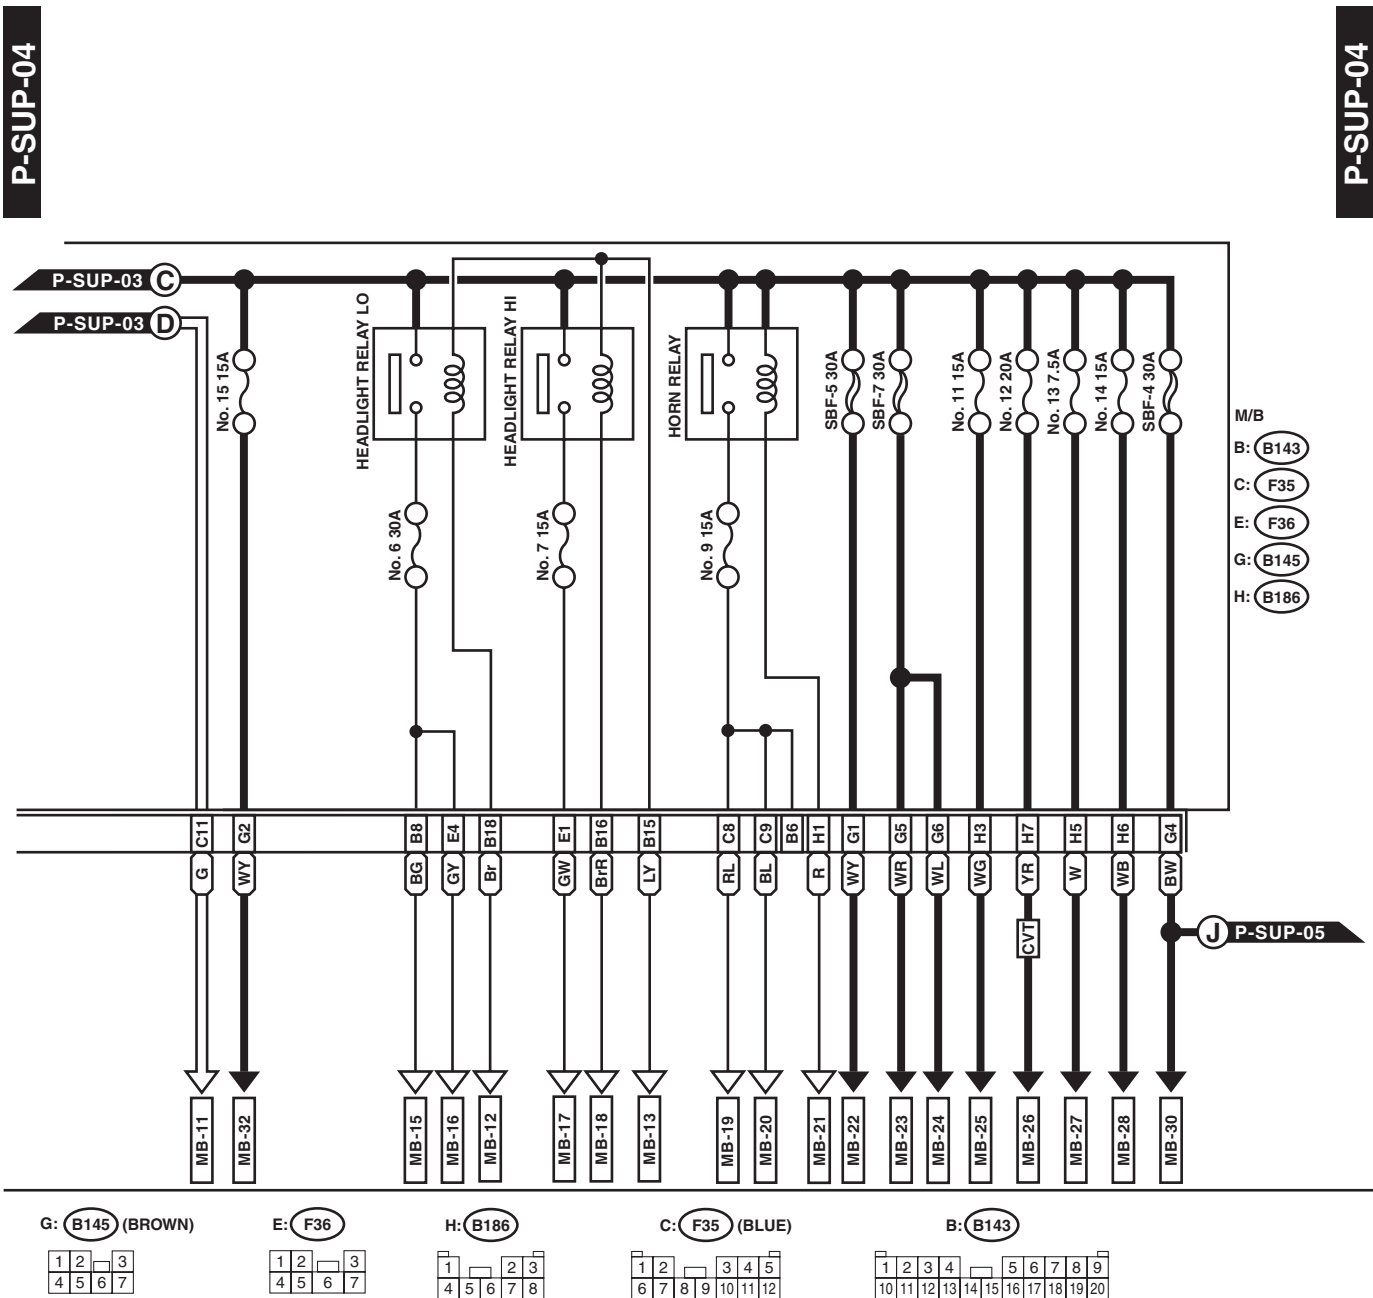


WI-34137

WIRING SYSTEM



Power Supply Circuit

WIRING SYSTEM

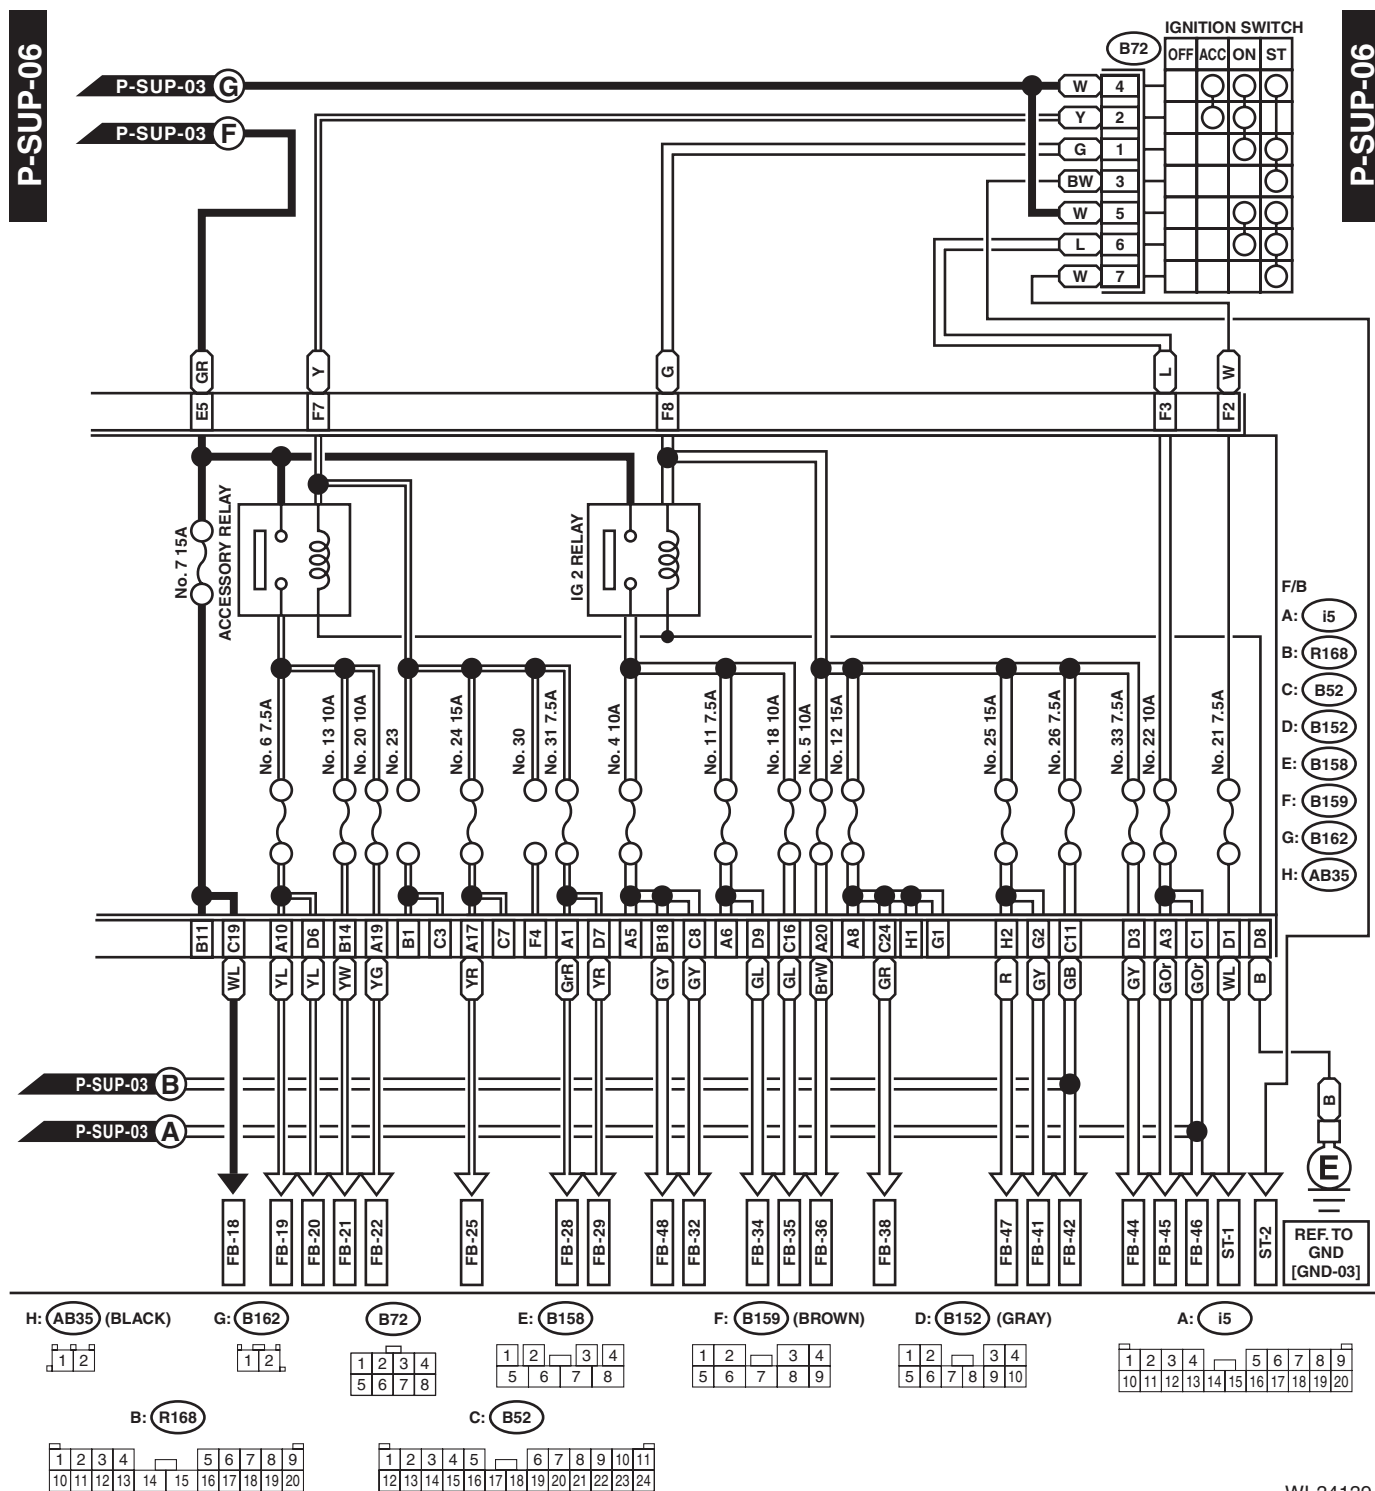

WI-34139

Power Supply Circuit

WIRING SYSTEM

No.	Load
MB-1	VDC CM
MB-2	VDC CM
MB-4	Sub fan relay
MB-5	Mirror heater LH
	Mirror heater RH
	Rear defogger
	A/C control panel
MB-6	Body integrated unit
MB-7	Main fan relay 2
MB-8	Main fan motor
MB-9	ECM
MB-10	Main fan relay 2
MB-11	Main fan relay 2
MB-12	Body integrated unit
MB-13	Body integrated unit
MB-15	Front fog light relay
MB-16	Front combination light LH
	Front combination light RH
MB-17	Daytime running light relay
MB-18	Body integrated unit
MB-19	Horn
MB-20	Horn
MB-21	Horn switch
	Body integrated unit
MB-22	A/F, oxygen sensor relay
MB-23	Main relay
	IG relay
MB-24	Electronic throttle control relay
MB-25	Fuel pump relay
MB-26	TCM
	Self shut relay
MB-27	ECM
	Data link connector
MB-28	Key warning switch
	Turn signal and hazard unit
	Body integrated unit
MB-29	Spot map light
	Room light
	Body integrated unit
	Immobilizer antenna
MB-30	Power window circuit breaker
MB-31	Wiper relay
MB-32	Tail & Illumination relay
	Daytime running light relay
ALT-1	Combination meter
ALT-2	ECM
ST-1	Starter relay 1
	Clutch start switch
ST-2	Starter relay 1
FB-3	Stop light and brake switch

No.	Load
FB-4	Wiper deicer relay
FB-5	Seat heater relay
FB-6	Body integrated unit
FB-8	Blower motor relay
FB-9	Front fog light relay
FB-10	Audio
	MFD
	Navigation unit
FB-12	Keyless entry CM
	TPMS & keyless entry CM
	Trunk room light (4 door model)
	Luggage room light (5 door model)
FB-18	Combination meter
	Body integrated unit
	Impact sensor
	Air mix door actuator LH (with left/right independent air conditioner)
	Air mix door actuator RH (with left/right independent air conditioner)
	Mode door actuator
	Air mix door actuator (without left/right independent air conditioner)
	Security CM
	A/C control panel
FB-19	Remote control mirror switch
FB-20	Seat heater relay
	Rear view mirror
FB-21	Rear accessory power supply socket
FB-22	Front accessory power supply socket
FB-25	Audio
	Navigation unit
FB-28	A/C control panel
FB-29	Body integrated unit
FB-32	Clutch switch
	Impact sensor
	Data link connector
	Stop light and brake switch
	Wiper deicer relay
	Sunroof motor assembly
	Sunroof switch
	Sunroof switch (tilt)
FB-34	Turn signal and hazard unit
FB-35	Inhibitor switch
	Back-up light switch
	Auto headlight beam leveler CM
FB-36	Combination meter
	MFD

Power Supply Circuit

WIRING SYSTEM

No.	Load
FB-38	ECM
	TCM
	Body integrated unit
	Fuel pump relay
FB-41	Airbag CM
FB-42	Power window relay
	Wiper relay
FB-44	VDC CM
	Steering angle sensor
	Power steering CM
FB-45	A/C control panel
FB-46	A/C relay
	Sub fan relay
	Pressure switch
	Blower motor relay
FB-47	Occupant detection control module
FB-48	TPMS & keyless entry CM
BAT-1	Power steering CM