

Rear Wiring Harness

WIRING SYSTEM

59.Rear Wiring Harness

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	20	★	B-2	B97	Bulkhead wiring harness
R2	20	★	B-2	B98	
R3	20	★	C-3	B99	
R4	1	Black	B-4		Parking brake switch
R9	3	★	C-4		Front door switch LH
R10	8	★	B-4	D22	Rear door cord LH
R12	3	★	B-3		Front door switch RH
R13	8	★	B-3	D28	Rear door cord RH
R32	2	★	B-4		Rear accessory power supply socket
R41	4	★	C-4		Seat heater LH
R43	8	★	B-4		Seat heater switch
R44	4	★	B-3		Seat heater RH
R50	17	★	B-2	B90	Bulkhead wiring harness
R52	3	★	A-4		Room light
R55	8	★	B-4		Sunroof motor assembly
R56	2	★	B-3		Spot map light (with sunroof)
	6	★	B-3		Spot map light (without sunroof)
R62	6	★	B-3		Spot map light (with sunroof)
R64	3	★	A-3		Spot map light diode (with sunroof)
R81	19	Black	C-3	R82	Rear wiring harness RH
R82	19	Black	B-3	R81	Rear wiring harness LH
R98	24	★	B-2	i53	Instrument panel wiring harness
R107	2	★	C-4		Seat belt switch LH
R123	2	★	C-3	AB62	Front door cord LH
R124	2	★	B-2	AB63	Front door cord RH
R128	5	★	B-4		Sunroof switch
R139	3	★	A-3		Rear view mirror
R167	24	★	C-3	i102	Instrument panel wiring harness
R168	20	★	C-3		F/B
R187	5	Black	A-3		Sunroof switch (tilt)
R284	6	★	B-4		AUX input terminal
R382	10	★	B-2	i195	Instrument panel wiring harness

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	15	Yellow	C-2		Airbag CM
AB18	15	Yellow	C-2		
AB19	4	Yellow	C-3		Side airbag module LH
AB21	2	Black	C-4		Pretensioner LH
AB23	4	Yellow	C-4		Side airbag sensor LH
AB24	4	Yellow	B-2		Side airbag module RH
AB26	2	Black	B-2		Pretensioner RH
AB28	4	Yellow	B-2		Side airbag sensor RH
AB35	2	Black	C-3		F/B
AB53	3	Dark gray	B-2		Occupant detection control module

Rear Wiring Harness

WIRING SYSTEM

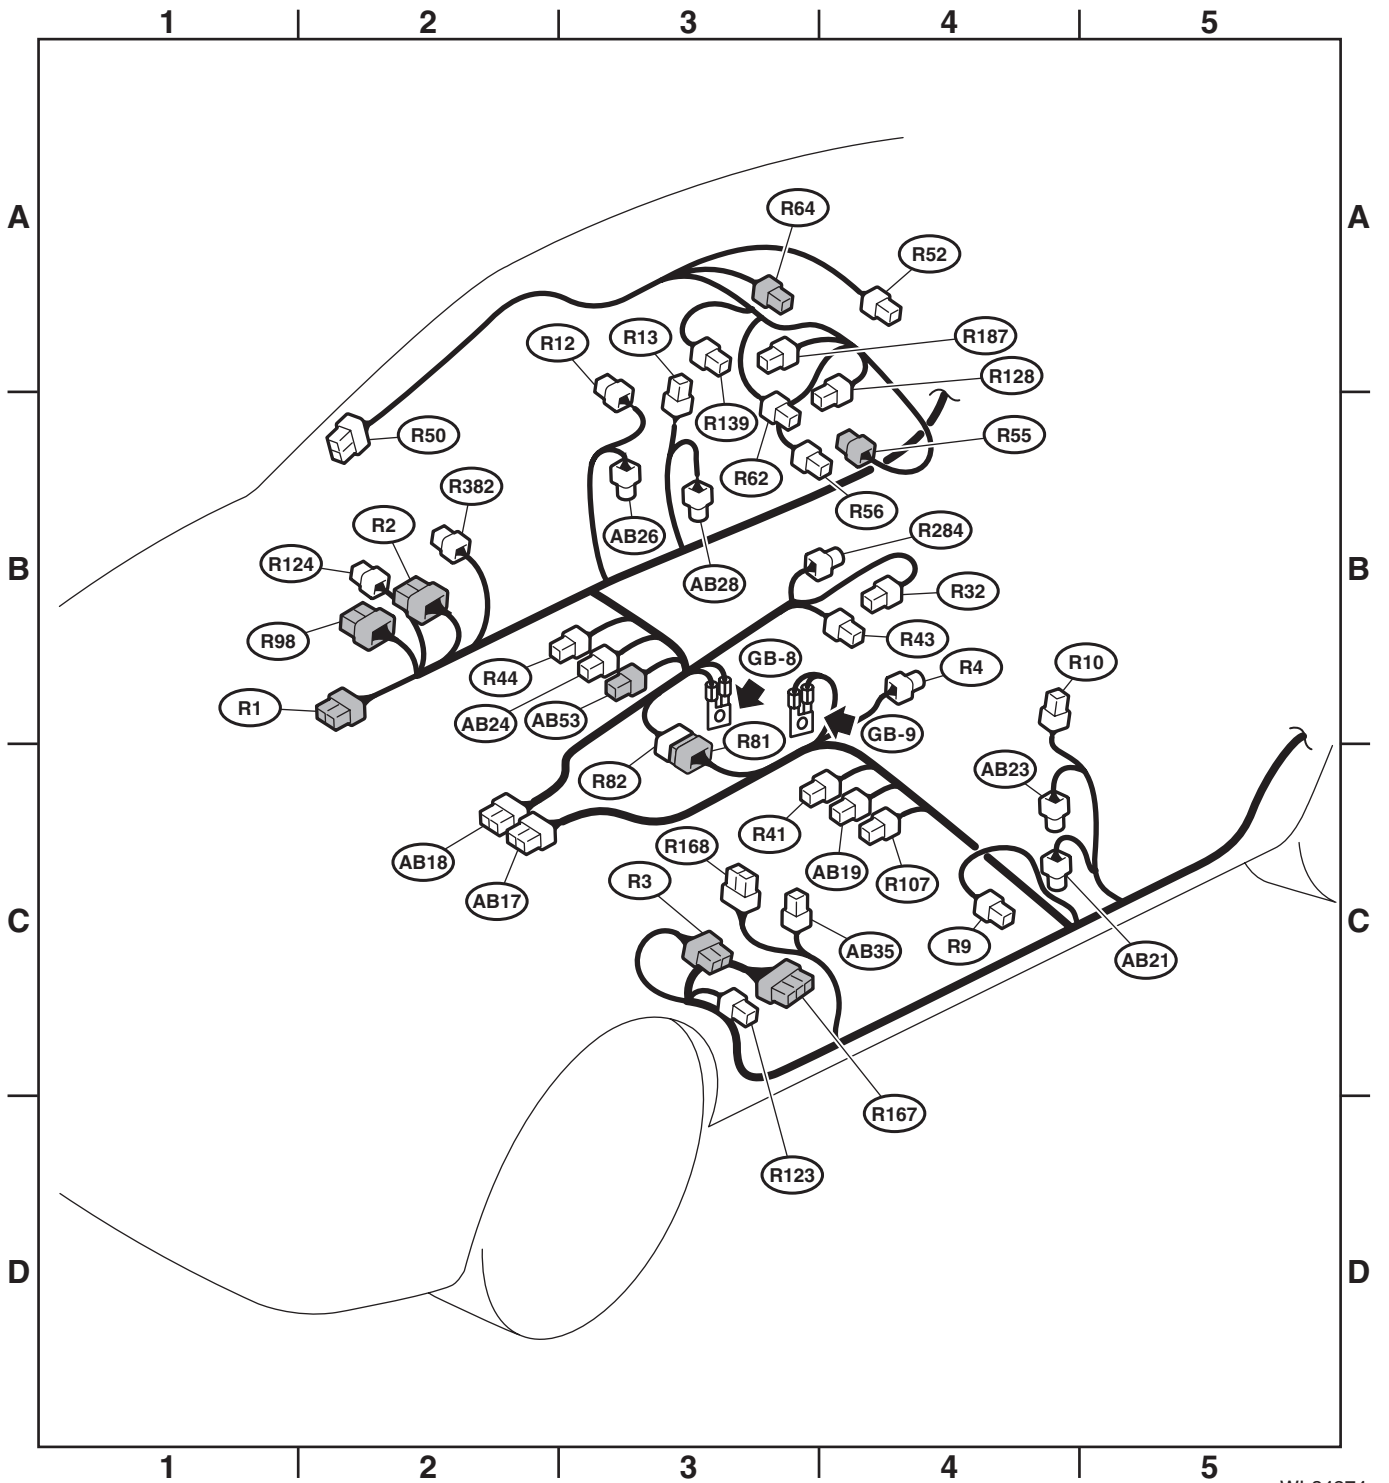

WI-34274