


1. General Description

A: SPECIFICATION

Model		Rear disc brake
Type		Mechanical, drum in disc rear brakes
Effective drum diameter	mm (in)	170 (6.69)
Lining dimensions (Length x Width x Thickness)	mm (in)	147.7 x 30.0 x 3.5 (5.81 x 1.181 x 0.14)
Clearance adjustment		Manual adjustment
Lever stroke	Notches/N (kgf, lbf)	7 — 8/200 (20.4, 45)


B: COMPONENT

1. PARKING BRAKE (REAR DISC BRAKE)

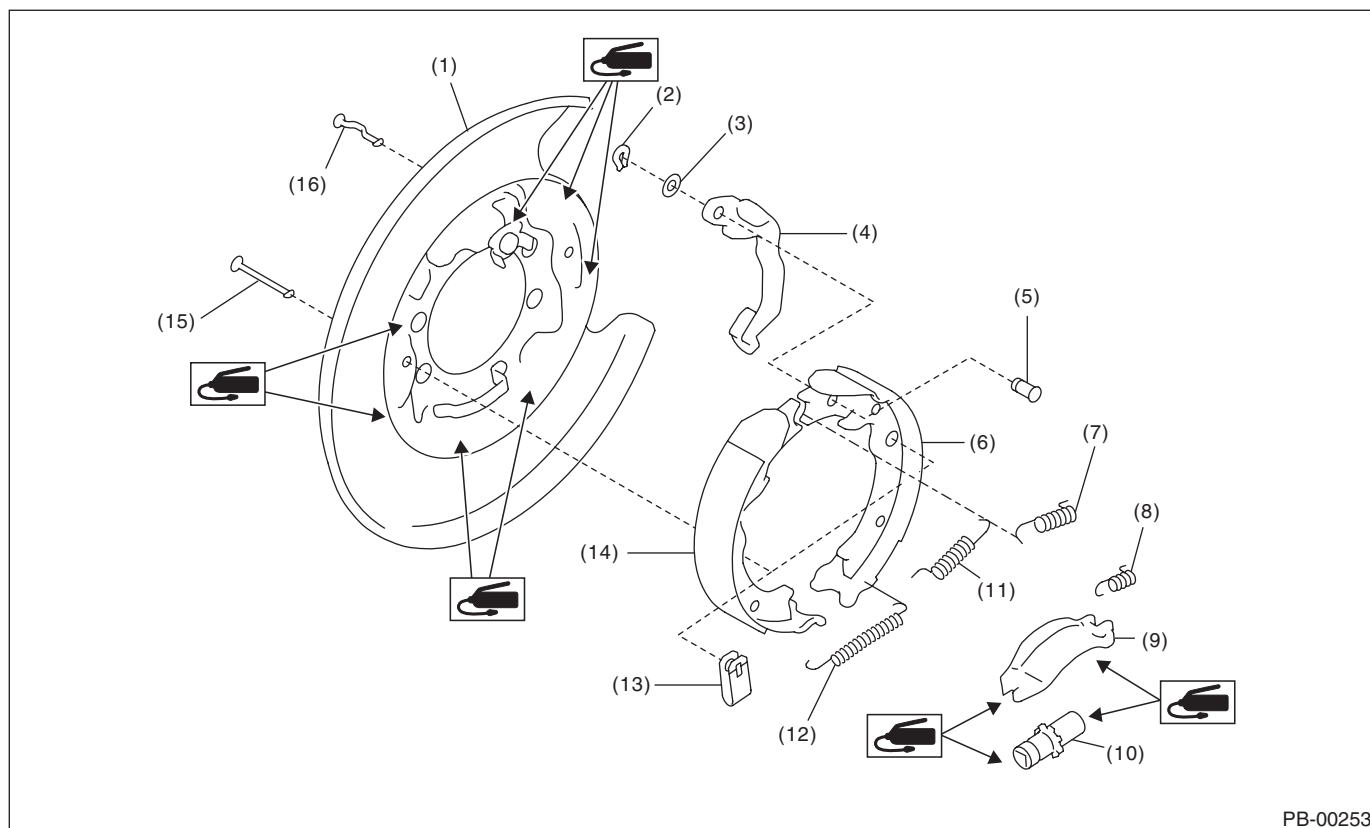

- | | | |
|------------------------------------|------------------------------------|-------------------------------------|
| (1) Back plate - rear brake | (7) Spring - secondary shoe return | (13) Cup - shoe hold-down |
| (2) Retainer - rear brake | (8) Spring - strut | (14) Parking brake shoe (primary) |
| (3) Spring washer - rear brake | (9) Strut - brake | (15) Pin - primary shoe hold-down |
| (4) Parking lever - rear | (10) Adjuster ASSY - rear brake | (16) Pin - secondary shoe hold-down |
| (5) Pin - parking lever | (11) Spring - primary shoe return | |
| (6) Parking brake shoe (secondary) | (12) Spring - adjuster | |

2. PARKING BRAKE LEVER & CABLE

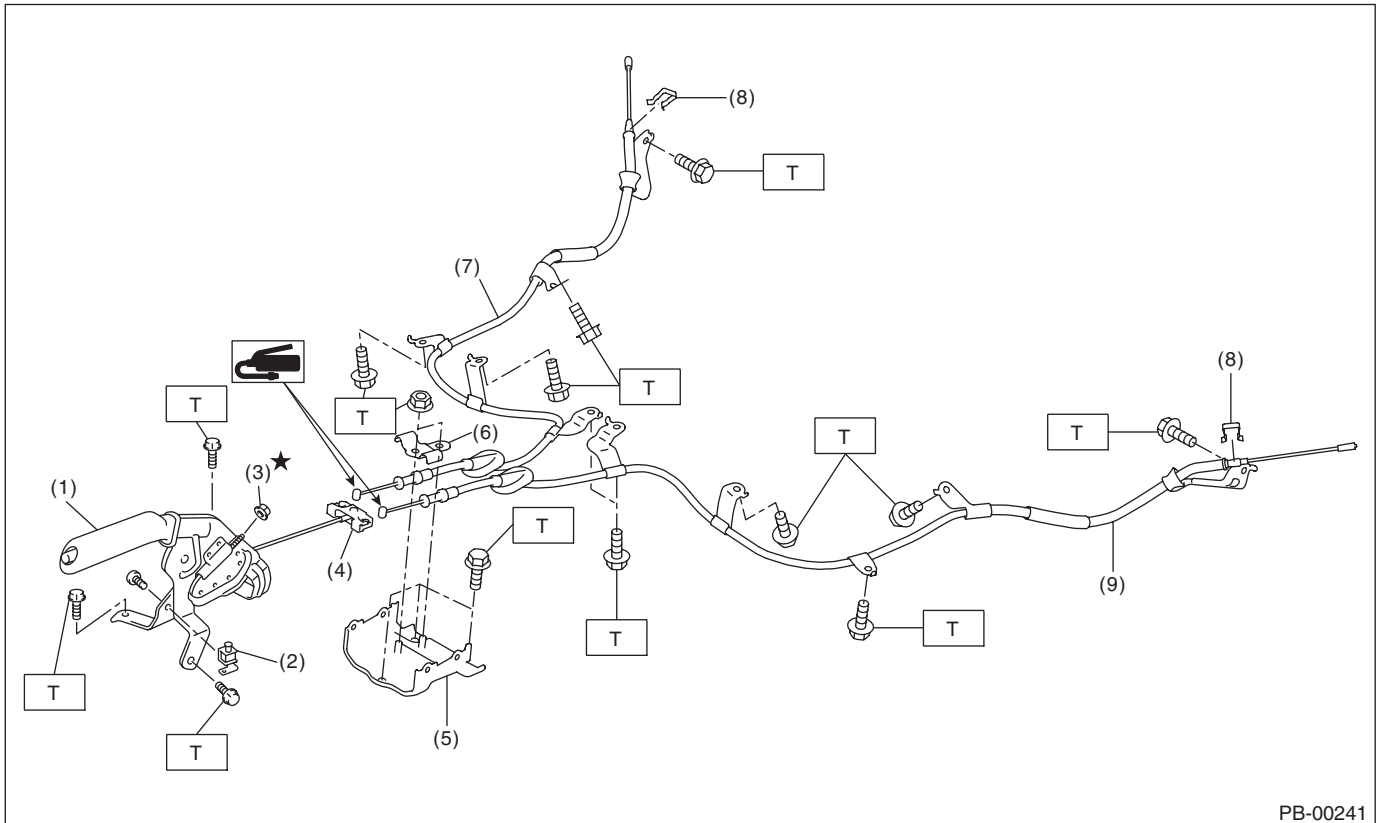

- | | | |
|--------------------------------------|-----------------------------------|-----------------------------------|
| (1) Lever assembly - hand brake | (5) Bracket | (9) Cable ASSY - parking brake LH |
| (2) Switch ASSY - hand brake | (6) Clamp A - hand brake cable | |
| (3) Adjusting nut (self-locking nut) | (7) Cable ASSY - parking brake RH | |
| (4) Equalizer | (8) Clamp B - hand brake cable | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 18 (1.84, 13.3)

C: CAUTION

- Wear appropriate work clothing, including a helmet, protective goggles and protective shoes when performing any work.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Use SUBARU genuine grease etc. or equivalent. Do not mix grease etc. of different grades or manufacturers.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Make sure grease does not come into contact with the parking shoes.

D: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.